INSTRUCTION MANUAL

4200

DIGITAL MULTIMETER

DANA®

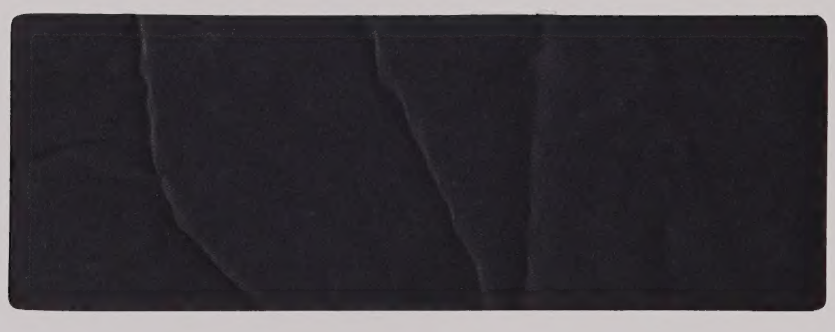

PUBLICATION NO. 980475

4200
DIGITAL MULTIMETER

DANA LABORATORIES, INC.
2401 CAMPUS DRIVE
IRVINE, CALIFORNIA 92664

DANA®

TELEPHONE (714) 833-1234
TELETYPE 910-595-1136
TELEX 678-341

PUBLICATION DATE: JULY 1975

WARRANTY

Within one year of purchase, Dana Laboratories will repair or replace your instrument, at our option, if in any way it is defective in material or workmanship. All parts and labor charges will be paid by Dana Laboratories. Just call Dana Product Service at (714)833-1234 collect in California, for assistance. We will advise the proper shipping address for your prepaid shipment. Your instrument will be returned to you freight prepaid.

ERRATA SHEET
October 2, 1975

1. Page 1-1, Paragraph 1.2

   Is: required only once a year, with occasional front panel rezeroing of the display.

   Should be: required only once a year, with occasional front panel offset adjustment.

2. Page 2-1, Paragraph 2.14

   Is: The OFFSET is a flat blade screwdriver adjusted control used to zero the instrument readout.

   Should be: The OFFSET is a flat blade screwdriver adjusted control used to select a minimum reading when the input is shorted.

3. Page 3-2, Table 3.2

   NOTE is: 23°C ± 5°C (after zeroing)

   NOTE should be: 23°C ± 5°C (after OFFSET adjustment)

4. Page 4-5, Figure 4.9

   Is: FRONT PANEL ZERO

   Should be: FRONT PANEL OFFSET

5. Page 6-4, Figure 6.3, Layout, Main Logic

   a. Delete R39, 27K

   b. Add in place of R39, CR38 Current Limiter Diode flat side up, cathode to –20V.

   c. Add Notes to W4, W5, & W6 as shown below:

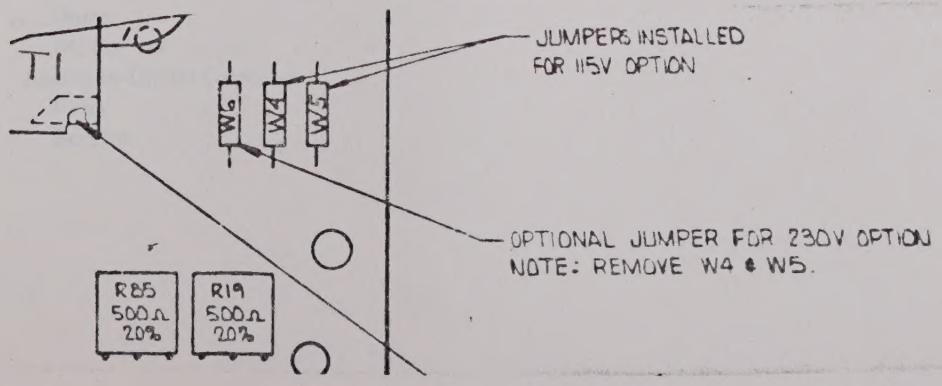

ERRATA SHEET continued

6. Page 6-5, Figure 6.4, Schematic, Main Logic

   a. Delete R39, 27K

   b. Add in place of R39, CR38 cathode to –20V.

7. Page 7-6, Parts List, Main Logic

   Add CR38, Dana P/N 210081 – DIODE, 17856, E505

8. Page 7-9, Parts List, Main Logic

   Delete R39

9. Part of this ERRATA SHEET:

   a. Change page for pages 1-3, 1-4

   b. Change page for page 3-3

   c. Change page for pages 5-1, 5-2.

TABLE OF CONTENTS

Section	Title	Page
1	**GENERAL DESCRIPTION**	1-1
1.1	General	1-1
1.7	Mechanical Description	1-1
1.9	Electrical Description	1-2
1.11	Specifications	1-2
1.13	Miscellaneous	1-2
1.14	Items Furnished	1-2
1.17	Required Tools and Test Equipment	1-2
2	**INSTALLATION & OPERATION**	2-1
2.1	Unpacking and Inspection	2-1
2.3	Power Requirements	2-1
2.5	Bench Operation	2-1
2.7	Model 60 Rack Mounting Accessory	2-1
2.9	Controls and Indicators	2-1
2.11	Power Switch	2-1
2.13	Offset	2-1
2.15	Range Control	2-1
2.17	Function Control	2-1
2.19	Display	2-2
2.21	Signal Input Terminals	2-2
2.23	Operating Procedure	2-2
2.25	Test Leads	2-3
2.27	Maximum Inputs	2-3
2.29	Accessories	2-3
2.31	BCD Output	2-3
2.33	Mechanical Description	2-3
2.36	Electrical Description	2-3
2.44	Operation	2-5
2.50	Commands	2-5
3	**SPECIFICATION TESTS**	3-1
3.1	General	3-1
3.3	Required Equipment	3-1
3.5	Procedure	3-1
4	**THEORY OF OPERATION**	4-1
4.1	General	4-1
4.4	Signal Conditioning	4-1
4.6	DC	4-2
4.8	AC	4-2
4.10	Ohms	4-3
4.15	DC Current	4-4
4.17	Analog-to-Digital Converter	4-4
4.19	Filter	4-4
4.21	Isolator	4-4

TABLE OF CONTENTS (continued)

Section	Title	Page
4.23	Signal Current Generators	4-6
4.26	Signal Current Buffer	4-7
4.28	Feed-Forward	4-7
4.30	Gain Circuit	4-7
4.32	Reference Source	4-7
4.35	Current Switch	4-8
4.40	Integrator Circuit	4-8
4.42	Null Detector	4-9
4.45	Polarity Detector	4-9
4.47	Digitizing and Display	4-9
4.50	Rate Generator	4-10
4.53	Reset	4-11
4.55	÷4/Program Control	4-11
4.57	Clock Logic	4-12
4.60	Clock	4-13
4.62	Counter	4-14
4.65	BCD to 7-Segment Converters	4-14
4.67	Overload	4-14
4.69	Polarity	4-14
4.71	Power Supply	4-14
4.76	Display Board	4-15
4.78	Fuse Board	4-15
5	**CALIBRATION**	**5-1**
5.1	Introduction and Description	5-1
5.3	Specification Validation	5-1
5.5	Calibration Equipment Requirements	5-1
5.7	Disassembly	5-1
5.9	Preliminary Calibration	5-2
5.11	Calibration Points	5-2
5.13	Calibration Procedure	5-2
6	**DRAWINGS**	**6-1**
7	**PARTS LIST**	**7-1**

LIST OF ILLUSTRATIONS

Figure	Title	Page
1.1	Simplified Block Diagram	1-2
2.1	Model 4200 Front Panel	2-2
2.2	BCD Output	2-4
2.3	Read Command	2-5
4.1	Dual Slope Integration	4-1
4.2	Block Diagram – Signal Conditioning Section	4-2
4.3	Simplified AC Converter	4-2
4.4	Basic Ohms Converter	4-3
4.5	Simplified Ohms Converter	4-3
4.6	Simplified DC Current Circuits	4-4
4.7	Analog-to-Digital Converter	4-5
4.8	Active Filter	4-5
4.9	Isolator	4-5
4.10	Positive Signal Current Generator	4-6
4.11	Negative Signal Current Generator	4-6
4.12	Signal Current Buffer	4-7
4.13	Reference Source	4-7
4.14	Simplified Current Switch	4-8
4.15	Integrator	4-9
4.16	Null Detector	4-9
4.17	Digitizing and Display	4-10
4.18	Rate Circuit	4-11
4.19	÷4 Program Control	4-12
4.20	Clock Logic	4-13
4.21	Clock	4-13
4.22	Polarity Logic	4-14
4.23	Power Supply	4-15
5.1	Calibration Points	5-2
6.1	Layout, Digital Multimeter	6-2
6.2	Layout, Module	6-3
6.3	Layout, Main Logic	6-4
6.4	Schematic, Main Logic	6-5
6.5	Schematic, Power Supply	6-8
6.6	Layout, Display	6-9
6.7	Schematic, Display	6-9
6.8	Layout, Fuse Board	6-10
6.9	Schematic, Fuse Board	6-10
6.10	Assembly, Data Output Option 51	6-11
6.11	Layout, Data Output	6-12
6.12	Schematic, Data Output	6-13

LIST OF TABLES

Table	Title	Page
1.1	Maximum AC Input	1-1
1.2	Specifications	1-3
2.1	Model 60 Parts List	2-1
2.2	Range Control, Available Range	2-2
2.3	Maximum Allowable Inputs	2-2
2.4	BCD Output Pin Locations	2-5
2.5	Range Programming Codes	2-5
3.1	Required Equipment	3-1
3.2	DC Range Check	3-2
3.3	AC Range Check	3-3
3.4	Resistance Check	3-4
3.5	DC Current Range Check	3-5
3.6	Common Mode Noise Rejection Test	3-6
3.7	Normal Mode Noise Rejection Test	3-7
4.1	Isolator Gain	4-1
4.2	Ohms Converter Current Output	4-3
5.1	Required Equipment	5-1
5.2	DC Calibration	5-3
5.3	AC Calibration	5-3
5.4	DC Current Calibration	5-3
5.5	Resistance Calibration	5-3
7.1	Table 7.1	7-1
7.2	List of Suppliers	7-1

SECTION 1 GENERAL DESCRIPTION

1.1 GENERAL.

1.2 The Dana Model 4200 (figure 1.1) is a compact, highly accurate, four digit instrument featuring auto polarity, 60 dB normal mode noise rejection, 100 dB common mode noise rejection, and 1000 Megohm input resistance on the DC Functions' 2 volt range. Recalibration is required only once a year, with occasional front panel rezeroing of the display.

1.3 The basic instrument exhibits full multimeter capability measuring full scale inputs from 200 millivolts to 1000 volts on five DC ranges, from 2 volts to 500 volts on four AC ranges (see table 1.1), from 200 ohms to 20 megohms on six ohms ranges, and 20 microamps to 2 amps on six DC current ranges.

Table 1.1 - Maximum AC Input

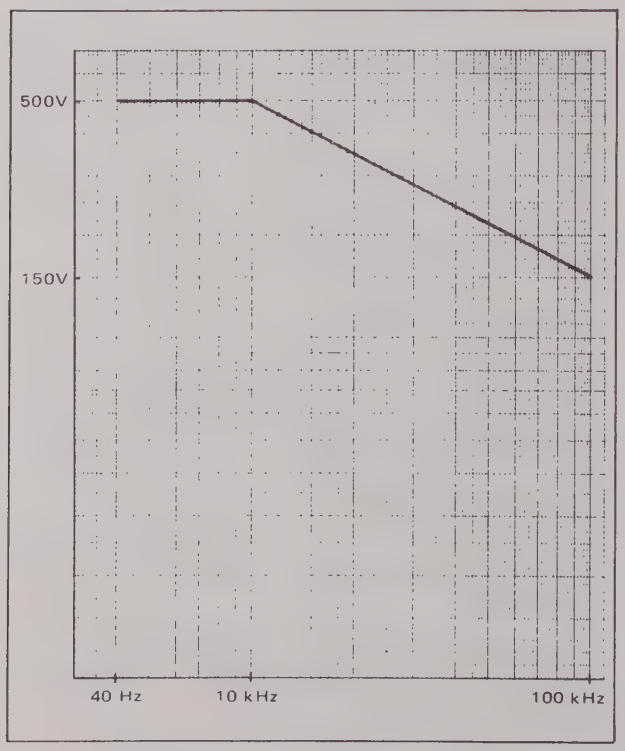

1.4 High reliability is insured by the use of all solid state circuitry throughout the instrument, including the display. Protection from possible introduction of fault voltages is provided through both mechanical and electrical means. Rotary range and function switches prevent ambiguity of selection, and the use of separate input terminals (AC/DC and OHMS/DC current), while routing inputs only when the proper function is selected, reduces the chance of signals reaching the wrong circuitry. The Ohms and DC current functions are protected on all ranges by a 2 amp fuse; the DC volts function is designed to handle inputs of 1000 volts DC or peak AC on all ranges; the AC volts function is designed to handle 600 volts DC or 500 volts AC to 10 kHz, decreasing to 150 volts AC at 100 kHz.

1.5 Available at the time of purchase is the Option 51 Isolated BCD Output (designated 4200-51). The option is contained within the instrument and supplies positive true binary data for use by a digital recorder or other similar, digitally operated device. Information provided by the option includes the numeric value of the display, overload, decimal position, polarity, and the validity of the data (Print Command).

1.6 Accessories available for the 4200 include:

Model 80 shielded input cable – for use in high noise environments

Model 82 5 KV HV Probe – extends DC measurement to 5 KV

Model 83 50 KV HV Probe – extends DC measurement to 50 KV

Model 84 RF Probe – measures RF frequencies to 200 MHz

Model 86 AC current shunts – measure AC current to 10 kHz

Model 88 Deluxe test leads – include assorted tips

Model 89 Standard test leads – with replaceable tips

Model 60 Rack mounting flanges – mount instrument to 19 inch rack

1.7 MECHANICAL DESCRIPTION.

1.8 The basic DMM is designed as a bench top instrument and comes equipped with a bail handle to simplify carrying. The bail handle rotates 270° and may be used as

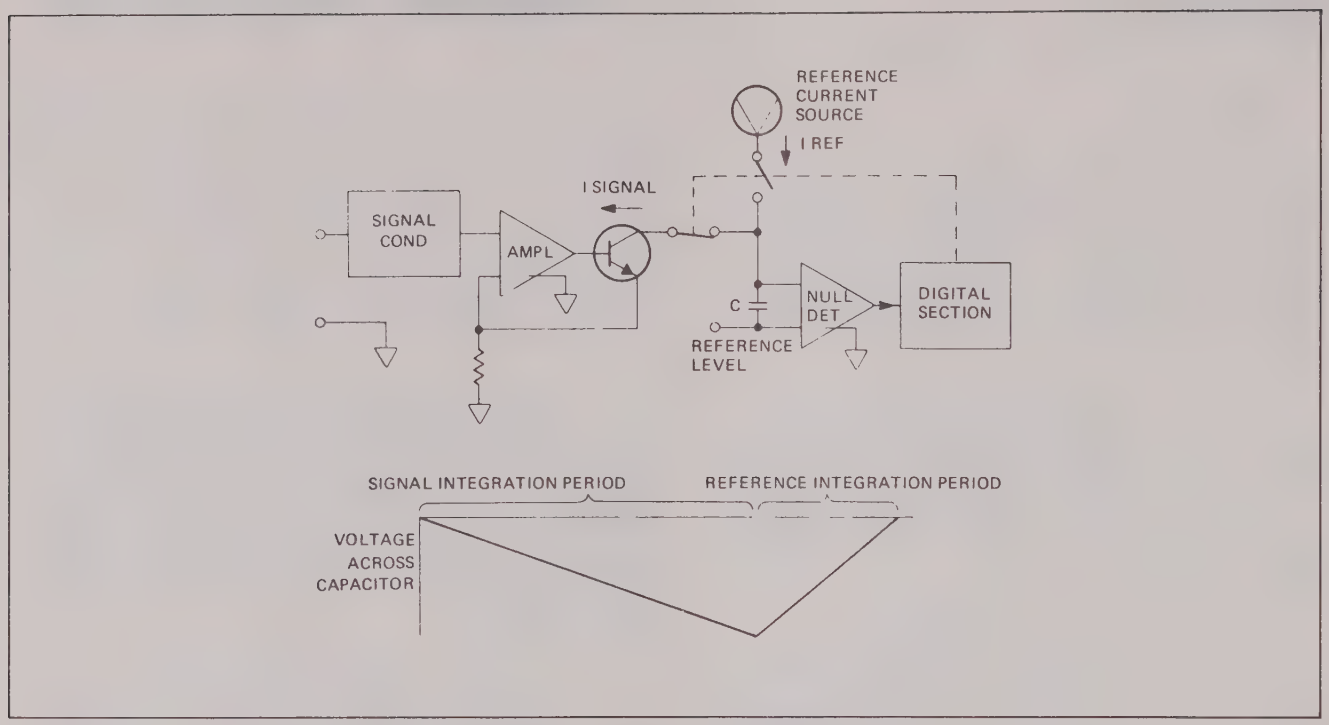

Figure 1.2 - Simplified Block Diagram

a "kickstand" for easy viewing and control access. All components of the basic instrument including the power supply are mounted on 3 printed circuit boards and housed in a high-impact plastic case. Access to the interior of the instrument for calibration and maintenance is made by removing 2 screws at the top of the back panel, and 2 screws at the top of the side panels.

1.9 ELECTRICAL DESCRIPTION.

1.10 The Series 4200 utilizes the dual-slope integration method of Analog-to-Digital Conversion. This technique minimizes the number of components for increased reliability and lower cost while having inherent advantages of stability and noise rejection. The circuitry that performs the analog-to-digital conversion is shown in the simplified block diagram of figure 1.2. The purpose of the circuitry is to convert the input (a dc level) into a proportional time period. This is done by first converting the input into an equivalent negative current that is applied to a capacitor (C1) for a set time period. This produces the characteristic linear ramp (signal integration period) shown in the figure. At the end of this time period, the voltage across C1 is proportional to the input voltage. A precise positive reference current is then applied to C1, discharging the capacitor at a fixed rate (and producing the other "leg" of the dual slope ramp as shown in the figure). The time required to discharge the capacitor is directly dependent on the voltage appearing across the capacitor at the end of the signal integration period. The reference integration period, representing the value of the input level, is measured and displayed by the digital portion of the instrument.

1.11 SPECIFICATIONS.

1.12 Specifications are shown in table 1.2.

1.13 MISCELLANEOUS.

1.14 Items Furnished.

1.15 The product instruction manual is provided with each instrument.

1.16 Included with instruments equipped with the 51 Option are a 36 pin edge connector, hood, two mounting screws and two lock washers.

1.17 Required Tools and Test Equipment.

1.18 A list of equipment necessary for calibration is given in paragraph 5.5 on page 5-1. For disassembly, a #1 Phillips head screwdriver is required. Instruments equipped with the Model 51 output option require a +5 ± .25 volt (at 200 mA) external source, to utilize the output data.

Table 1.2 - Specifications

DC VOLTAGE	
Full Scale Ranges:	±200 mV, ±2, ±20, ±200, ±2000V (1000V limit)
Resolution:	10 μV on 200 mV range
Polarity:	Automatic bi-polar ± displayed
Accuracy:	1 year, 15°C to 35°C ±0.05% of reading +0.02% of full scale)
Input Resistance:	2V range 1000 MΩ minimum 200 mV range 100 MΩ minimum 20, 200, and 2000V ranges 10 MΩ
Normal Mode Noise Rejection:	60 dB (1000 to 1), 59 Hz and above at 18 dB/octave to a minimum of 70 dB up to 100 kHz
Common Mode Noise Rejection: (with 1 KΩ imbalance in either lead)	200 mV, 2V ranges 100 dB (100,000 to 1) 20V range 80 dB (10,000 to 1) 200V range 60 dB (1000 to 1) 2000V range 40 dB (100 to 1)
Response Time:	<1 second to 0.1% of full scale
Maximum Voltage:	1000V DC or peak AC
Temperature Coefficient: (0°C to 15°C, 35°C to 50°C, 80% RH)	±(0.005% of reading +0.001% of full scale)/°C

AC VOLTAGE	
Full Scale Ranges:	2, 20, 200, 2000V RMS (500V RMS 40 Hz to 10 kHz, decreasing to 150V RMS at 100 kHz
Resolution:	100 μV RMS on 2V range
Accuracy: 40Hz - 100Hz 100Hz - 1kHz 1kHz - 10kHz 10kHz - 20kHz 20kHz - 100kHz	1 year, 15°C to 35°C ±(0.3% of reading +0.05% of full scale) ±(0.2% of reading +0.05% of full scale) ±(0.3% of reading +0.05% of full scale) ±(0.6% of reading +0.05% of full scale) ±(0.8% of reading +0.05% of full scale)
Input Impedance:	2V range 2 MΩ in parallel with 100 pF All other ranges 1 MΩ in parallel with 100 pF
AC Common Mode Rejection Ratio:	60 dB (1000 to 1) at 60 Hz with 1 KΩ imbalance in Common lead
Response Time:	<2 seconds to settle to full accuracy
Maximum Voltage:	500V RMS to 10 kHz, decreasing to 150V at 100 kHz
Noise:	±1 digit at 100 Hz, ±20 digits at 40 Hz
Temperature Coefficient: (0°C to 15°C, 35°C to 50°C, 80% RH)	40Hz - 1kHz ±(0.02% of reading +0.003% of full scale)/°C 1kHz - 10kHz ±(0.05% of reading +0.003% of full scale)/°C 10kHz - 100kHz ±(0.06% of reading +0.003% of full scale)/°C

Table 1.2 - Specifications (continued)

RESISTANCE	
Full Scale Ranges:	200Ω; 2, 20, 200, 2000 KΩ; 20 MΩ
Resolution:	10 milliohms on 200Ω range
Accuracy: 2, 20, 200, 2000 KΩ range 200Ω range 20 MΩ range	1 year, 15°C to 35°C ±(0.05% of reading +0.02% of full scale) ±(0.1% of reading +0.04% of full scale) ±(0.5% of reading +0.04% of full scale)
Response Time:	<1 second on 200Ω, 2, 20, 200 KΩ ranges <2 seconds on 2000 KΩ range <12 seconds on 20 MΩ range
Current Through Unknown:	Range 200Ω 10 milliamperes 2 KΩ 1 milliampere 20 KΩ 100 microamperes 200 KΩ 10 microamperes 2000 KΩ 1 microampere 20 MΩ 0.1 microampere
Fault Voltage:	Fuse protected at 2 amps on all ranges
Maximum Voltage Across Unknown:	2 volts at full scale
Maximum Open Circuit Voltage:	20 MΩ range +5 volts All other ranges +15 volts
Temperature Coefficient: (0°C to 15°C, 35°C to 50°C, 80% RH)	20 MΩ range ±(0.1% of reading +0.001% of full scale)/°C All other ranges ±(0.003% of reading +0.001% of full scale)/°C

DC CURRENT	
Full Scale Ranges:	±20 and ±200 μA; ±2, ±20, ±200, and ±2000 mA
Resolution:	1 nA on 20 μA range
Accuracy: 2000 mA range All other ranges	1 year, 15°C to 35°C ±(0.3% of reading +0.02% of full scale) ±(0.2% of reading +0.02% of full scale)
Shunt Values:	20, 200 μA range 10 KΩ ±0.1% 2, 20 mA range 100Ω ± 0.1% 200, 2000 mA 1Ω ±0.1%
Voltage Drop: (maximum)	20 mA, 200 μA rng – 2V 2000 mA range – 3V 200 mA, 2 mA, 20 μA range – 0.2V
Fault Current: (all ranges)	Fuse protected to 2 Amps
Temperature Coefficient: (0°C to 15°C, 30°C to 50°C, 80% RH)	±(0.01% of reading +0.001% of full scale)/°C

BCD OUTPUT, Option 51	
Output Code:	BCD 1-2-4-8, Positive True
Output Levels:	True, +2.4V minimum; False, +0.8V maximum
Maximum Readings:	6 per second, external command
Remote Input:	Hold, Read Command
Power Requirements:	Regulated 5V at 200 milliamps

Table 1.2 - Specifications (continued)

ACCESSORIES	
AC Current, Model 86	
Full Scale Ranges:	200 μA, 2, 20, 200, and 2000 mA
Resolution:	100 nA
Accuracy: (50 Hz - 10 kHz)	1 year, 15°C to 35°C
200 μA range	±(0.8% of reading +0.05% of full scale)
2000 mA range	±(0.7% of reading +0.05% of full scale)
All other ranges	±(0.5% of reading +0.05% of full scale)
Shunt Values:	200 μA range 10 KΩ (yellow) 2 mA range 1 KΩ (orange) 20 mA range 100Ω (brown) 200 mA range 10Ω (red) 1000 mA range 1Ω (black)
Response Time:	2 seconds to rated accuracy
Fault Current:	200% of range, 2 thru 200 mA 200% of range, 1000 mA (2 minutes maximum)

High Voltage DC Probe, Model 82	
Maximum Input:	5000V DC
Input Impedance:	900 MΩ
Accuracy:	±2.0% full scale

High Voltage DC Probe, Model 83	
Maximum Input:	50,000V DC
Input Impedance:	900 MΩ
Accuracy:	±5.0% full scale to 45 KV

R.F. Probe, Model 84	
Accuracy:	(accurate measurements to 25V RMS)
1kHz - 10 MHz	±(1.0% of reading +0.5% of full scale)
to 100 MHz	±1 dB at full scale
to 200 MHz	±3 dB at full scale
Input Impedance:	1.5 MΩ
Fault Voltage:	±250V DC or RMS AC

GENERAL	
Digitizing Time:	8 milliseconds
Maximum Common Mode Voltage:	500V DC or RMS AC
Maximum Power Requirement:	10 watts, 115 or 230V
Operating Temperature:	0° to 50°C
Humidity:	80% relative humidity at 35°C to full accuracy
Warmup:	30 minutes to full accuracy
Dimensions:	8.89 cm (3.5 in) x 21.59 cm (8.5 in) x 28.58 cm (11.25 in)
Weight:	2.72 Kgm (6 lbs.) net, 3.62 Kgm (8 lbs.) shipping

SECTION 2 INSTALLATION & OPERATION

2.1 UNPACKING AND INSPECTION.

2.2 The Model 4200 is enclosed between two molded, plastic-foam forms and packaged in a double-walled cardboard carton for shipment. The plastic forms hold the instrument securely in the carton and absorb any reasonable external shock normally encountered in transit. Prior to unpacking, examine the exterior of the shipping carton for any signs of damage. Carefully remove the instrument from the carton and inspect the exterior of the instrument for any signs of damage. If damage is found, notify the carrier immediately.

2.3 POWER REQUIREMENTS.

2.4 Power is supplied to the instrument through a standard, 6 foot, permanently attached, 3-wire, power cable. The power transformer of the DMM is equipped with a dual primary, enabling the instrument to be operated at 115 volts AC or 230 volts AC by the placement of internal jumpers. Jumper locations for W4, W5, and W6 are indicated in figure 6.3. A .25 amp 3AG 'normal blow' type fuse is used for both 115 volt and 230 volt operation.

2.5 BENCH OPERATION.

2.6 The DMM, as shipped, is ready for bench operation. A versatile bail handle doubles as a carrying handle and as a 'kickstand' for elevating the front of the instrument, providing easier access to the controls and display.

Table 2.1 - Model 60 Parts List

(1)	Mounting Bracket	403356
(1)	Mounting Bracket	403357
(4)	PPH Screws 6-32 x 7/16	615060
(4)	Lockwasher #6	617079

2.7 MODEL 60 RACK MOUNTING ACCESSORY.

2.8 The rack mounting accessory permits the instrument to be mounted in a standard 19 inch instrument rack or cabinet. It consists of a long and short flange (permitting left or right hand, half-rack mounting) and all necessary mounting hardware as shown in table 2.1. To mount the flanges, proceed as follows:

a. Remove the top cover of the DMM as described in Section 5.

b. Lift out bail handle assembly.

c. Remove the two bottom screws from the two side panel inserts and remove the metal decorative inserts.

d. Replace the top cover and reinstall the two screws at the rear panel.

e. Mount the flanges in the spaces vacated by the side panel inserts, with the hardware provided in the kit.

2.9 CONTROLS AND INDICATORS.

2.10 The readout and all controls are located on the front panel (shown in figure 2.1) and described below.

2.11 Power Switch.

2.12 The POWER switch is a two position push-on, push-off switch. The ON position applies power to the instrument which immediately begins taking readings at a rate of 6 per second. The OFF position removes power to all portions of the instrument.

2.13 Offset.

2.14 The OFFSET is a flat blade screwdriver adjusted control used to zero the instrument readout. This control can also be used to adjust out unwanted levels from the signal source.

2.15 Range Control.

2.16 The range control is a six position rotary switch that selects the available ranges for each function as shown in table 2.2.

2.17 Function Control.

2.18 The function control is a five position rotary switch that selects the type of measurement required. The positions are:

VDC — Measures DC voltages, with full scale ranges from 200 millivolts to 2000 volts (1000 volts maximum).

VAC — Measures AC voltages, with full scale ranges from 2 volts to 2000 volts (500 volts maximum).

Table 2.2 - Range Control, Available Range

Function	Ranges					
VDC	200 mV	2V	20V	200V	2000V	–
VAC	–	2V	20V	200V	2000V	–
mADC		2 mA	20 mA	200 mA	2000 mA	–
μADC	–	–	20 μA	200 μA	–	–
Ω	200Ω	2 KΩ	20 KΩ	200 KΩ	2000 KΩ	20 MΩ

Table 2.3 - Maximum Allowable Inputs

VDC	1000V DC or peak AC
VAC	500V RMS 40 Hz to 10 kHz, decreasing to 150V RMS at 100 kHz
ADC	Fuse protected at 2 amps
Ω	Fuse protected at 2 amps

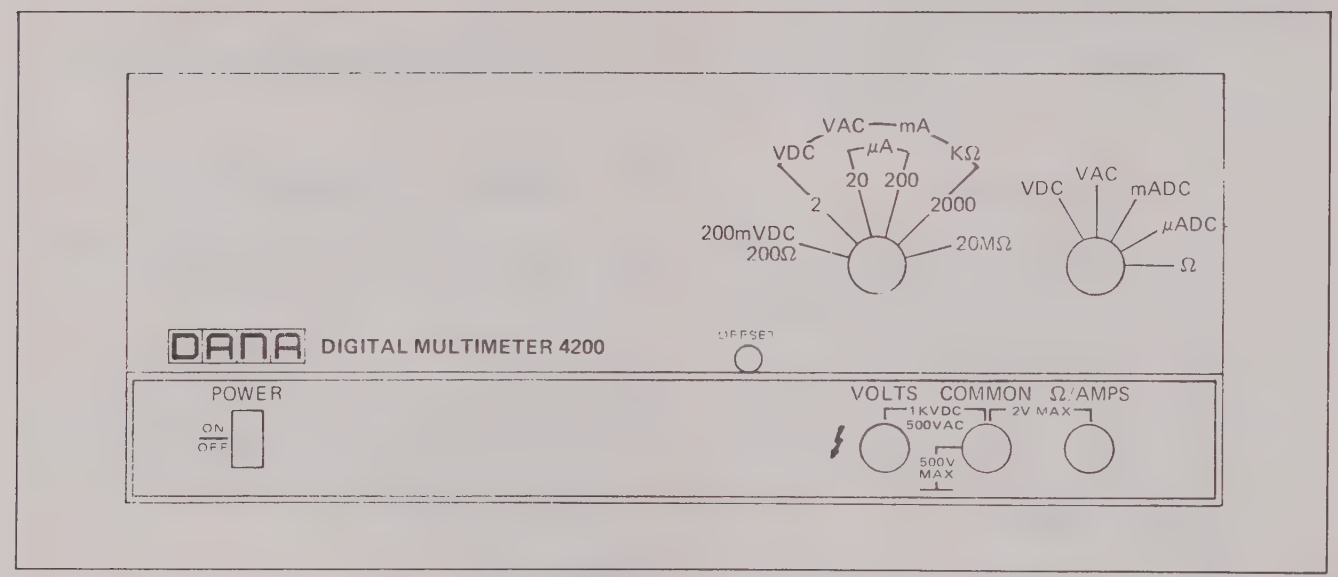

Figure 2.1 - Model 4200 Front Panel

mADC — Measures DC milliamps, with full scale ranges from 2 milliamps to 2000 milliamps.

μADC — Measures DC microamps, with full scale ranges of 20 μA and 200 μA.

Ω — Measures resistance, with full scale ranges from 200 ohms to 20 megohms.

2.19 Display.

2.20 The display consists of four 7-segment numeric LEDs and an overrange and polarity LED. An overload condition is indicated by a blinking display.

2.21 Signal Input Terminals.

2.22 The signal input consists of three terminals set in-line and spaced to permit the use of a dual "banana plug" between the center and either of the two outside terminals. The center terminal (black) is the COMMON terminal and all voltage and current measurements are referenced to it. The left terminal (red) is the VOLTS terminal and AC and DC voltage measurements are made with this and the COMMON terminal. The VOLTS terminal is tied into the measurement circuitry only when VDC or VAC function is selected; in all other functions, this terminal is open. The right terminal (white) is the Ω/AMPS terminal. It is used in conjunction with the COMMON terminal to measure resistance and current. The Ω/AMPS terminal is tied into the circuitry only when mADC, μADC, or Ω is selected; in all other functions, this terminal is open.

2.23 OPERATING PROCEDURE.

2.24 The instrument is designed for the simplest possible level of operation. Once the instrument has been connected to the power line and to the signal source in accordance with the instructions, the operator can make all the required measurements by setting the front panel controls to the desired positions.

2.25 Test Leads.

2.26 Three general usage test leads (Options 80, 88, and 89) are available for use with the instrument, or the user may choose to fabricate his own.

2.27 Maximum Inputs.

2.28 The maximum allowable inputs for each function and range combination is illustrated in table 2.3.

2.29 ACCESSORIES.

2.30 A full line of accessories are available for the instrument. These are described below:

60, Rack Mounting Flanges. These flanges permit the instrument to be mounted in a standard 19 inch rack or cabinet and are described in full, beginning with paragraph 2.7.

80, Shielded Input Cable. This is a 5 foot long shielded cable with hooded alligator clip probes and dual banana plug for mating the cable to the instrument. This input cable is especially useful in high noise environments.

82, 5 KV High Voltage Probe. This probe extends the DC measurement capability of the instrument to 5000 volts. The probe is used on the 20 and 200V DC ranges only.

83, 50 KV High Voltage Probe. This probe extends the DC measurement capability of the instrument to 50,000 volts. The probe is used on the 20 and 200V DC ranges only.

84, RF Probe, 200 MHz. This probe extends the capabilities of the instrument to the measurement of RF frequency. The probe measures frequencies from 1 kHz to 200 MHz at RMS voltage levels up to 25 volts. Input impedance is 1.6 megohms. The probe converts the RF signal to the DC equivalent voltage and is measured on the instruments 20V DC range.

86, AC Current Shunts. This accessory extends the instrument's measurement capabilities to include AC current measurement. AC currents to 10 kHz are accurately measured with full scale inputs of 200 μA, 2 mA, 20 mA, 200 mA, and 2000 mA. The accessory consists of five precision, shunt resistors, molded in color-coded dual banana plug/sockets. The desired shunt is connected between the instrument and the input cable. All AC current measurements are made on the 2 volt AC range.

88, Deluxe Test Lead Set. These test leads are designed to withstand the everyday continuous on the line use of production testing or field use. The probes come equipped with separate assorted tips.

89, Standard Test Leads. These are standard test leads with 90 degree banana plugs and replaceable 'phonograph needle' tips.

2.31 BCD OUTPUT.

2.32 The Isolated BCD Output (Option 51) converts the readout, range and polarity data into binary form for printers or other digitally operated equipment. The output of the option is completely isolated, preserving the instruments common mode rejection characteristics, even when connected to grounded equipment.

2.33 Mechanical Description.

2.34 All components for the option are on a single printed circuit board that is mounted above the instrument's main PCB by four spacers; an aluminum shield is placed between the boards to prevent digital noise generated by the option from affecting measurement circuitry on the main board. One end of the option board forms an edge connector that extends out of the back of the instrument through a slot provided for this purpose. This connector is the BCD option output connector and is designated J4.

2.35 Data and the power required for the isolated portion of the board is routed through a 14-wire cable that plugs into connector J2 on the main board and J3 on the option board. The option requires an external +5 volt power supply (5 volts $\pm$ .25 volts at 200 mA) to be provided by the user, to supply power to the grounded portion of the option.

2.36 Electrical Description.

2.37 As shown in figure 2.2, isolation between the measurement portion of the instrument and the grounded output portion of the option is maintained by the use of two pulse transformers and four optical couplers. All data is passed through these six devices. The output data is from TTL logic and in positive true 1-2-4-8 BCD or single line form.

2.38 The Display data is generated by coupling the clock oscillator output through pulse transformer T1 to a four decade counter consisting of U5, U6, and U7; the output of the counter (1008) drives flip flops U8 and U9 that generate overrange and overload (decade U10 is not used). The counter and flip flops are reset by the $\overline{\text{RESET}}$ pulse of the

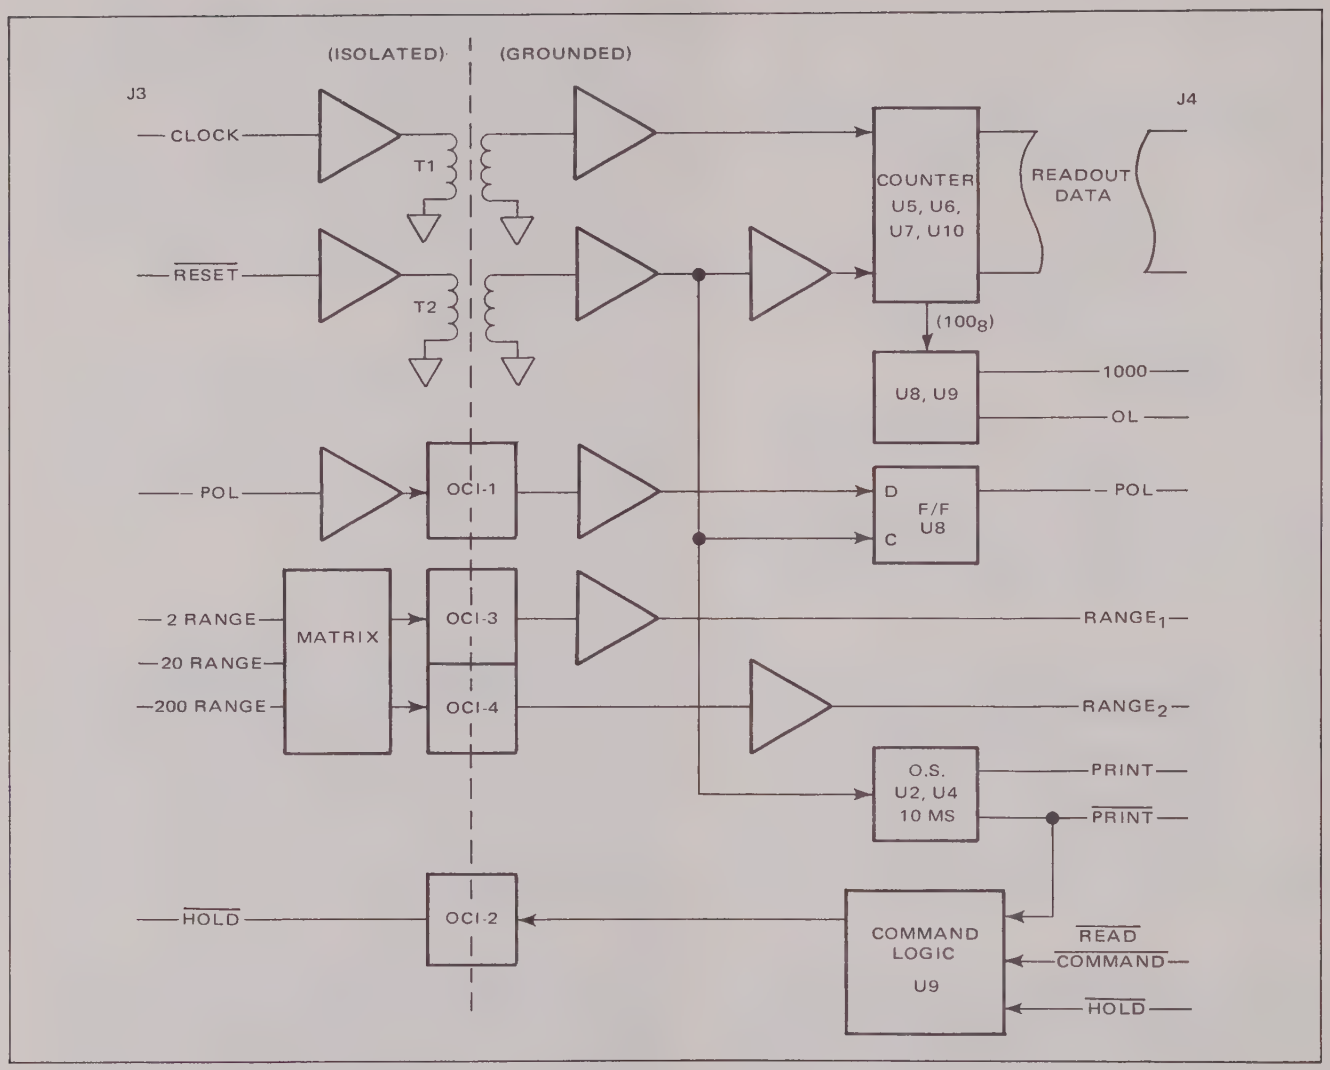

Figure 2.2 - BCD Output

instrument after passing through isolation transformer T2. The option counter advances at the same rate as the decade counter of the DMM and, at the completion of a measurement cycle, the value of the display is stored in binary form by the option counter.

2.39 The range data is encoded on the isolated portion of the option by a four diode matrix and passed through two optically coupled isolators (OCI-3 and OCI-4).

2.40 The polarity is coupled through OCI-1 and controls 'D' flip flop U8. The flip flop is strobed by the isolated $\overline{\text{RESET}}$.

2.41 The PRINT pulse is a 10 millisecond pulse generated by one shot U2, U4. The PRINT line goes false upon receipt of a negative going $\overline{\text{RESET}}$ pulse (coinciding with the start of a measurement cycle). Ten milliseconds later the one shot goes true, signifying the output data is ready to be recorded. A $\overline{\text{PRINT}}$ output is provided for equipment requiring a negative going print command signal.

2.42 The $\overline{\text{HOLD}}$ line, in conjunction with the read command circuitry, generates an isolated $\overline{\text{HOLD}}$ signal at the output of OCI-2. This signal inhibits the generation of new readings by locking up the ÷10 counter U10 on the main logic board (see Section 4). The instrument holds the last reading until the hold line is released or when commanded to, by a $\overline{\text{READ COMMAND}}$ signal.

2.43 The READ COMMAND circuitry consists of a 'D' flip flop (U9) wired to generate a logic false at $\overline{Q}$ when the $\overline{\text{READ COMMAND}}$ line is pulled to logic false. This causes the $\overline{\text{HOLD}}$ output of OCI-2 to go true and allows a

new measurement cycle to start. U9-$\bar{Q}$ goes true 10 ms after the start of the read cycle when $\overline{\text{PRINT}}$ goes false, that applies a capacitor coupled negative going pulse to U9-CLEAR.

2.44 Operation.

2.45 Provided with the option 51 is the Connector assembly that includes a mating connector and hood, and mounting screws w/lock washers for securing the connector and hood to the back of the instrument. No special shielding considerations are required for cabling. Pin locations are indicated in table 2.4. Range programming codes are shown in table 2.5.

Table 2.4 - BCD Output Pin Locations

	J4		
Not Used	1	A	Range_2
Not Used	2	B	Range_1
$\overline{\text{READ COMMAND}}$	3	C	$\overline{\text{HOLD}}$
Not Used	4	D	– POL
Not Used	5	E	Not Used
Not Used	6	F	Not Used
Not Used	7	H	$\overline{\text{OL}}$
Not Used	8	J	Not Used
Not Used	9	K	Not Used
Not Used	10	L	Not Used
100's 8	11	M	100's 2
100's 4	12	N	100's 1
PRINT	13	P	$\overline{\text{PRINT}}$
10's 8	14	R	10's 2
10's 4	15	S	10's 1
Units 8	16	T	Units 2
Units 1	17	U	Units 4
COMMON	18	V	External +5V

Table 2.5 - Range Programming Codes

RANGE	J4 PIN NO.	
	B	A
2	1	1
20	0	1
200	1	0
2000	0	0

2.46 EXTERNAL SUPPLY.

2.47 An external supply capable of providing a voltage level between +4.75 to +5.25 with a current of 200 milliamps is required to power the components of the grounded portion of the option. The +5 volts is introduced to J4 pin V and referenced to J4 pin 18.

2.48 OUTPUT LINES.

2.49 All output lines are driven by TTL logic and referenced to common (J4-18). Output levels are defined below:

LOGIC TRUE = +2.4 minimum

LOGIC FALSE = +0.8 maximum (16 mA current sink)

2.50 Commands.

2.51 Commands are initiated by bounce free contact closure or NPN switch closure to common (J4-18).

2.52 $\overline{\text{HOLD}}$.

2.53 When the Hold line is allowed to float true, the instrument takes readings and print pulses are generated at a rate of 6 per second. When the Hold line is selected, the last instrument reading is retained and no new measurements are taken.

2.54 $\overline{\text{READ COMMAND}}$.

2.55 A Read Command is used only when Hold is selected and permits the user to command a reading at any time up to 60 measurements a second. A suitable Read Command pulse is shown in figure 2.3.

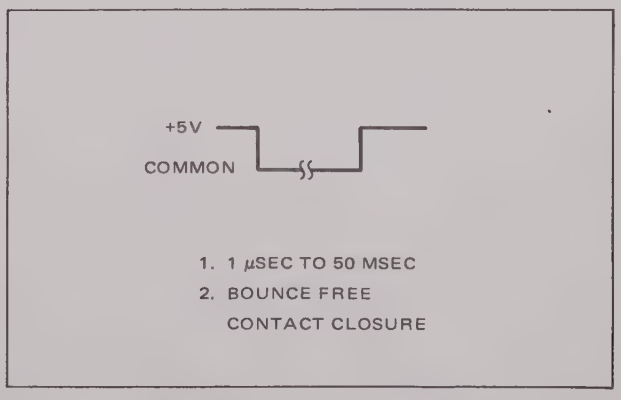

Figure 2.3 - Read Command

SECTION 3 SPECIFICATION TESTS

3.1 GENERAL.

3.2 This section contains procedures that compare the operation of the instrument with the published specifications found at the front of the manual. The procedure is intended for use in incoming inspection and as a periodic check to determine if recalibration is required.

3.3 REQUIRED EQUIPMENT.

3.4 The equipment needed for performing the procedure is listed in table 3.1.

3.5 PROCEDURE.

3.6 Allow 30 minutes for warmup. Connect the instrument and test equipment as shown in the figure supplied with each accuracy check. Select the controls and inputs as called out in the tables and monitor the instrument readout for the indicated values.

Table 3.1 - Required Equipment

Item	Minimum Use Specification	Equipment
DC Voltage Standard	Adjustable: 0 – 1000V Resolution: 1 μV on 10V range Accuracy: ±.003%	Fluke 332B
AC Laboratory power source	Variable: 1V RMS to 500V RMS, 400 Hz and 15 kHz .06% accuracy	HP 745/746
Thermal Transfer voltmeter	AC/DC thermal transfer voltmeter. Ranges: 1 to 500V. Accuracy 0.05% or better.	Holt Model 6 Thermal Transfer Voltmeter
Voltage to Current (E to I) Converter	Adjustable to 2000 mA .05% accuracy	Valhalla Scientific Model 2500
Standard Resistors	100Ω, 1KΩ, 10 KΩ, 100 KΩ, 1 MΩ — Known to .01% 100Ω — Known to .03% 10 MΩ — Known to .1%	ESI SR-1 series standard resistors
1/2W Carbon Resistor	1,000 ohms ± 10%	—
1/2W Carbon Resistor	10,000 ohms ± 10%	—
Capacitor	1 μF, 100V or more	—
Batteries, 2 required	1.5V cells having screw type binding posts.	—

Table 3.2 - DC Range Check

DMM		INPUT SIGNAL		NOMINAL READING	TOLERANCE	NOTE
FUNCTION	RANGE	DC VOLTS				
VDC	200 mVDC	.190000		190.00	189.94 to 190.06	23°C ± 5°C (after zeroing)
	2 VDC	1.90000		1.9000	1.8994 to 1.9006	
	20 VDC	19.0000		19.000	18.994 to 19.006	
	200 VDC	190.000		190.00	189.94 to 190.06	
	2000 VDC	1000.00		1000.0	999.1 to 1000.9	
	2000 VDC	−1000.00		−1000.0	−999.1 to −1000.9	

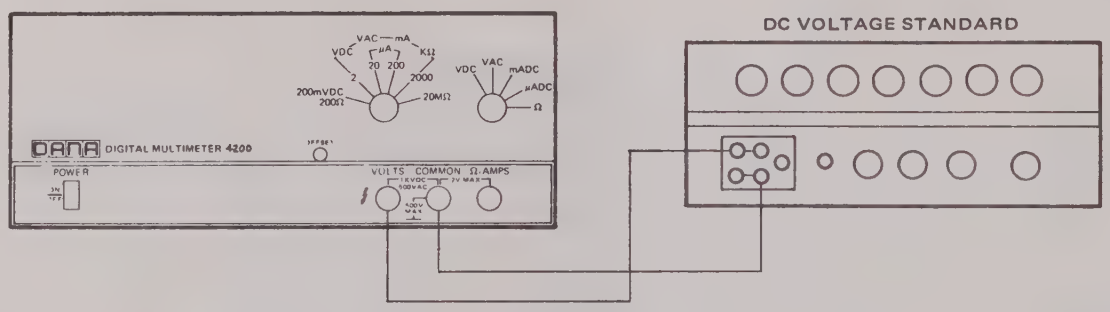

Table 3.3 - AC Range Check

DMM		INPUT SIGNAL		NOMINAL READING	TOLERANCE	NOTE
FUNCTION	RANGE	AC VOLTS	FREQUENCY			
VAC	2V	1.9000	400 Hz	1.9000	1.8952 to 1.9048	23°C ± 5°C
	2V	1.9000	15 kHz	1.9000	1.8876 to 1.9124	
	20V	19.000	400 Hz	19.000	18.952 to 19.048	
	20V	19.000	15 kHz	19.000	18.876 to 19.124	
	200V	190.00	400 Hz	190.00	189.52 to 190.48	
	200V	190.00	15 kHz	190.00	188.76 to 191.24	
	2000V	500.00	400 Hz	500.0	498.0 to 502.0	
	2000V	250.00	15 kHz	250.0	247.5 to 252.5	

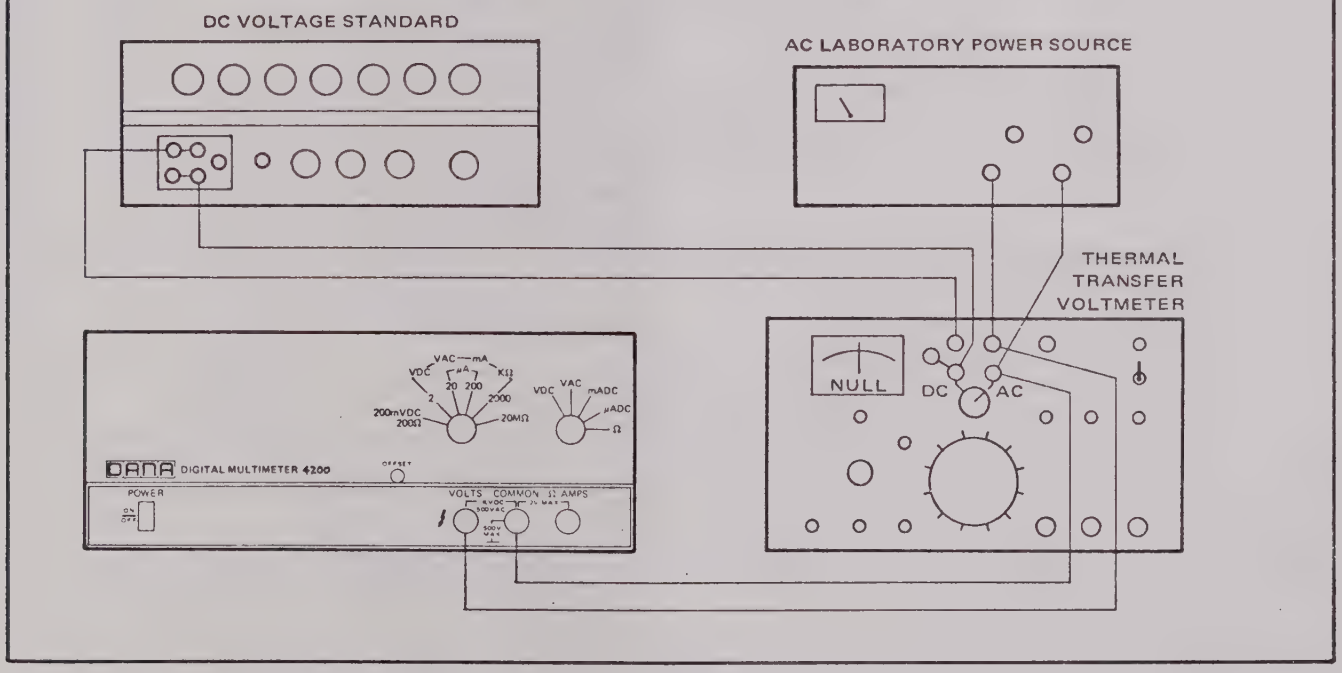

Table 3.4 - Resistance Check

DMM		INPUT SIGNAL		NOMINAL READING	TOLERANCE	NOTE
FUNCTION	RANGE	RESISTANCE				
Ω	200 Ω	100 Ω		100.00	99.82 to 100.18	23°C ± 5°C
	2 KΩ	1 KΩ		1.0000	.9991 to 1.0009	
	20 KΩ	10 KΩ		10.000	9.991 to 10.009	
	200 KΩ	100 KΩ		100.00	99.91 to 100.09	
	2000 KΩ	1000 KΩ		1000.0	999.1 to 1000.9	
	20 MΩ	10000 KΩ		10.000	9.942 to 10.058	

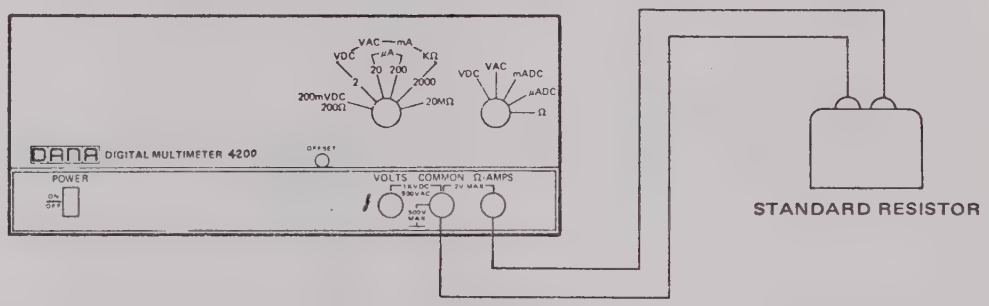

Table 3.5 - DC Current Range Check

DMM		INPUT SIGNAL		NOMINAL READING	TOLERANCE	NOTE
FUNCTION	RANGE	DC CURRENT				
mADC	2000 mADC	1900.0 mA		1900.0	1893.9 to 1906.1	23°C ± 5°C
	200 mADC	190.00 mA		190.00	189.66 to 190.34	
	20 mADC	19.000 mA		19.000	18.966 to 19.034	
	2 mADC	1.9000 mA		1.9000	1.8966 to 1.9034	
μADC	200 μADC	190.00 μA		190.00	189.66 to 190.34	
	20 μADC	19.000 μA		19.000	18.966 to 19.034	
mADC	2000 mADC	−1900.0 mA		−1900.0	−1893.9 to −1906.1	

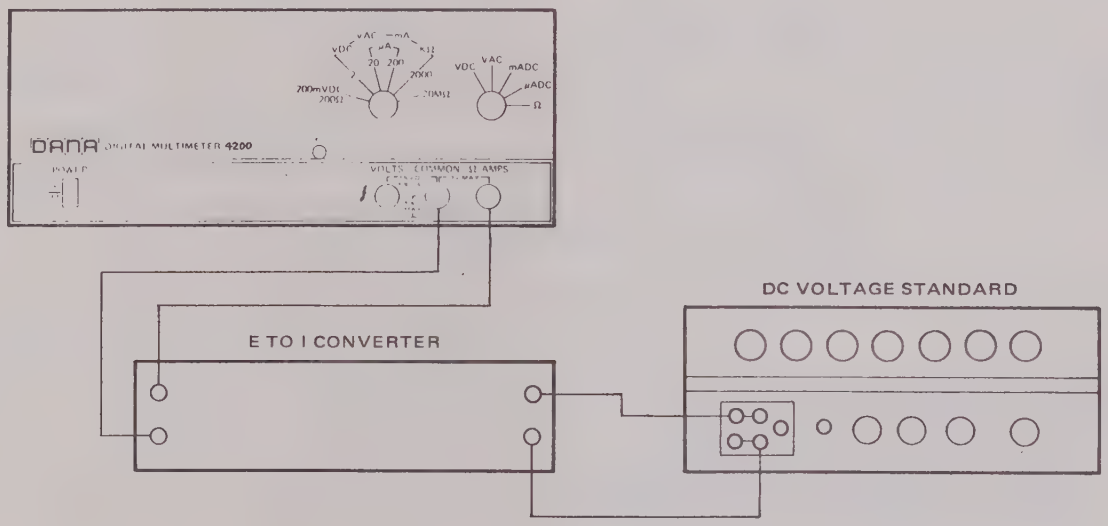

Table 3.6 - Common Mode Noise Rejection Test

DMM		INPUT SIGNAL		NOMINAL READING SEE NOTE 1	TOLERANCE	NOTE
FUNCTION	RANGE	AC SOURCE	S-1			
VDC	20V	20V P	GND			1) With switch S-1 in the off position, record the reading displayed in the DMM readout in the NOMINAL READING column. Set S-1 to the AC position for common mode check.
		20V P	AC		±1 digit	

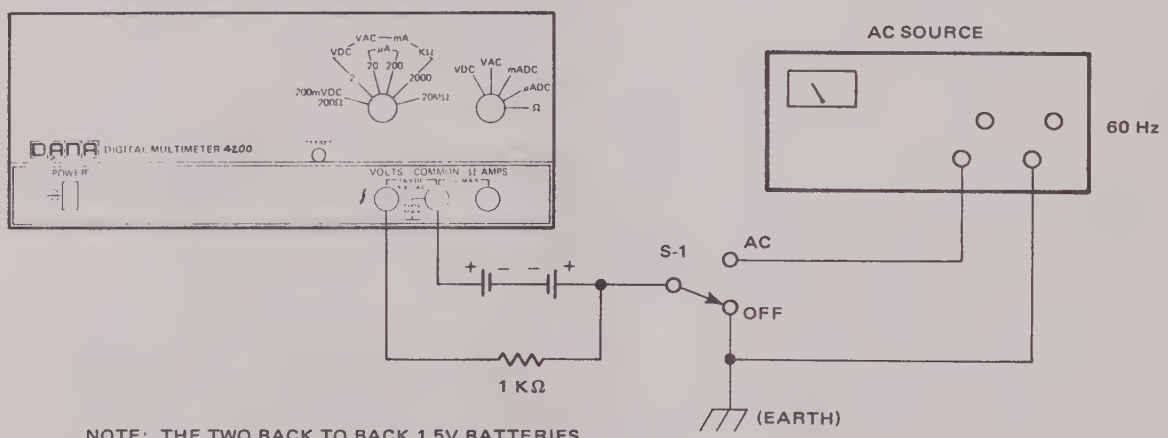

NOTE: THE TWO BACK TO BACK 1.5V BATTERIES PROVIDE A SMALL INPUT SIGNAL OF SEVERAL MILLIVOLTS TO OFFSET THE READING FROM ZERO (SINCE NO TWO SUCH BATTERIES ARE EQUAL IN VOLTAGE). THIS AVOIDS POLARITY CHANGES DURING CMR TESTS WHICH MAY MAKE THE READING HARD TO INTERPRET.

Table 3.7 - Normal Mode Noise Rejection Test

DMM		INPUT SIGNAL		NOMINAL READING	TOLERANCE	
FUNCTION	RANGE	DC	AC			
VDC	20V	10	1V P @ 60 Hz	10.000	±1 digit	

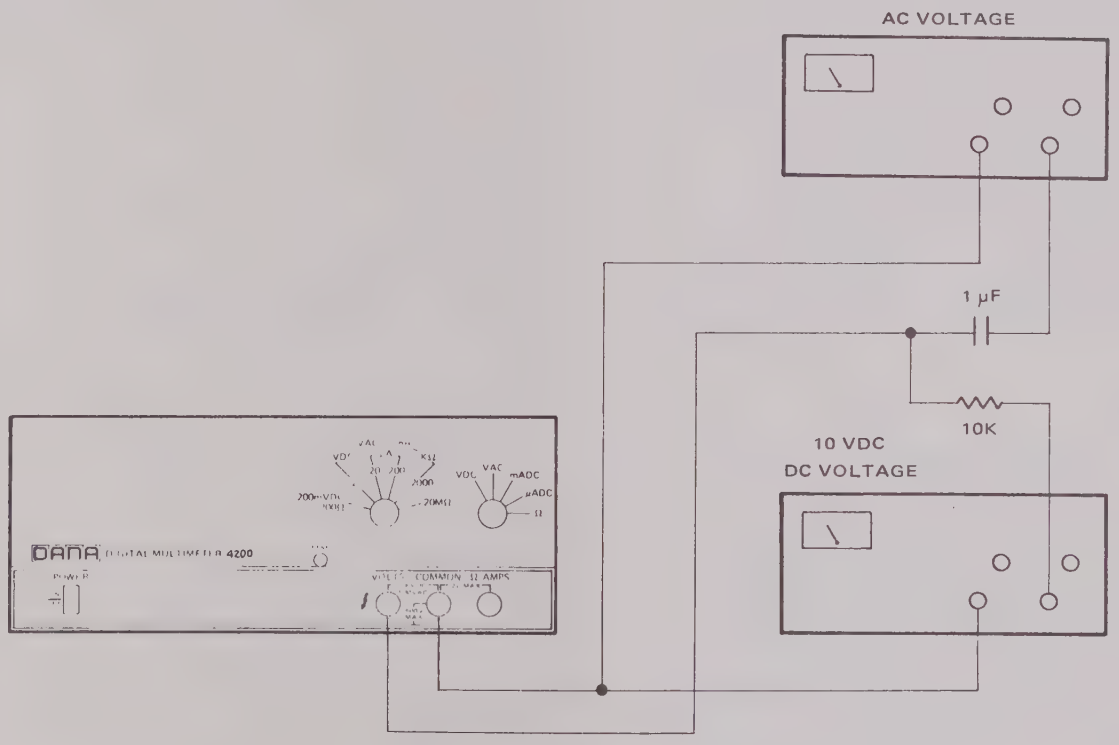

SECTION 4 THEORY OF OPERATION

4.1 GENERAL.

4.2 This section describes the operation of the Model 4200 DMM. The section is divided into two parts, corresponding to the analog and digital divisions of the instrument. Drawings appearing in this section are included to supplement the assembly and schematic drawings located in Section 6.

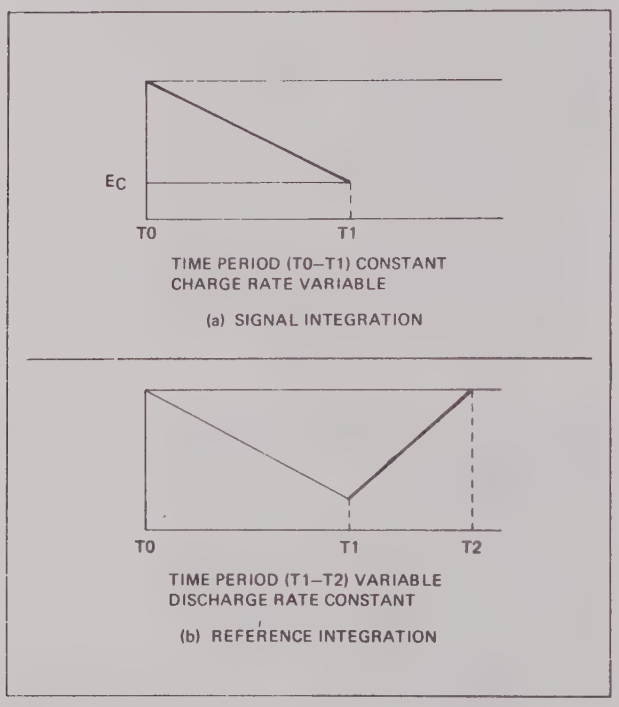

Figure 4.1 - Dual Slope Integration

4.3 The Series 4200 DMM uses the dual slope integration method of analog-to-digital conversion. In this method, a DC input is converted into a proportional, negative current. The value of the current produced is a function only of the absolute value of the input signal, being independent of the polarity of the input signal. The current generated is fed to a capacitor which integrates the current, developing a linearly increasing negative charge as shown in figure 4.1(a). The negative current is applied to the capacitor for a specific time period. The time period (T0 = T1) is controlled by a clock driven counter in the digitizing and display portion of the DMM and is equal to 10,000 clock cycles. At the completion of this signal integration period (T1), the voltage developed across the capacitor is converted into a proportional time period by replacing the input current with a known, positive, reference current. The positive current causes the voltage across the capacitor to linearly decrease as shown in figure 4.1(b). This reference integration period (T1 - T2) terminates when the voltage across the capacitor is restored to its original, premeasurement level (T0). The start of the reference integration period (T1) coincides with the counter being set to 00000 and the completion of the period (T2) halts the counter. The reference integration period (T1 - T2), which is proportional to the value of the input signal, controls the number of clock cycles registered by the counter. The value of reference current is opposite in polarity but equal in value to the signal current produced by a one volt input. For a one volt input the reference integration period (T1 - T2) and the counter registers 10,000. For a 0.5 volt input the reference integration period is one half as long and the counter registers 5000. At the completion of the reference integration period the position of the counter is displayed and numerically represents the value of the input voltage.

4.4 SIGNAL CONDITIONING.

4.5 The signal conditioning portion of the instrument is shown simplified in figure 4.2. Prior to measuring by the Analog-to-Digital section of the DMM, the input signal is converted to a maximum DC level of ± 2 volts. The isolator portion of the A to D converter operates at a gain of one or ten depending on the range and function selected (see table 4.1). The scaled input is limited to ± 0.2 volts when the isolator operates at a gain of 10. The input signal is routed through the function control switch (S1) to the appropriate conditioning circuitry. The conditioned signal is routed again through S1 to the A to D converter.

Table 4.1 - Isolator Gain

Range	DC	AC	MA	μA	Ohms
.2	X10				X1
2	X1	X1	X10		X1
20	X1	X1	X1	X10	X1
200	X1	X1	X10	X1	X1
2000	X1	X1	X1		X1
20,000					X1

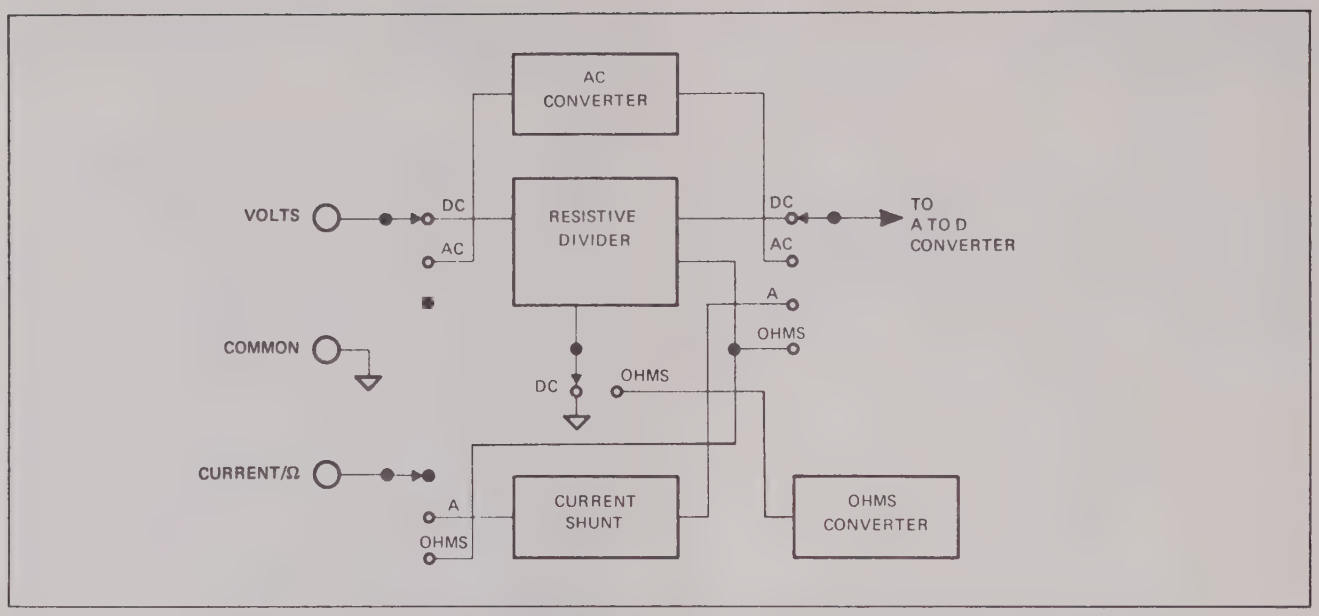

Figure 4.2 - Block Diagram – Signal Conditioning Section

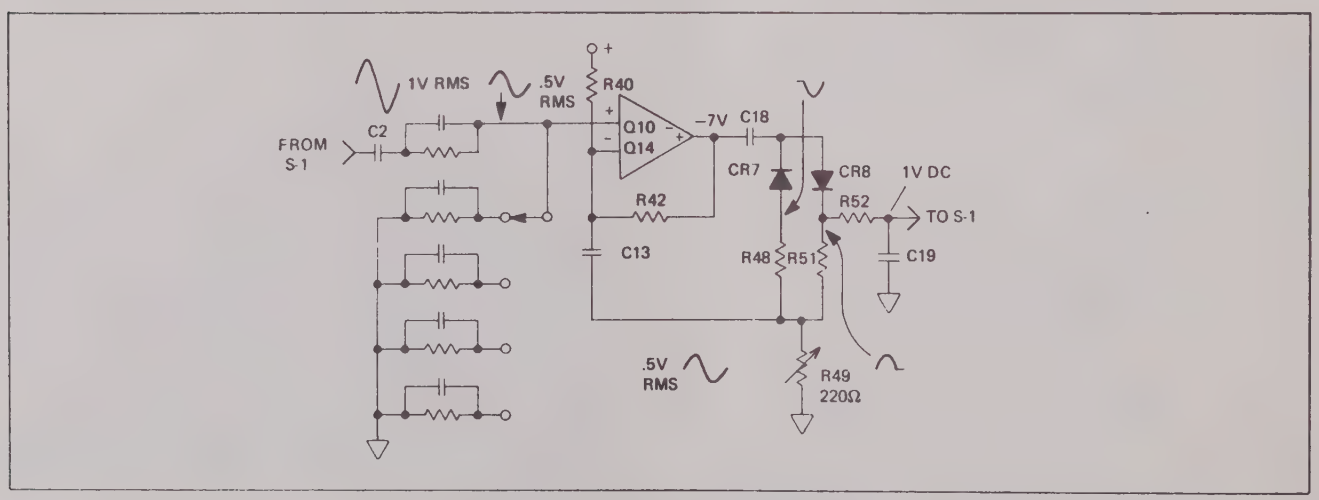

Figure 4.3 - Simplified AC Converter

4.6 DC.

4.7 The DC input is applied to the range divider where it is scaled and routed to the A to D converter. On the .2 and 2 volt ranges, no attenuation of the signal takes place. On the 20, 200, and 2000 ranges the input signal is scaled by a factor of .1, .01, and .001, respectively. The additional resolution required for the .2 range is supplied by the isolator.

4.8 AC.

4.9 The AC converter, shown simplified in figure 4.3, converts an AC input to an equivalent DC signal. The AC signal is scaled by the AC converter attenuator by a factor of .5 on the two volt range and by .05, .005, and .0005 on the 20, 200, and 2000 volt ranges, respectively. The scaled input is amplified by the potentiometric amplifier consisting of transistors Q10 through Q14. The amplified AC

signal is fed through C18 to two polarity dependent feedback paths, CR7 and R48, and CR8 and R51, which divide the task of conducting the signal. CR7 and R48 conduct during the negative half of the AC signal and CR8 and R51 during the positive half. The bisected signal is summed across R49 and fed back through capacitor C13 to the reference input of the amplifier. The closed loop gain of the amplifier determined by R48, R51, and R50 is approximately 4.5. The positive half cycle developed across R51 is filtered by R52 and C19 to produce a positive DC equivalent of the AC input. Further filtering is performed on the DC output by the active filter of the Analog-to-Digital converter section.

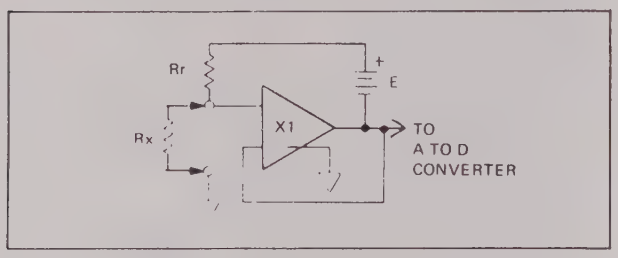

Figure 4.4 - Basic Ohms Converter

4.10 Ohms.

4.11 The ohms converter produces a precise DC current which is fed through the resistance being measured. The resultant DC voltage drop across the resistor is measured and displayed. The current generated for each range is chosen to produce a two-volt drop across a resistance equal to the range selected. Thus, on the 2K range, a current of 1 milliamp is produced developing a two-volt drop across an input resistance of 2 Kohm. The current produced on each range is given in table 4.2.

Table 4.2 - Ohms Converter Current Output

Range	Current
200 Ohms	10 mA
2 Kohms	1 mA
20 Kohms	100 μA
200 Kohms	10 μA
2 Megohms	1 μA
20 Megohms	100 nA

4.12 A simplified diagram of the ohms converter is shown in figure 4.4. The voltage developed across the resistance being measured (Rx) is buffered by a gain of one amplifier. The ohms converter generates a precise voltage (E), referenced to the amplifier output. The voltage is connected to a precise range resistor (Rr) and (Rx), connected in series. Because the voltage (E) follows the voltage developed

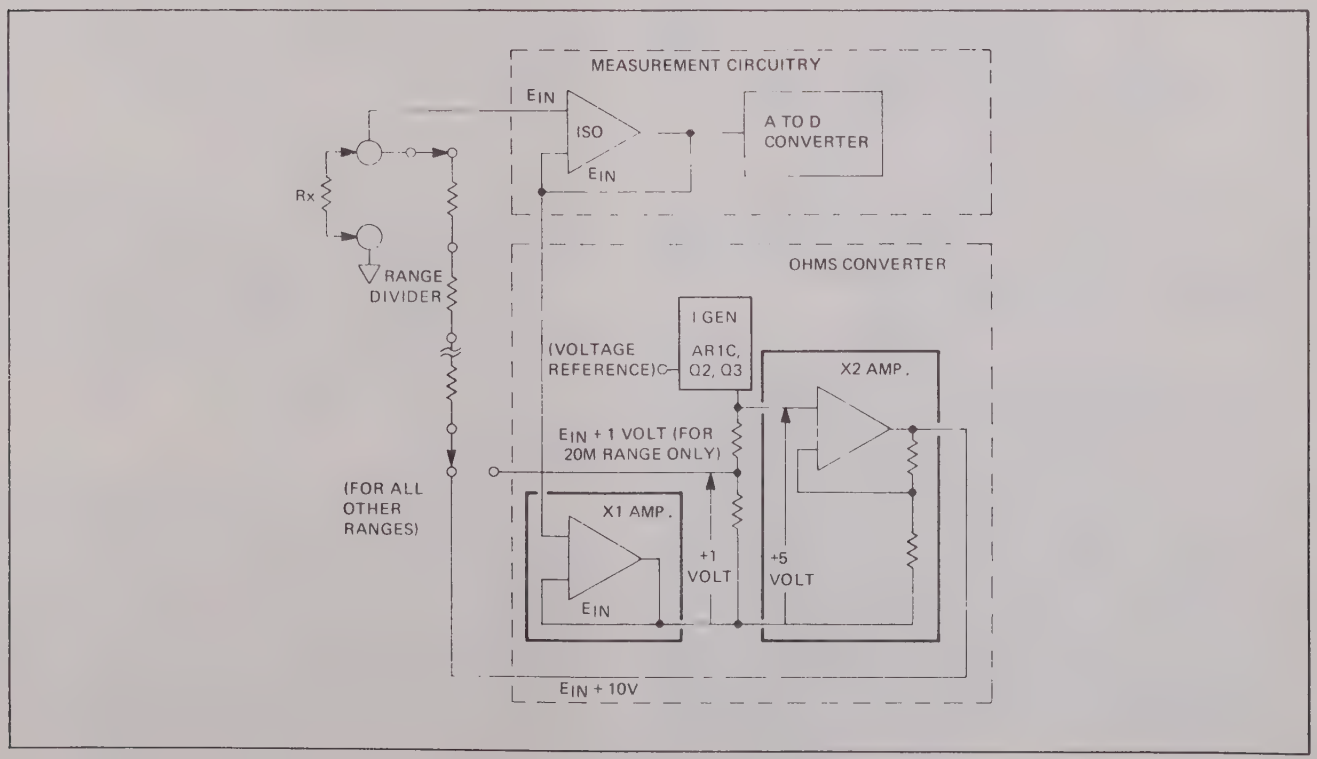

Figure 4.5 - Simplified Ohms Converter

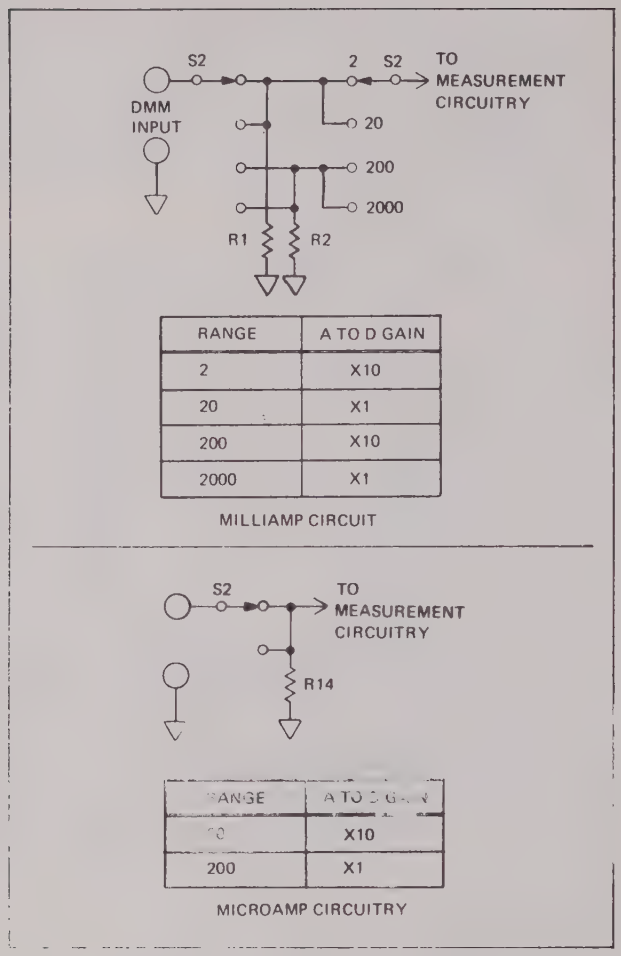

Figure 4.6 - Simplified DC Current Circuits

across (Rx), the voltage impressed across (Rr) is constant, making the current through (Rx) constant. The input resistance of the gain of one amplifier is extremely high. Effectively, therefore, all of the current flowing through (Rr) also flows through (Rx).

4.13 For measuring ohms, the converter is used in conjunction with other portions of the DMM circuitry as shown in figure 4.5. The isolator from the A to D converter provides the required isolation and precise gain-of-one accuracy for monitoring the voltage drop across resistor Rx. The output of the isolator is buffered by a gain-of-one amplifier (operational amplifier AR1A) on the ohms converter. To the output of the buffer amplifier is connected a network producing two precise voltage outputs. The network consists of a current generator AR1C, Q2, Q3, which is referenced to the DMM'S + REFERENCE VOLTAGE, driving a stable 0.5 milliamps through resistors R20 and R22 connected in series. The voltage drop across R22 is +1 volt and is used only on the 20 Meg range. The voltage drop across the two resistors is +5 volts. This level is increased to +10 volts by a gain-of-two amplifier consisting of operational amplifier AR1B; the 10 volt level is used on all ranges except the 20 Meg range. Both the +1 volt and +10 volt levels float above the DMM input level.

4.14 The converter voltage output is routed through a precision, series-divider, consisting of the same resistive string used for the DC range divider. The Range Control selects the amount of resistance (Rr) placed in series with the converter voltage output and Rx, thereby controlling the current produced for each range.

4.15 DC Current.

4.16 Two current positions, milliamp and microamp, are provided on the Model 4200 DMM. Both functions use internally selected shunts to convert the input current to an equivalent voltage for measurement. As shown in figure 4.6, two shunt resistors are used for the milliamp function and one shunt for the microamp function. The gain of the A to D converter is increased to provide the required resolution on the 20 microamp, 2 milliamp and 200 milliamp ranges.

4.17 ANALOG-TO-DIGITAL CONVERTER.

4.18 The Analog-to-Digital (A to D) converter shown in figure 4.7, converts the input signal to a proportional time period for measurements by the digital section.

4.19 Filter.

4.20 The active bessel-type filter shown simplified in figure 4.8 provides 60 dB of normal mode rejection at or near 60 Hz and consists of operational amplifier AR2. The amplifier provides a moderately high degree of amplification and through the feedback path (R54, R57, C20, and C22) operate with the source impedance to produce an active 3-pole filter.

4.21 Isolator.

4.22 The isolator is a high gain, high input impedance, DC amplifier, consisting of a differential, dual FET (Field Effect Transistor) input stage, driving an integrated circuit amplifier. The isolator (shown in figure 4.9) is operated potentiometrically to provide a closed-loop gain-of-one. The signal input of the isolator is clamped by transistors Q50 and Q51, connected as diodes, to limit the signal swing to approximately plus or minus 2.2 volts.

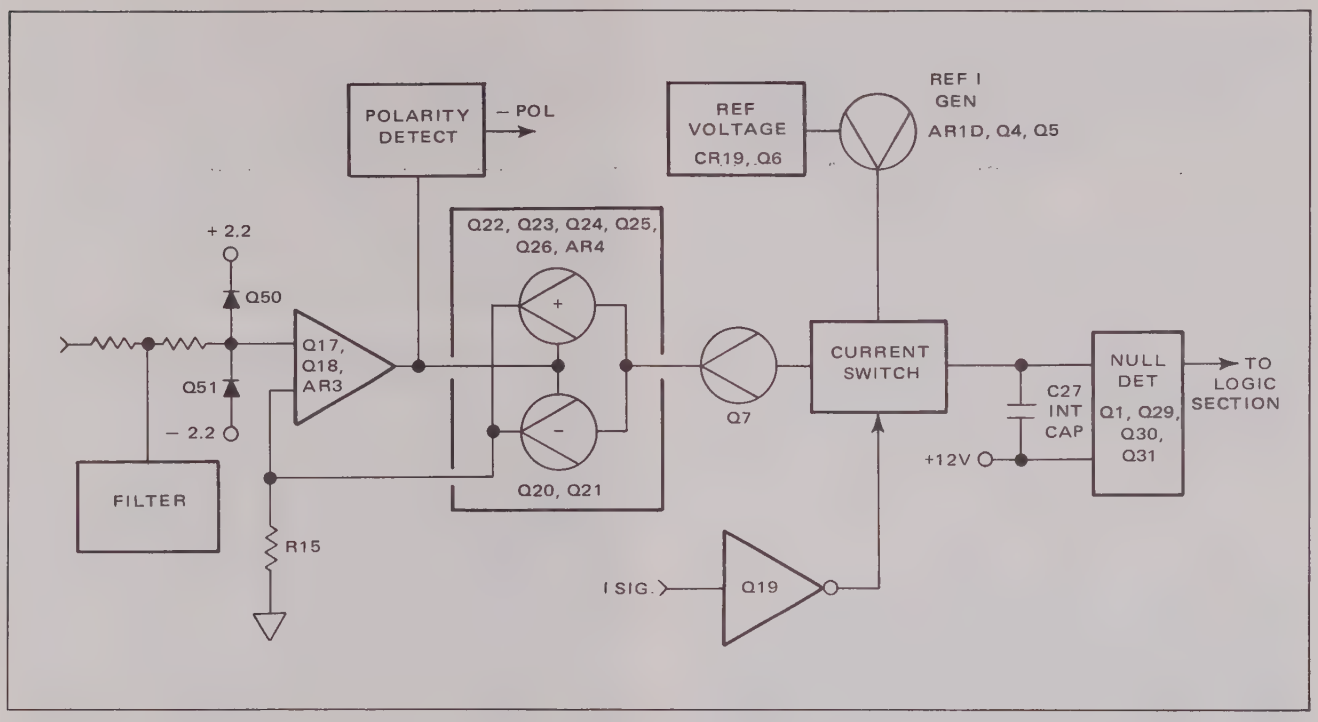

Figure 4.7 - Analog-to-Digital Converter

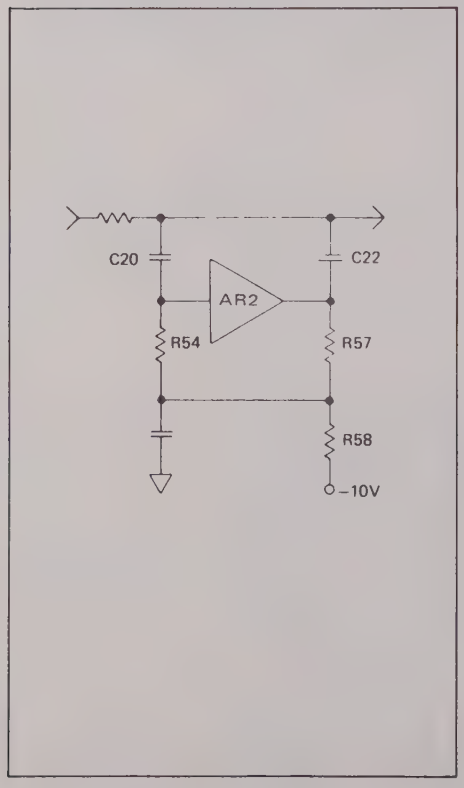

Figure 4.8 - Active Filter

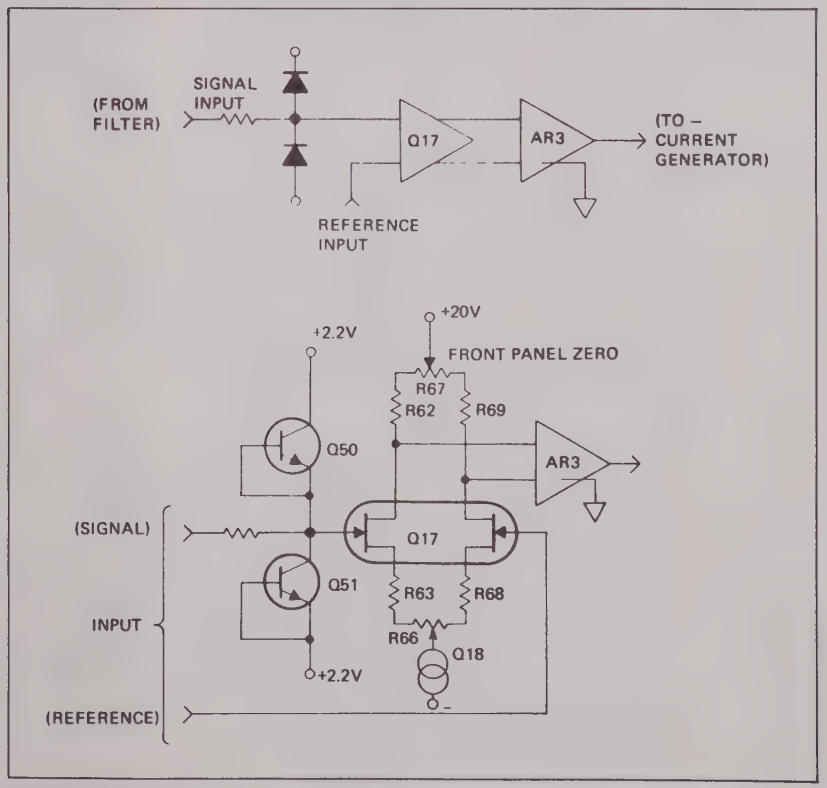

Figure 4.9 - Isolator

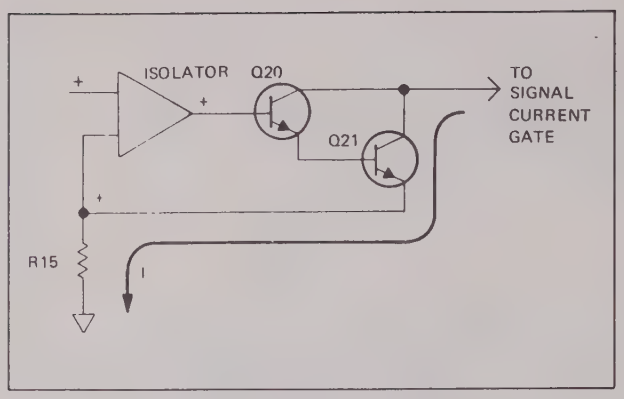

Figure 4.10 - Positive Signal Current Generator

4.23 Signal Current Generators.

4.24 The signal current generators operate with the isolator to produce a negative current proportional to the isolator input voltage. One converter operates only during positive inputs and the other only during negative inputs. Shown in figure 4.10 is a simplified schematic of the positive signal current generator. Transistors Q20 and Q21 are connected in a Darlington configuration and may be considered as a single, extremely high beta transistor. A positive level at the input of the isolator produces a high amplified, positive output to the base of Q20-Q21 causing it to conduct. Current flows through the current gain resistor causing a positive I-R voltage drop to develop across the resistor. The network stabilizes when the I-R drop is equal to the positive isolator input level. The current flowing through the resistor is equal (for all practical purposes) to the current drawn by the Q20-Q21 collector. The current through the current gain resistor varies directly with the isolator input, making the current drain (negative current) from Q20-Q21 directly proportional to the isolator input.

4.25 The negative signal current generator, shown in figure 4.11, is a "current mirror" in which the current in one circuit is accurately reproduced in another. Referring to the simplified drawing the current through the left leg (I) develops a voltage across R73 that is monitored by the + input of operational amplifier AR4. The amplifier output drives transistors Q25, Q26 to produce an equal amount of current through R79. R79 and R73 are equal making the current through the right leg (I') always track I of the left leg. A negative level at the input of the isolator causes transistor Q23 to conduct in turn causing transistors Q22, Q24 to conduct and generating a negative I-R drop across R15. The circuit stabilizes when the voltage across R15 is equal to the voltage input to the isolator. By the method explained above, the current through the right leg of the current mirror is equal to the current through R15 and therefore directly proportional to the isolator input level.

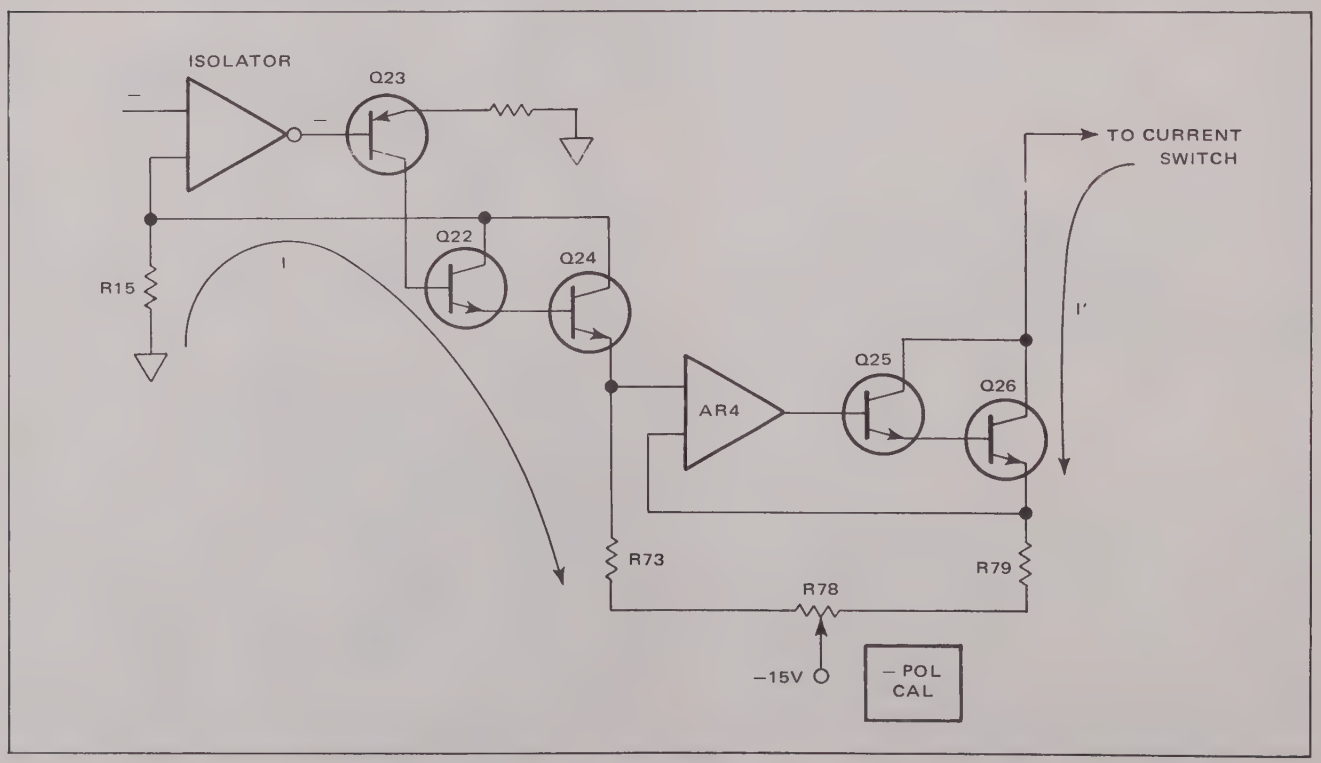

Figure 4.11 - Negative Signal Current Generator

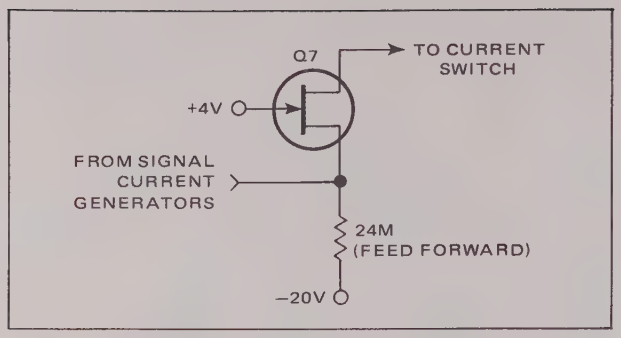

Figure 4.12 - Signal Current Buffer

4.26 Signal Current Buffer.

4.27 This circuit provides an effective buffer between the signal current generators and the integrator current switching circuitry. It provides a fixed potential for the signal current generators, eliminating any nonlinearities that might occur due to a change in collector potential. It also provides a fixed level above the –20 volt supply for the generation of a feed-forward current (figure 4.12).

4.28 Feed-Forward.

4.29 This 'circuit' consists of a fixed 24 Megohm resistor, connected between the –20 volt supply and the source of Q7. The current thus generated has the same effect on the integrator as a small signal input, eliminating ambiguity at zero or near zero inputs. This fixed offset is compensated in the digital section of the instrument.

4.30 Gain Circuit.

4.31 The gain circuit determines the amount of negative current generated by the signal current generators. Normally the gain is determined by R15 (2K) which produces a signal current output of 0.5 milliamps for a ±1 volt input to the isolator. On certain function-range combinations R15 is shunted by R19, lowering the combined resistance to 200 ohms. This increases the amount of current produced by the signal current generator by a factor of 10. Function/range combinations are given in table 4.1.

4.32 Reference Source.

4.33 The reference source provides two precise and stable 500 microamp currents; one is used by the ohms converter for developing the ohms measurement currents and the other is used for the reference integration portion of the measurement cycle.

4.34 The circuitry, shown in figure 4.13, consists of a reference voltage source and two identical current sources.

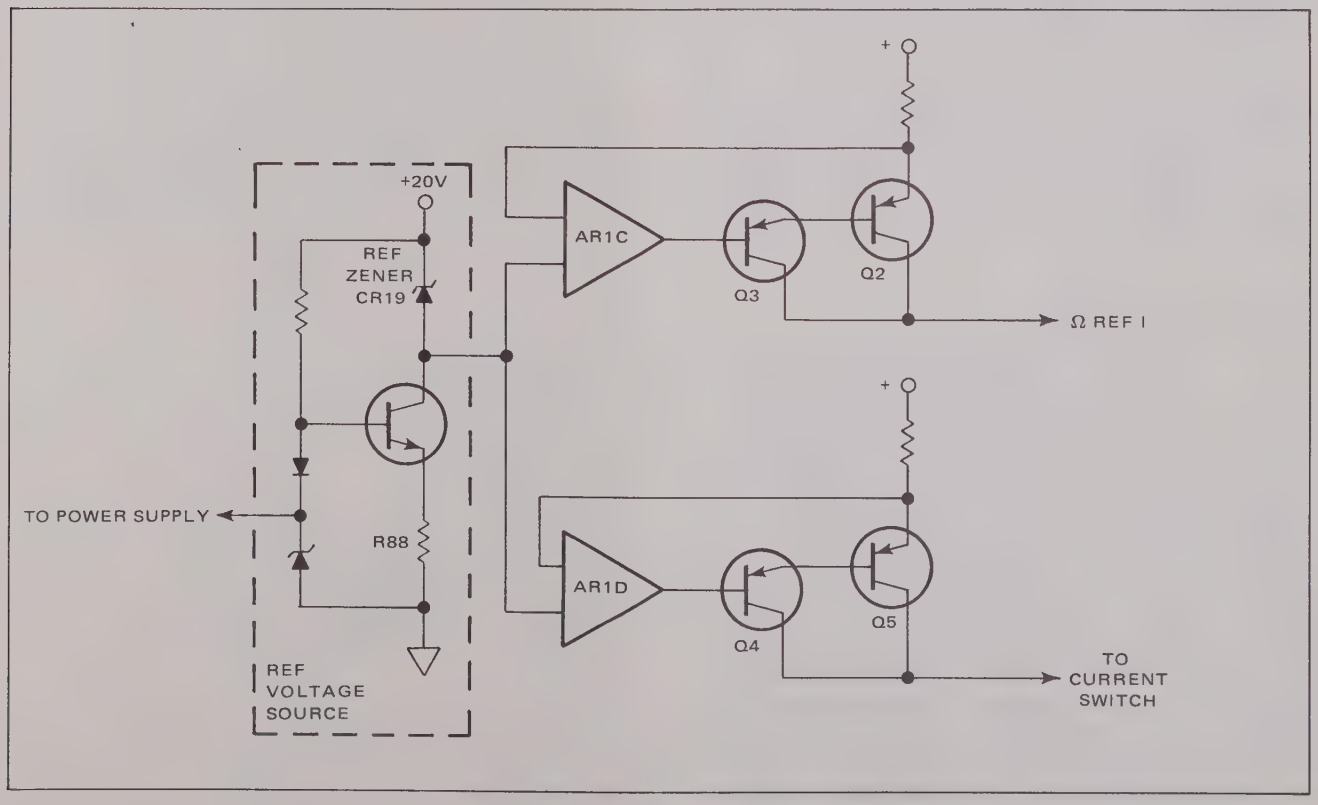

Figure 4.13 - Reference Source

The voltage source consists of reference zener CR19, supplied by a fixed and stable current selected for zero temperature coefficient. The zener voltage is used to reference the two current sources. The ohms reference current source consists of operational amplifier AR1C driving Darlington coupled transistors Q2, Q3. The amplifier causes the transistors to conduct until the voltage across R18 is equal to the zener reference. The value of R18 is adjusted to produce a precise 500 μA. The Reference Integration current source consists of operational amplifier AR1D, transistors Q4, Q5, and resistor R86. It operates in the same manner as the ohms reference source.

4.35 Current Switch.

4.36 The current switch controls the current fed into and out of the integrating capacitor C27. The switch (figure 4.14a) consists of five diodes and control transistor Q19.

4.37 During signal integration (figure 4.14b) the control transistor is conducting and the reference current flows through CR16 and the transistor to ground. At the same time, current from the signal current buffer draws current from the integrating capacitor.

4.38 During reference integration Q19 is nonconducting (figure 4.14c) causing current from the signal current buffer to be routed through CR15 and R75 to the + supply. At the same time, the reference current is routed through diode CR18 to the integrator capacitor.

4.39 At the completion of the reference integration period the DMM is in a WAIT condition. During this period (figure 4.14d) signal current buffer current continues to flow through CR15, R75 and reference current is routed through CR20 by a current sink provided by the null detector circuitry.

4.40 Integrator Circuit.

4.41 The integrator circuit converts the currents from the signal and reference generators into the dual slope ramp shown in figure 4.1. During the signal integration period, the integration capacitor (C27) is charged negatively by the negative current from the signal current generator flowing through the signal current gate. The capacitor is then discharged by the positive current from the reference current generator through the reference gate. As shown in figure 4.15, the capacitor is referenced to +12 volts by zener CR21. The positive level produces required bias for the null detector circuit and simplifies the design requirements for the current gate circuits. Resistor R87 provides a very high resistance shunt (100 Megohms), for C27. During the measurement cycle, the resistor does not affect the operation of the circuitry. When the instrument is placed in external HOLD (on DMM's equipped with Option 51) for

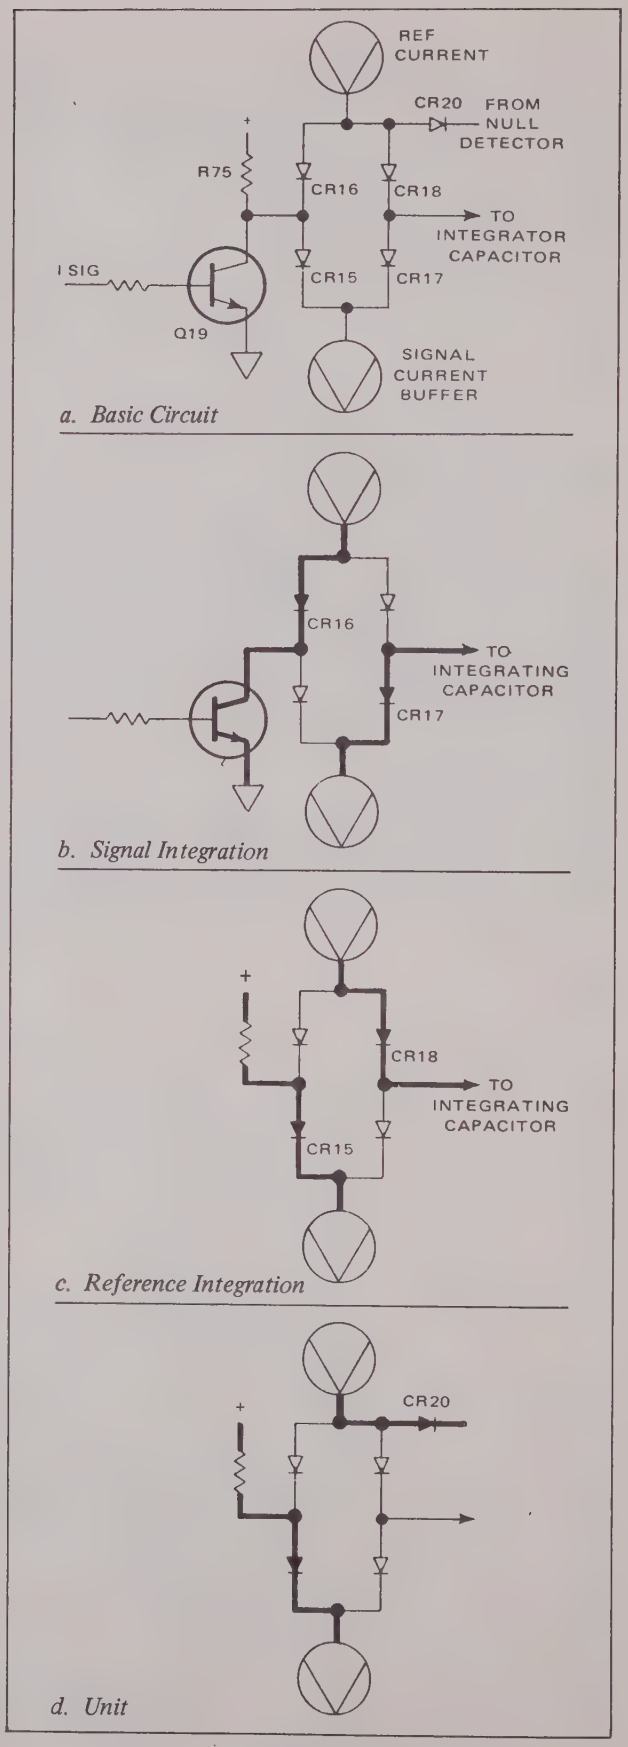

Figure 4.14 - Simplified Current Switch

long periods of time, the R87 operates in conjunction with the null detector and reference current to hold the capacitor at its operating level.

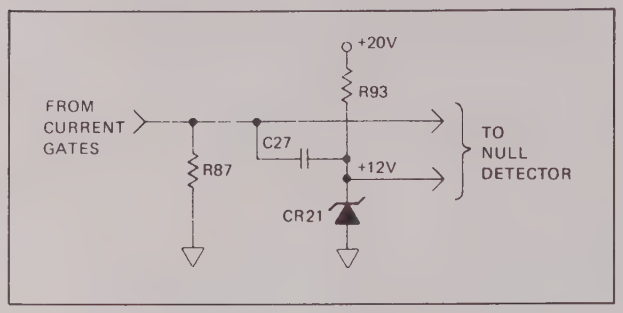

Figure 4.15 - Integrator

4.42 Null Detector.

4.43 The null detector monitors the voltage across the integrator capacitor, and converts the integration time period into a digital output. The null detector produces a false output whenever the voltage across the integrator capacitor is below a positive operating level determined by the null detector, and a true output when the capacitor voltage is equal to or above the operating level.

4.44 The null detector is shown simplified in figure 4.16. The input is a junction FET (Q29), providing an extremely high input impedance to the integrator circuit. The source of Q29 is biased at +12 volts by zener CR21 of the integrator circuit, holding the cutoff point well above ground. The signal appearing at the drain of Q29 is amplified and double inverted by transistor amplifier stages Q30 and Q31. The collector of Q31 acts as a current sink for diode CR20 of the current switch (see paragraph 4.39) and also drives inverter stage Q1. The output of Q1 is designated null detector. This line is at logic false during the integration period and then goes true remaining in this state until the next measurement cycle begins.

4.45 Polarity Detector.

4.46 The polarity detector monitors the output of the isolator and generates a true logic level whenever the isolator output is negative. The polarity detector output drives the polarity indicator circuitry of the digitizing and display portion of the DMM. The detector is a single stage inverting amplifier consisting of Q28.

4.47 DIGITIZING AND DISPLAY.

4.48 The digitizing and display section measures the time required for the reference integration period and converts the measured time into a digital display. The D/D section also determines the time required for the signal integration period and establishes the number of readings taken per second.

4.49 The DMM readout voltage supply is an unfiltered, half-wave +9 volts. The readout therefore is illuminated 60 times a second and only during each half cycle of the line voltage. The measurement cycle is synchronized with the line frequency and each measurement sequence takes place during a readout blank period (less than 8.3 ms). The instrument takes 6 measurements each second. The

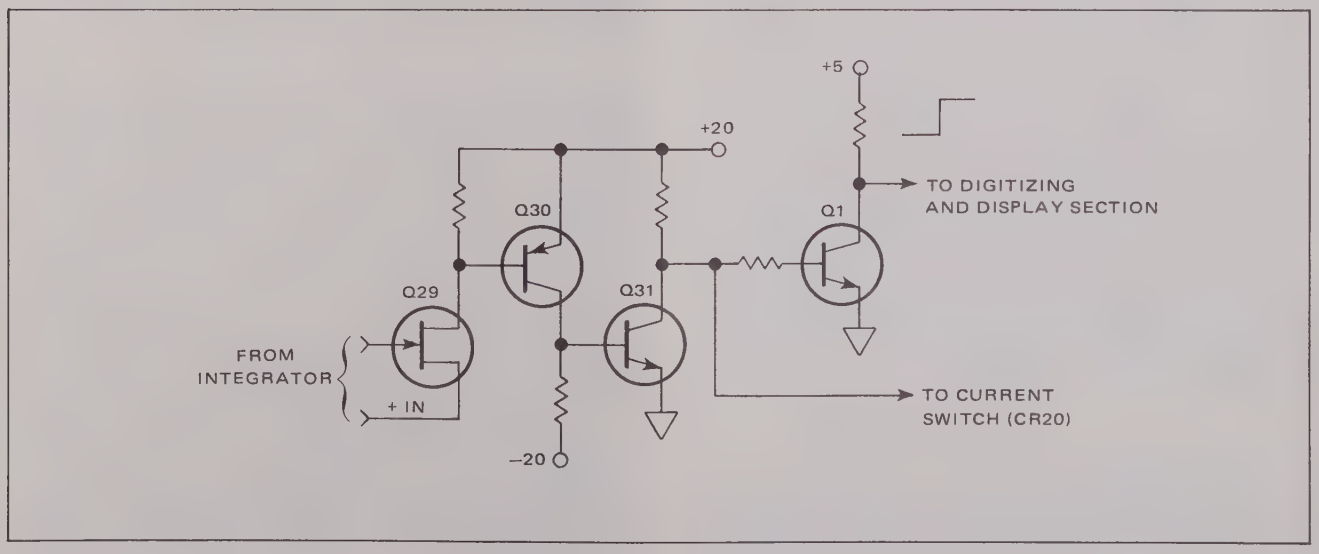

Figure 4.16 - Null Detector

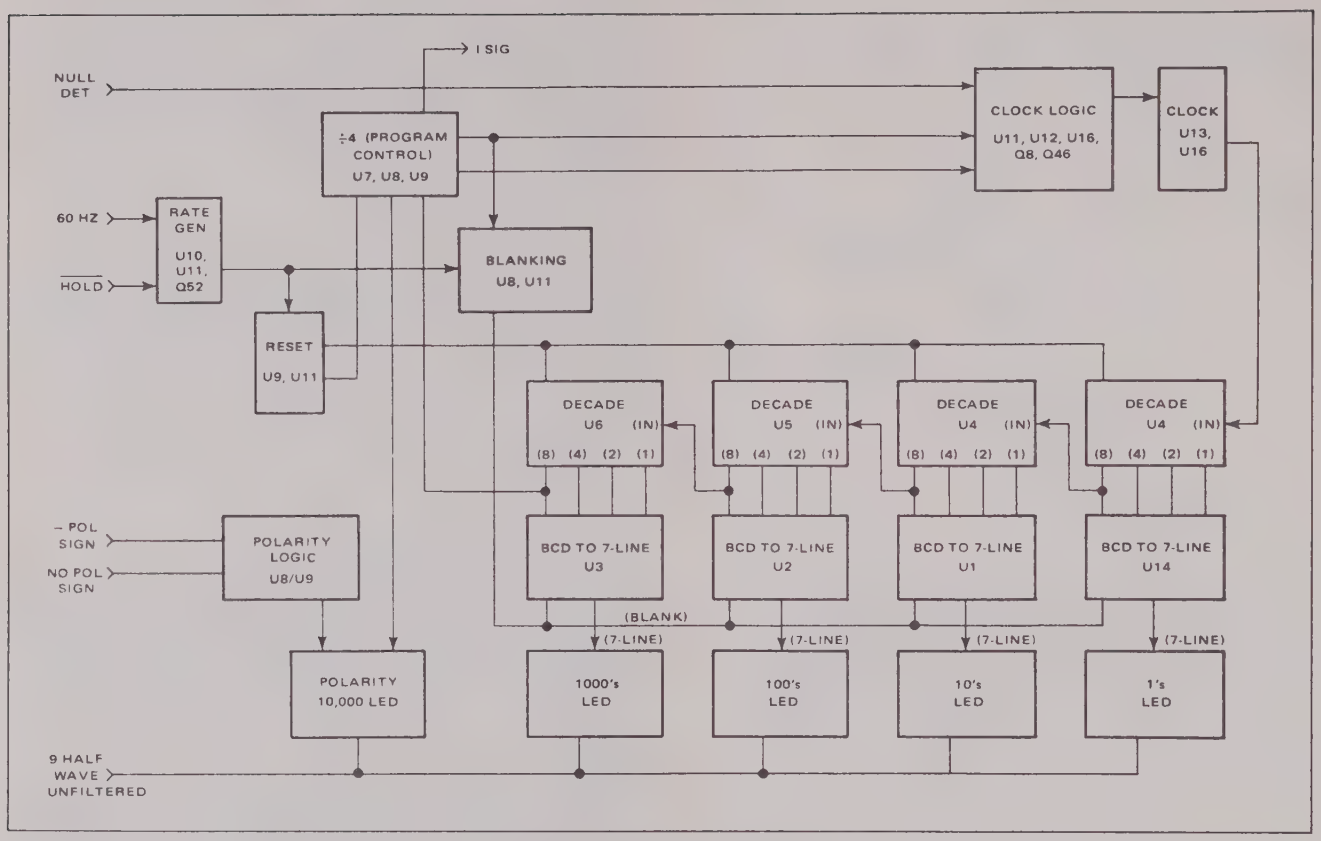

Figure 4.17 - Digitizing and Display

Digitizing and Display section (shown simplified in figure 4.17) consists of a binary counter, driven by a clock-oscillator. The counter advances at the clock rate (approximately 3.4 MHz) from 00000 to 39,999 and then overflows to 00000. The clock runs during the entire integration cycle (T0 - T2) and at the start of a measurement, the counter is set to 30,000. During the signal integration period (T0 - T1) the counter advances from 30,000 until overflow at which time the signal integration period is terminated. The time required for the counter to advance from 30,000 to 00000 (10,000 clock cycles) determines the signal integration period. The counter continues from 00000 at the clock rate until the completion of the reference integration period (T1 - T2). At this time the clock is stopped. The position of the counter is converted from binary data to 7-segment data and displayed by the readout LEDs.

4.50 Rate Generator.

4.51 The rate generator controls the number of readings taken per second and synchronizes the start of the measurement period with the line frequency. Internal readings are taken at a rate of 6 per second; external readings (Option 51 only) can be taken up to 6 per second. A reading is initiated by the negative going edge produced by the rate generator.

4.52 The circuitry, shown simplified in figure 4.18, consists of a Schmitt trigger, a divide-by-ten circuit, and an inverter. The Schmitt trigger consisting of U11E, U13B converts a 25 volt, 60 Hz signal from the power supply to a 60 Hz square wave. The Schmitt output drives decode divider U10 wired to produce a symmetrical 6 Hz square wave output. Although only output A (pin 12) is used, outputs B, C, and D are shown in the table for reference. The $\overline{\text{HOLD}}$ from the Option 51 circuitry (when the instrument is so equipped) is inverted by U11D and controls one of the R9 inputs of U10. When $\overline{\text{HOLD}}$ line is at logic true, U10 is unaffected; when $\overline{\text{HOLD}}$ line is at logic false (Option 51 only) the U10 is reset to 0-0-1-1 and stays there as long as $\overline{\text{HOLD}}$ remains at logic false. When HOLD line goes to logic true, the next pulse from the Schmitt trigger advances U10 to 0-0-0-0, and a new measurement is started.

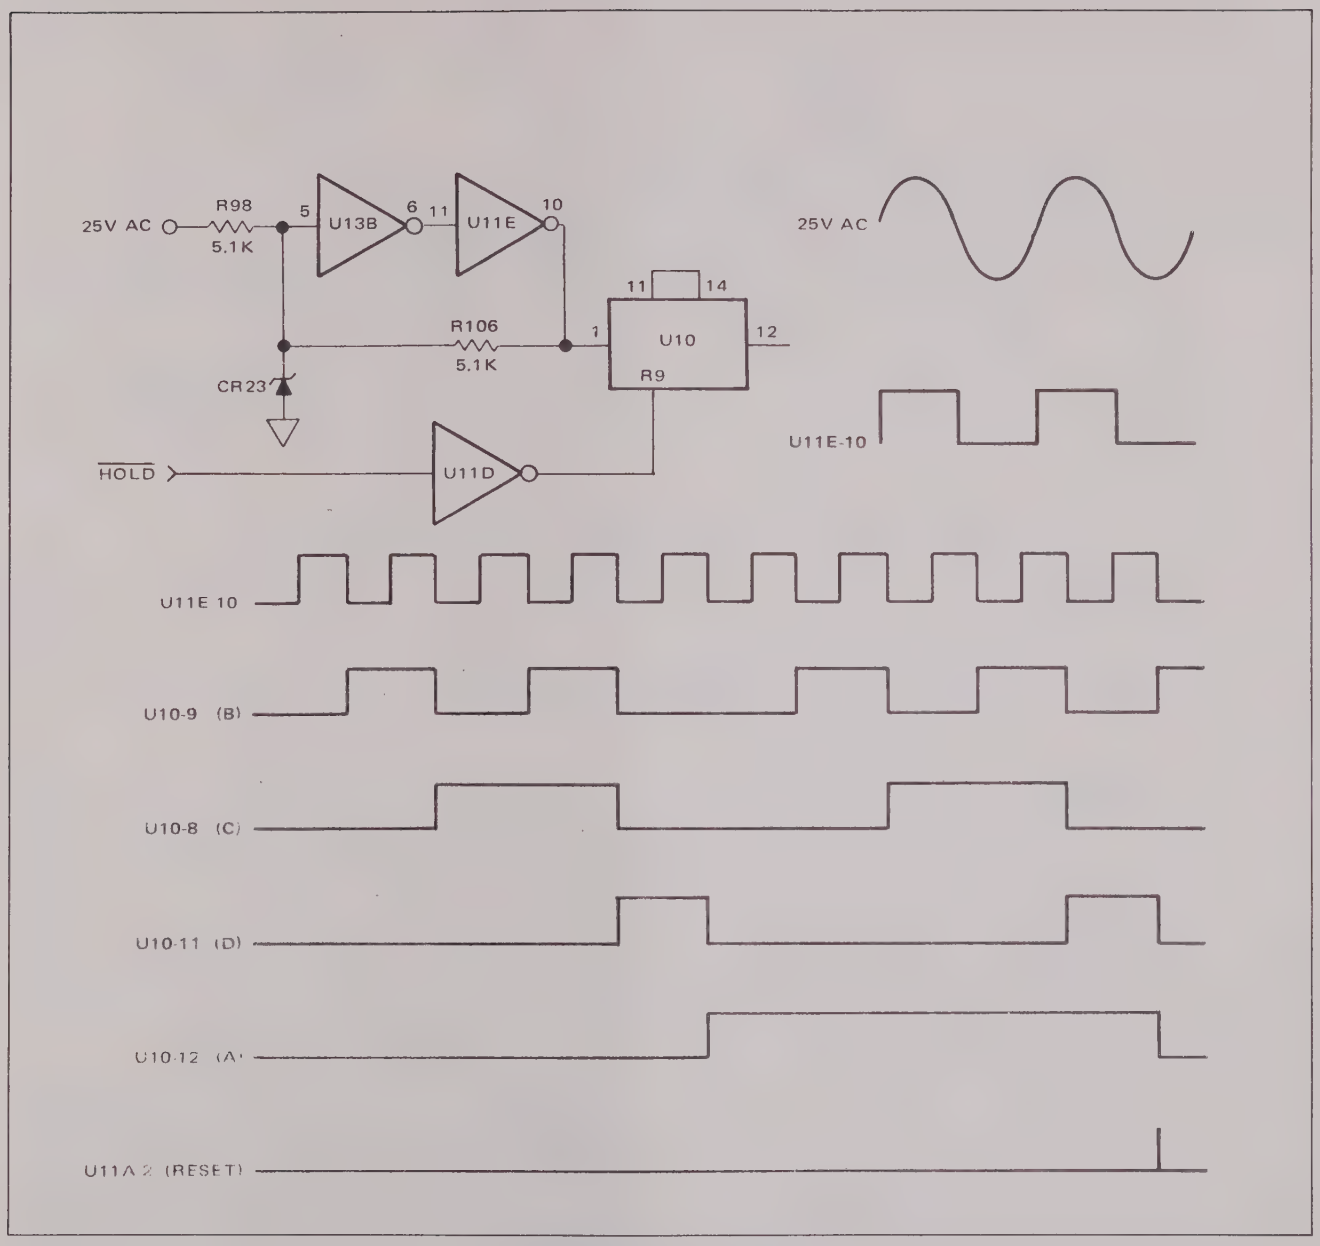

Figure 4.18 - Rate Circuit

4.53 Reset.

4.54 The reset pulse sets the counter to 30,000 and I SIGNAL circuitry of the Program Control to true. The reset consists of a differentiator circuit and two inverters (U11A and U9C). The differentiator converts the negative going edge of the rate generator output to a negative going pulse. The negative pulse is inverted by U11A to a positive pulse and resets the four binary counters U4, U5, U6, and U15. The reset pulse is inverted by U9C and presets the 30,000 bit F/Fs U7A and U7B. The $\overline{\text{RESET}}$ pulse is also used to start the clock and by the Option 51 circuitry.

4.55 ÷4/Program Control.

4.56 This circuitry produces the 10,000 bit, generates the I SIG control signal for the current gate, controls the overload circuitry, and provides data for the clock logic. The circuitry, shown simplified in figure 4.19, consists of two D flip flops (U7A, U7B) wired in a ÷4 configuration, two

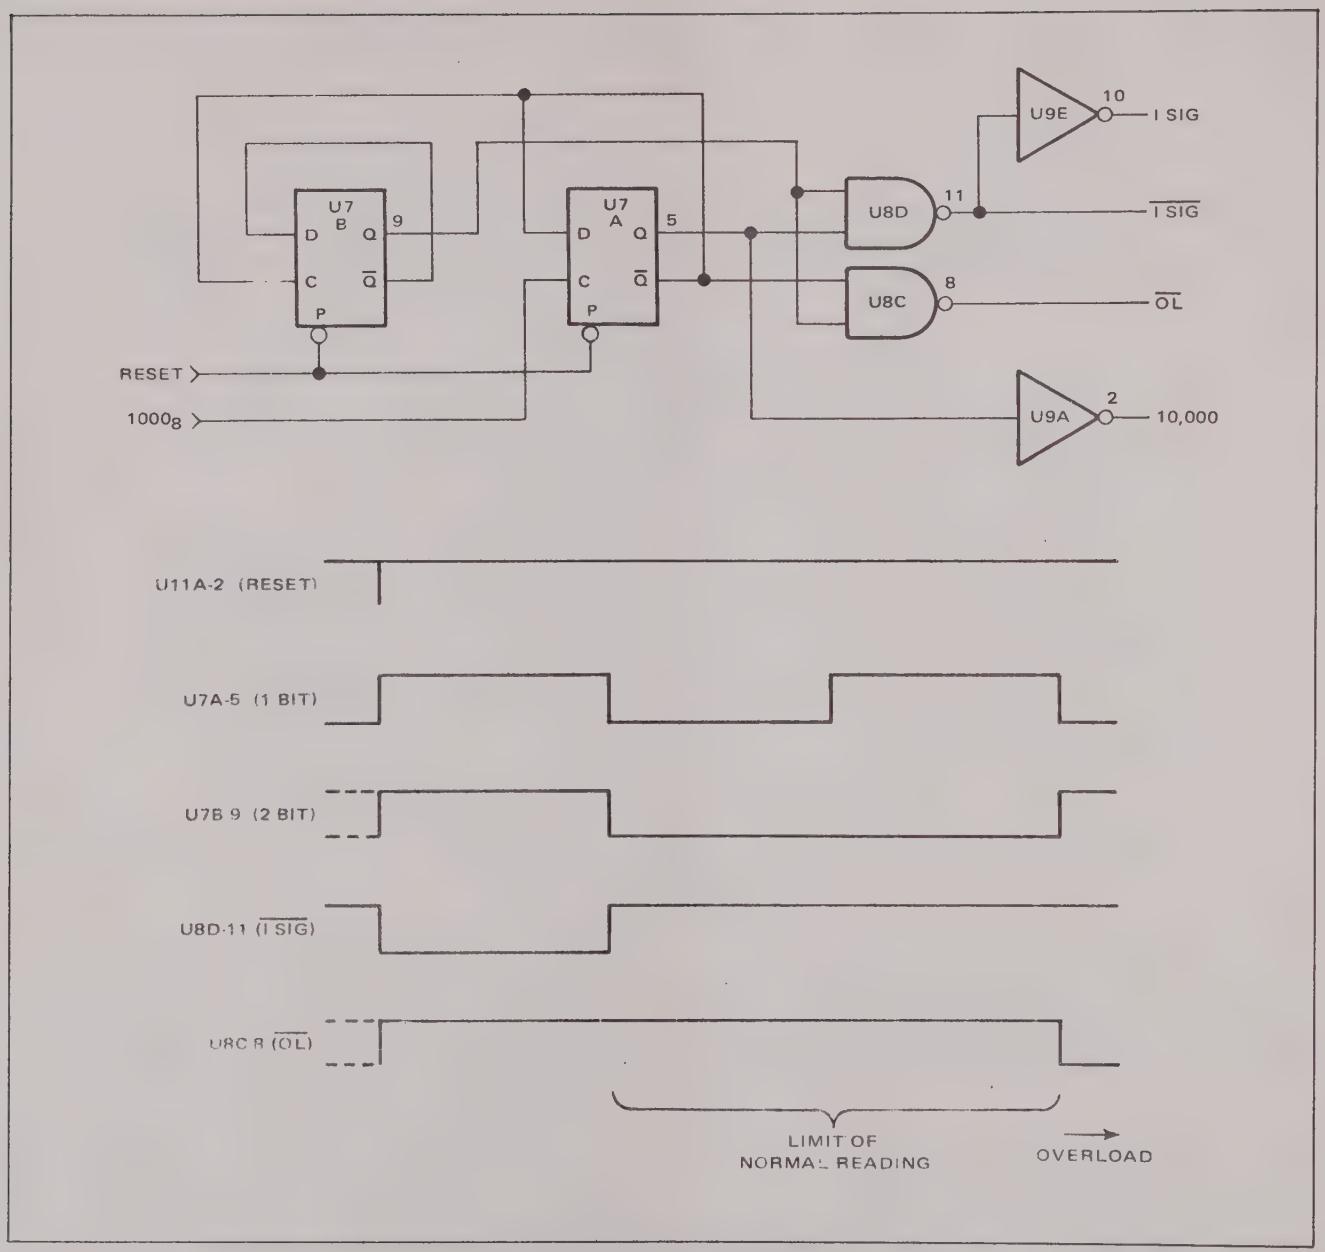

Figure 4.19 - ÷4 Program Control

NAND gates and two inverters. The ÷4 circuit is driven by the inverted 8 bit of the 1000's decade and generates the output shown. The outputs are decoded by the NAND gates to generate $\overline{\text{I SIG}}$ and $\overline{\text{OL}}$. $\overline{\text{I SIG}}$ is inverted by U9E for use by the integrating circuitry.

4.57 Clock Logic.

4.58 The clock logic generates the control signal for enabling the clock circuit during integration and generates the required delay in the clock operation between signal and reference integration to compensate for the feed-forward circuit (see paragraph 4.29). The clock logic circuitry and the major timing relationship between the various components is shown in figure 4.20.

4.59 The $\overline{\text{I SIG}}$ line is fed to both the 'set' input of the R/S F/F and the 'B' input of the one-shot. At the beginning of a measurement cycle, $\overline{\text{I SIG}}$ goes false setting the RS flip flop Q output true and the output of NAND gate U12D false. This enables the clock oscillator circuit to run. At the end of the signal integration period the

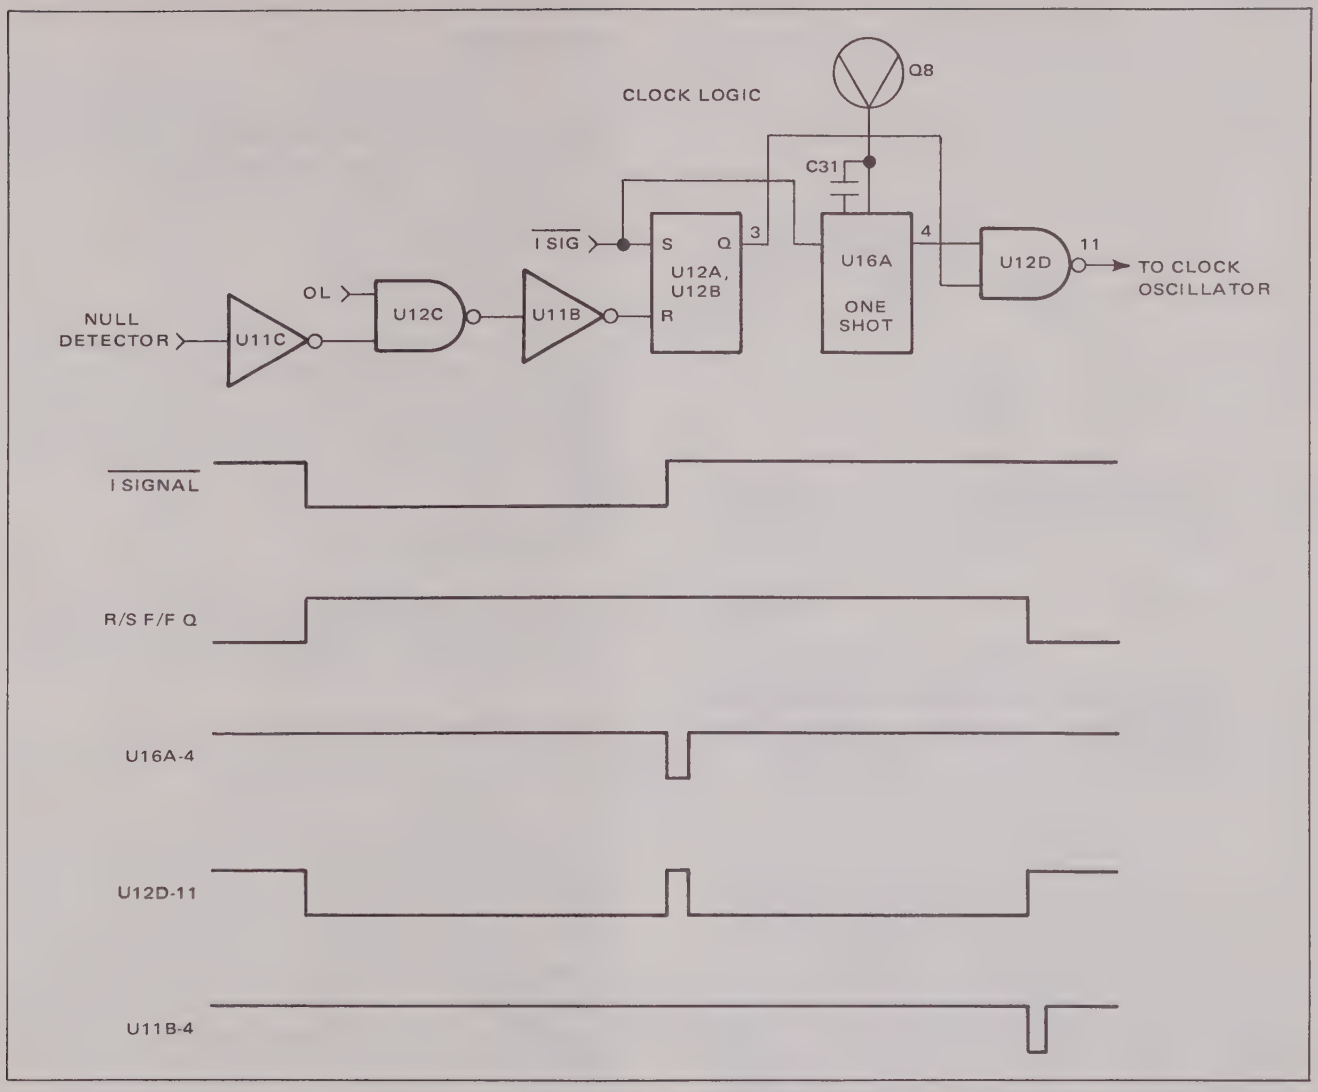

Figure 4.20 - Clock Logic

$\overline{\text{I SIG}}$ line goes true causing U16A to generate a 5 μs negative going pulse and inhibiting the clock for this period of time. At the end of the measurement cycle, either the null detector output, inverted by U11C or $\overline{\text{OL}}$ is routed through U12C and U11B to the reset side of the R/S F/F. The flip flop is reset and the clock is inhibited until the start of the next measurement cycle.

4.60 Clock.

4.61 The clock advances the counter and operates only during the measurement cycle. The circuit, shown in figure 4.21, consists of a one-shot, a delay circuit, and a clock starting circuit. The one-shot (U16B) operates in conjunction with the delay (U13A, U13C) to produce a near symmetrical square wave output. The period of the clock is determined by C23, R58 and C41, R102, producing a frequency of approximately 3.4 MHz. The clock is controlled

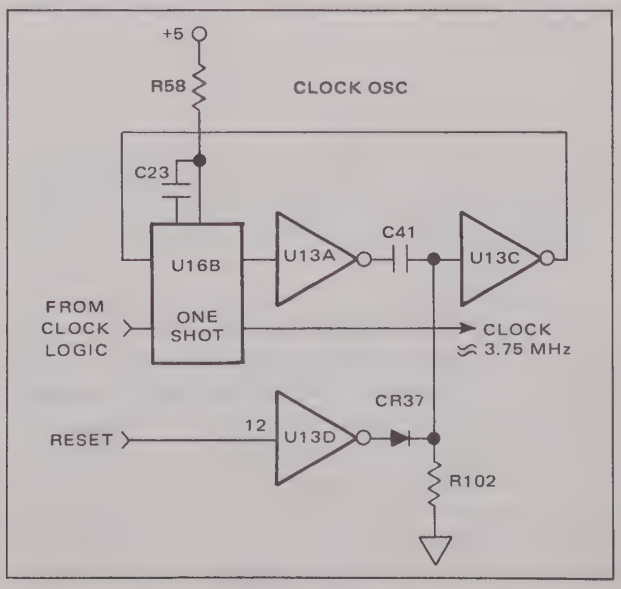

Figure 4.21 - Clock

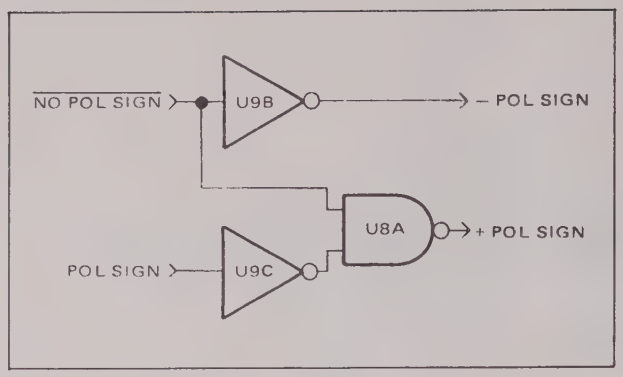

Figure 4.22 - Polarity Logic

by a clock enable line from the clock logic. Starting of the clock at the beginning of a measurement cycle by a RESET pulse applied to the input of U13C through CR37.

4.62 Counter.

4.63 The counter is a clock driven 4 decade plus over-range bit, BCD counter that determines the length of the Signal Integration period, measures the length of the Reference Integration period, and generates the value of the input signal in BCD form for the BCD to 7-line converter.

4.64 At the beginning of a measurement cycle, the counter is set to 30,000 and the clock is started. The signal integration period is begun and the counter advances from 30,000 to 39,999 and overflows to 00000. When the counter overflows, the Signal Integration period terminates and the Reference Integration period begins. The counter continues to count until the Null Detector line goes false indicating the completion of the Reference Integration period or the counter again overflows indicating an overload condition.

4.65 BCD to 7-Segment Converters.

4.66 The BCD to 7-segment converters transform the setting of the counter from BCD form to 7-segment form for driving the LED readouts of the 1's, 10's, 100's, and 1000's decades.

4.67 Overload.

4.68 The overload causes the display to blank at a 6 per second rate when the instrument's input signal exceeds the maximum allowable for the function and range selected. The circuitry consists of inverter U11F and NAND gate U8B. The blanking is achieved by enabling the 6 Hz signal from the rate generator to reach the blanking inputs of the BCD to 7-segment converters. Gate U8B is controlled by the inverted $\overline{OL}$ output of the Program Control circuitry.

4.69 Polarity.

4.70 The polarity circuit controls the polarity portion of the 10,000/Polarity LED. The circuitry is shown in figure 4.22, coding is indicated with the figure.

4.71 Power Supply.

4.72 TRANSFORMER.

4.73 The power supply is provided with a double shield, dual primary transformer. The primaries can be connected in parallel or series for 115 or 230 volt operation by the placement of jumpers on the main circuit board. Two center tapped secondaries provide 9-0-9 volts and 25-0-25 volts.

4.74 SUPPLY OUTPUTS.

4.75 The power supply circuitry is shown in simplified form in figure 4.23. The outputs and circuitry used to generate each are described below:

+9V Half Wave. This signal is taken from diode CR26 and is used to power the LED displays.

+5 Volt Regulated. A +9 volt full wave filtered voltage is used to power this circuitry, consisting of an operational amplifier AR5 driving an emitter follower power stage Q34. The circuitry is wired in a voltage gain of one configuration. A positive five volts to the noninverting input from the reference voltage zener, results in a highly stable five volt output. The +5 volt regulated supply is used by the integrated circuits of the instrument (grounded portion of the Option 51 excepted).

25 Volts AC. The 25 volt AC signal is taken from one side of the center tapped 25-0-25 secondary winding and is in-phase with the +9V half wave output. The 25 volt AC signal is used to synchronize the Rate Generator.

+20 Volts Regulated. The circuitry consists of power transistor Q36, connected in an emitter follower configuration driven by the collector of common emitter coupled transistor Q37. The output of the supply is taken from the emitter of Q36 which also supplies current to reference zener CR31 (7.5V) and voltage divider R120/R121. The emitter of Q37 is referenced to the zener voltage and the base of Q37 monitors the output of the voltage divider providing the required regulation. A plus 25 volts full wave filtered voltage level is supplied to the collector of Q36 and collector resistor R114.

–20 Volts Regulated. This circuit consists of transistors Q39 and Q40 and zener CR32 and operates in the same

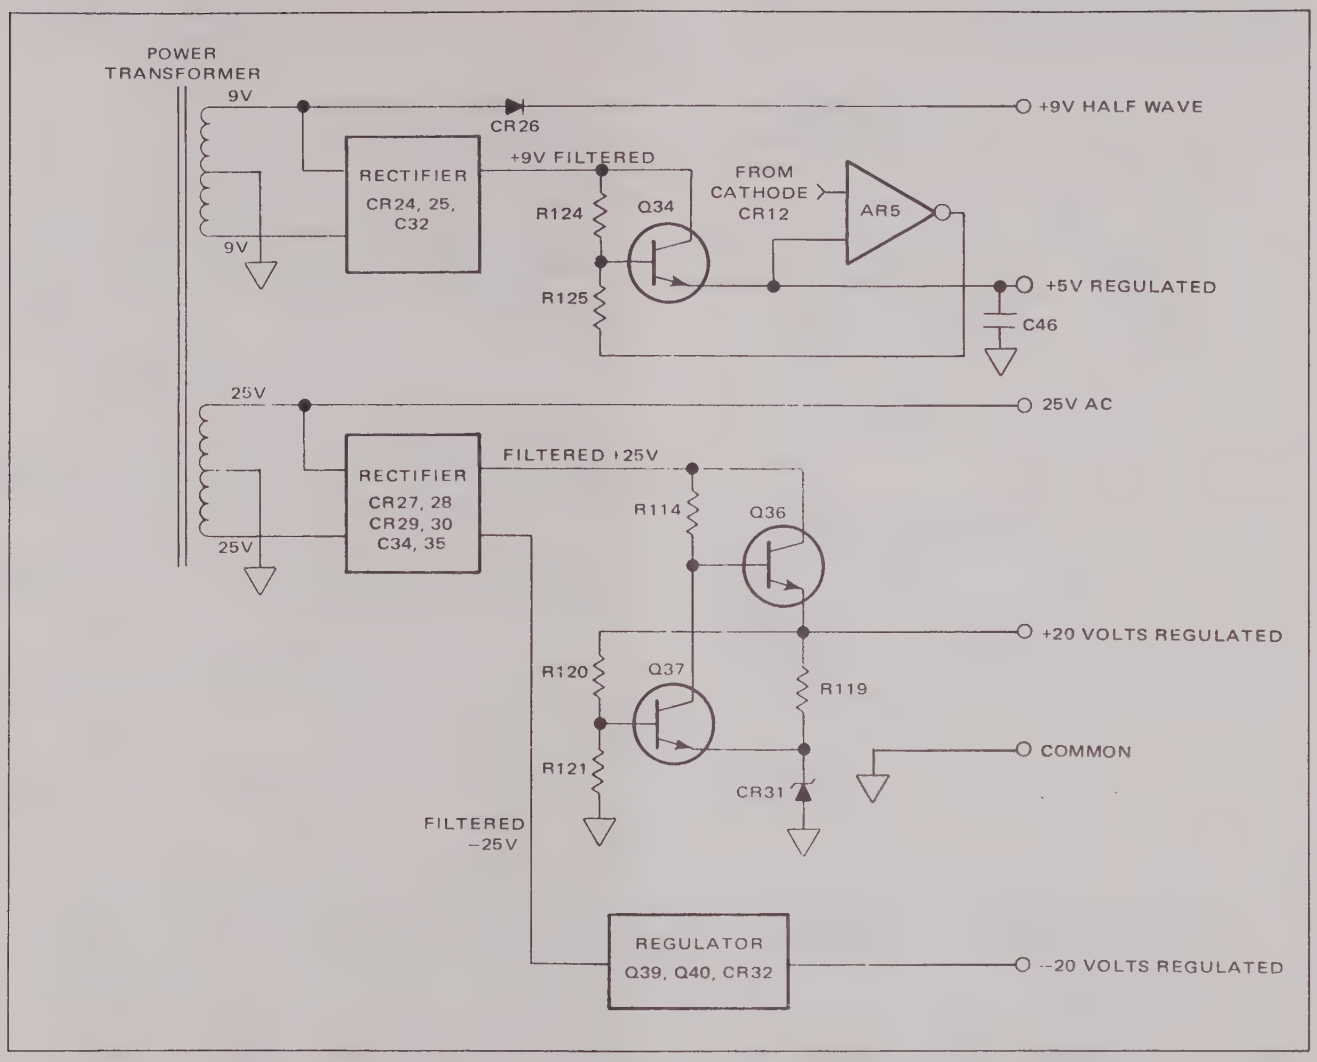

Figure 4.23 - Power Supply

manner as the +20 volt regulated supply. Both supplies provide power levels for use by the analog circuitry of the instrument.

4.76 Display Board.

4.77 The display board contains the LED displays and necessary current limiting resistors all mounted on a single circuit board and mounted in connector J1 on the main circuit board.

4.78 Fuse Board.

4.79 The fuse board is a printed circuit subassembly mounted to the back of the function switch. The fuse board contains a 2 Amp fuse wired in series between the Ohms/Amps terminal of the instrument and unprotected portions of the measurement circuitry. Also connected on the circuit side of the fuse is a diode clamp network designed to conduct at slightly more than ±2 volts.

SECTION 5 CALIBRATION

5.1 INTRODUCTION AND DESCRIPTION.

5.2 This section covers the calibration of the Dana Model 4200 Digital Multimeter and is designed to return the instrument to its published specification for indefinite periods of time. The procedure consists of applying known input levels and adjusting the appropriate component for the indicated value.

5.3 Specification Validation.

5.4 To determine the need for calibration or to check the accuracy of the instrument following calibration, refer to Section 3 of this manual.

5.5 CALIBRATION EQUIPMENT REQUIREMENTS.

5.6 A list of equipment required to perform the calibration procedure is provided in table 5.1.

5.7 DISASSEMBLY.

5.8 Disassembly of the instrument case is as follows:

a. Place instrument on a flat level surface with the bail extended towards the front of the instrument.

b. Remove the two screws at the top of the back panel and the two screws at the top of the side panels.

c. Lift the top cover straight up to avoid bending the decorative metallic strips on the sides of the instrument.

5.9 Preliminary Calibration.

5.10 The following steps are performed prior to making any adjustments to the instrument.

a. Check the line voltage requirements stamped on the serial tag located on the back of the instrument and

Table 5.1 - Required Equipment

NOTE

Minimum use specifications are the principal parameters required for performance of the calibration, and are included to assist in the selection of alternate equipment, which may be used at the discretion of the calibrating activity. Satisfactory performance of alternate items shall be verified prior to use. All applicable equipment must bear evidence of current calibration.

Item	Minimum Use Specifications	Calibration Equipment
DC Voltage Standard	Adjustable, .003% Accuracy	FLUKE 332B
AC Voltage Standard	Adjustable 1V RMS – 500V RMS, 400 Hz and 15 kHz, .06% accuracy	HP 745/746
Voltage to Current (E to I) Converter	Adjustable to 2000 mA, .05% accuracy	Valhalla Scientific Model 2500
Resistance Standards	100Ω Known to .03% 1 KΩ, 10 KΩ } Known to .01% 10 MΩ Known to .1%	ESI SR-1 Series
Tools: Phillips #1 screwdriver, insulated blade adjustment tool	—	—

insure that the available power source is the same. Connect the instrument to the line and set the power switch to ON. Allow at least 30 minutes for the instrument to temperature stabilize.

b. Refer to the operating manuals provided with the test equipment to be used and provide appropriate warmup time.

c. Set the instrument controls as follows:

FUNCTION:	Volts DC
RANGE:	200 mV
INPUT:	Shorted (Red to Black)

5.11 Calibration Points.

5.12 The locations of the calibration points as called for in the procedure are indicated in figure 5.1.

5.13 CALIBRATION PROCEDURE.

5.14 The following steps are for zeroing the instrument prior to range calibration.

a. Set potentiometer R99 for maximum reading, R104 for minimum reading (set pot to mechanical limit), and R113 fully counterclockwise. Switch the range control between the 200 mV and 2V positions and adjust R66 (front panel OFFSET) for the same number of digits in each range in the positive polarity (for example, +16 digits in the 200 mV range and +16 digits in the 2V range).

b. Select the 2V range. Adjust R113 clockwise until the polarity sign on the front panel changes polarity and note the position of potentiometer R113. Adjust R113 counterclockwise until the polarity sign on the front panel changes and note the position of R113. Set R113 to the mechanical center of these two points (i.e., set R113 at the center of hysteresis). Disregard value of display reading.

c. Remove short on front panel input terminals and apply +1.0 millivolts to the input. Adjust R99 (feed forward adjustment) for a reading of +9 digits.

d. Reverse polarity of the input signal (−1.0 millivolts) and adjust R104 for a reading greater than nine digits. Adjust R104 in the opposite direction until exactly 9 digits appear on the readout. Reverse polarity and verify a reading of +9 digits.

e. Remove 1.0 mV from input and replace jumper. Verify a reading of all zeros on both the 200 mV and 2V ranges.

f. Remove jumper and apply an input of +100 μV. Select the 200 mV range and verify a reading of +9 digits; apply −100 μV and verify a reading of −9 digits. If not, repeat steps a through e.

5.15 The remainder of the procedure consists of a separate table for each function. After the function and range have been selected, the component listed in the ADJUST column is adjusted for the indicated display value. Where no adjustment is indicated, the calibration step is for verification of proper instrument operation.

5.16 At the completion of the procedure, remove power cord from line. Reassemble case by reversing the procedure of paragraph 5.7.

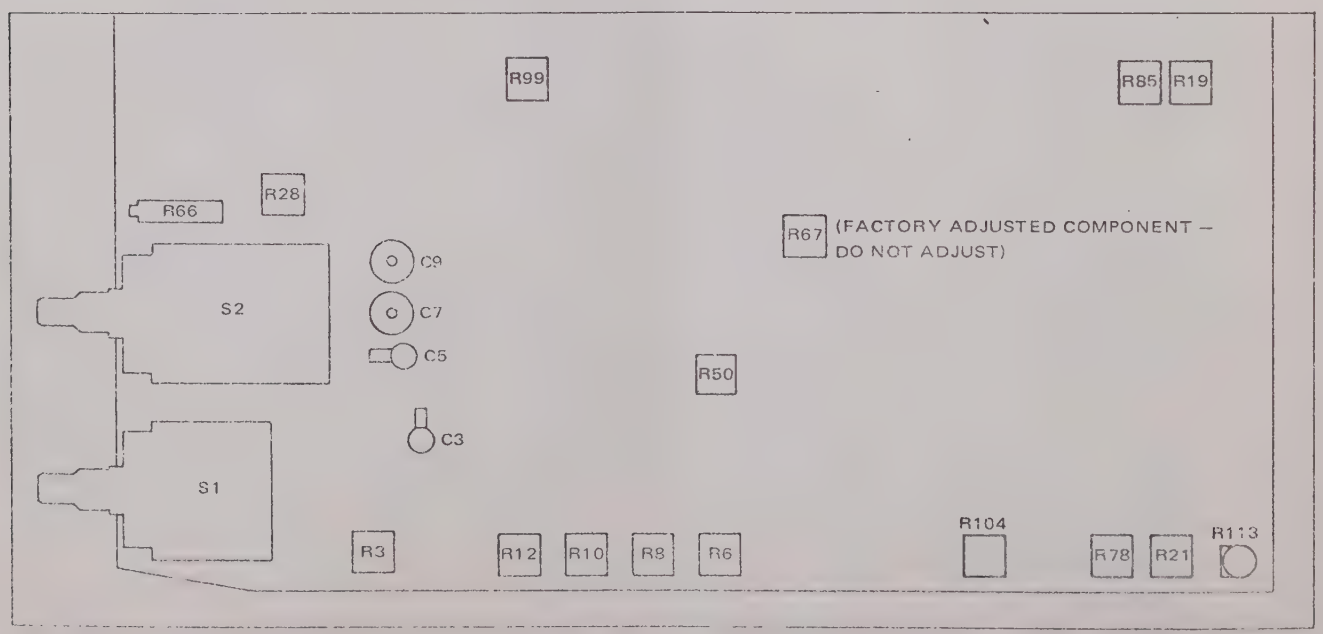

Figure 5.1 - Calibration Points

Table 5.2 - DC Calibration

FUNCTION	RANGE	INPUT	ADJUST	DISPLAY	REMARKS
VDC	200 mVDC	OV	R66	00.00	Polarity Indicators flashing
VDC	2 VDC	+ 1.900 V	R85	+1.9000	Plus full scale adjust
VDC	2 VDC	- 1.900 V	R78	−1.9000	Minus full scale adjust
VDC	200 mVDC	+ 190.0 mV	R28	+190.00	Millivolts full scale adjust
VDC	200 mVDC	- 190.0 mV	—	−190.00	±1 digit
VDC	20 VDC	+ 19.00V	R6	+19.000	—
VDC	20 VDC	- 19.00V	—	−19.000	—
VDC	200 VDC	+ 190.0V	R8	+190.00	—
VDC	200 VDC	- 190.0V	—	−190.00	—

Table 5.3 - AC Calibration

FUNCTION	RANGE	INPUT	ADJUST	DISPLAY	REMARKS
VAC	20 VAC	19.00V RMS	R50	19.000	@ 400 Hz
VAC	2000 VAC	300.0V RMS	C3	300.00	@ 15 kHz
VAC	2 VAC	1.900V RMS	C5	1.9000	@ 15 kHz
VAC	20 VAC	19.00V RMS	C7	19.000	@ 15 kHz
VAC	200 VAC	190.0V RMS	C9	190.00	@ 15 kHz

Table 5.4 - DC Current Calibration

FUNCTION	RANGE	INPUT	ADJUST	DISPLAY	REMARKS
MADC	2000 mADC	+ 1900 mA	R3	+1900.0	Milliamp full scale adjust
MADC	2000 mADC	- 1900 mA	—	−1900.0	± 2 digits

Table 5.5 - Resistance Calibration

FUNCTION	RANGE	INPUT	ADJUST	DISPLAY	REMARKS
Ohms	20 Kohm	10 Kohm	R19	10.000	± 1 Digit
Ohms	20 Mohm	10 Mohm	R21	10.000	± 1 Digit
Ohms	2 Kohm	1 Kohm	R10	1.0000	± 1 Digit
Ohms	200 Ohm	100 Ohm	R12	100.00*	± 1 Digit *(Short input leads, note digits offset, and adjust the display for the standard plus the offset)

SECTION 6 DRAWINGS

Figure	Title	Page
6.1	Layout, Digital Multimeter (400975)	6-2
6.2	Layout, Module (403868)	6-3
6.3	Layout, Main Logic (403867)	6-4
6.4	Schematic, Main Logic	6-5/6-6/6-7
6.5	Schematic, Power Supply	6-8
6.6	Layout, Display (403866)	6-9
6.7	Schematic, Display	6-9
6.8	Layout, Fuse Board (403859)	6-10
6.9	Schematic, Fuse Board	6-10
6.10	Assembly, Data Output Option 51 (400976)	6-11
6.11	Layout, Data Output (403909)	6-12
6.12	Schematic, Data Output	6-13

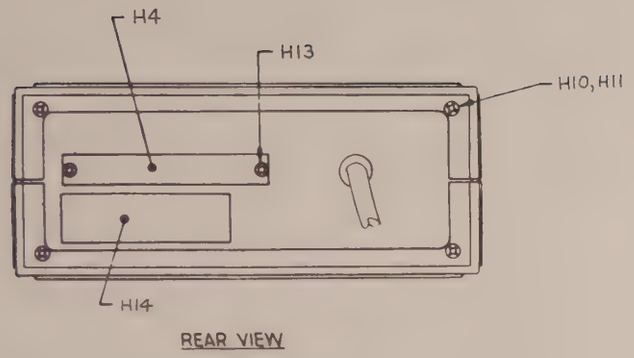

REAR VIEW

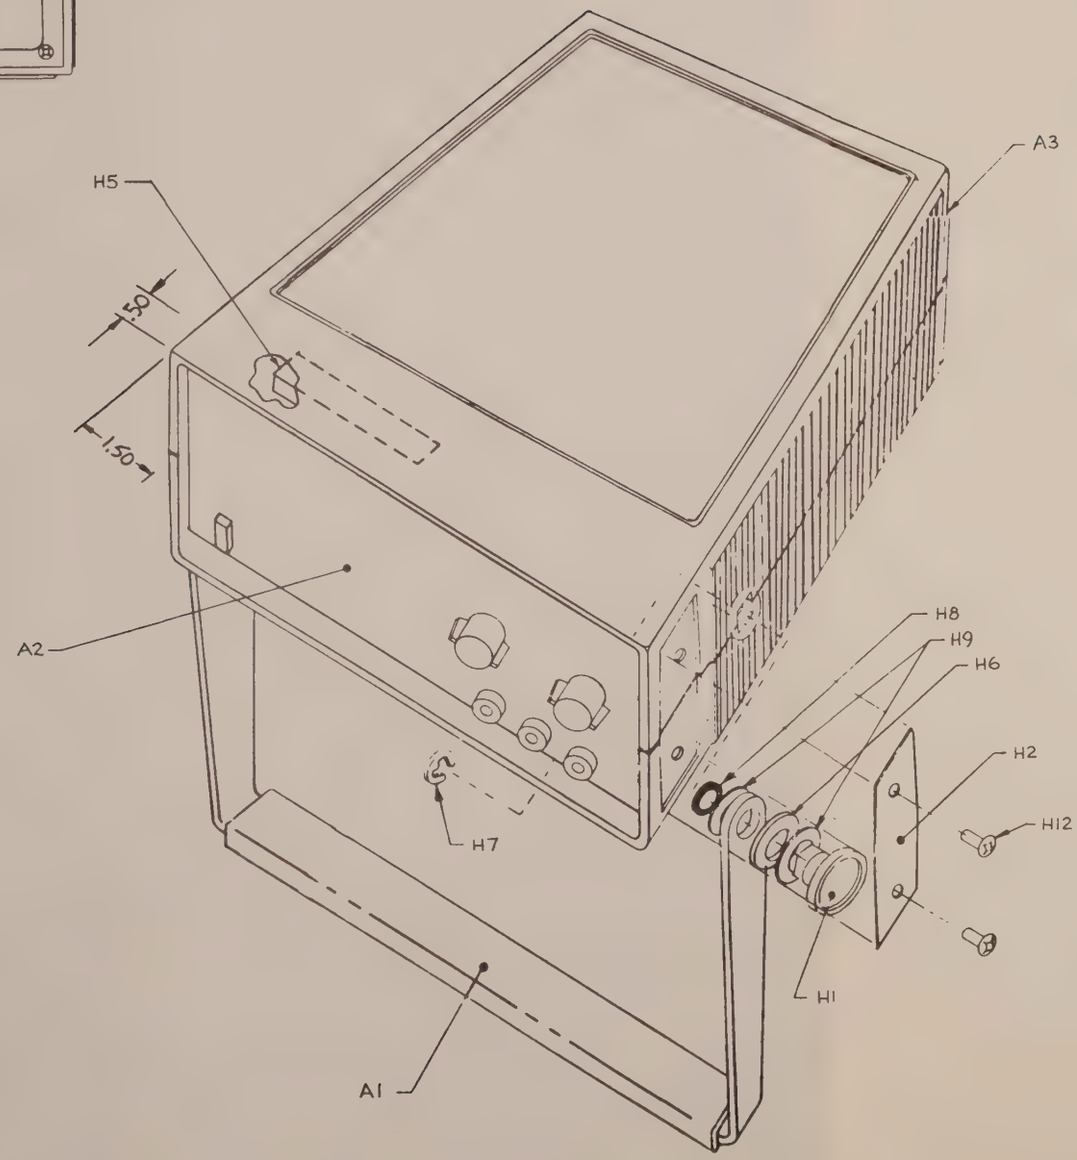

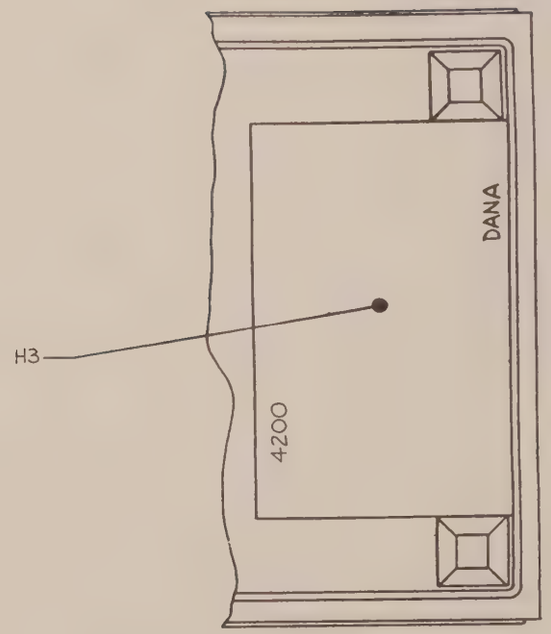

Figure 6.1 - Layout, Digital Multimeter (400975)

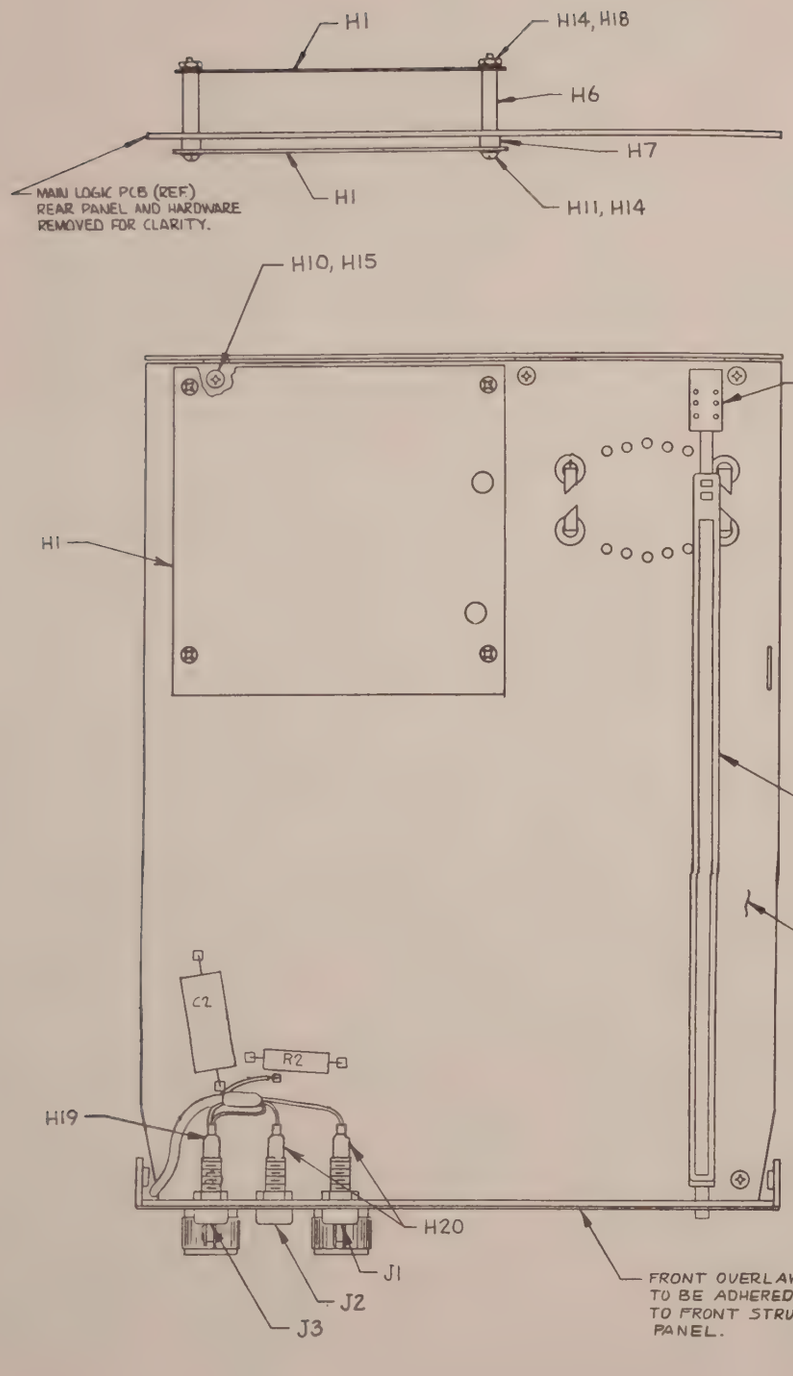

Figure 6.2 - Layout, Module (403868)

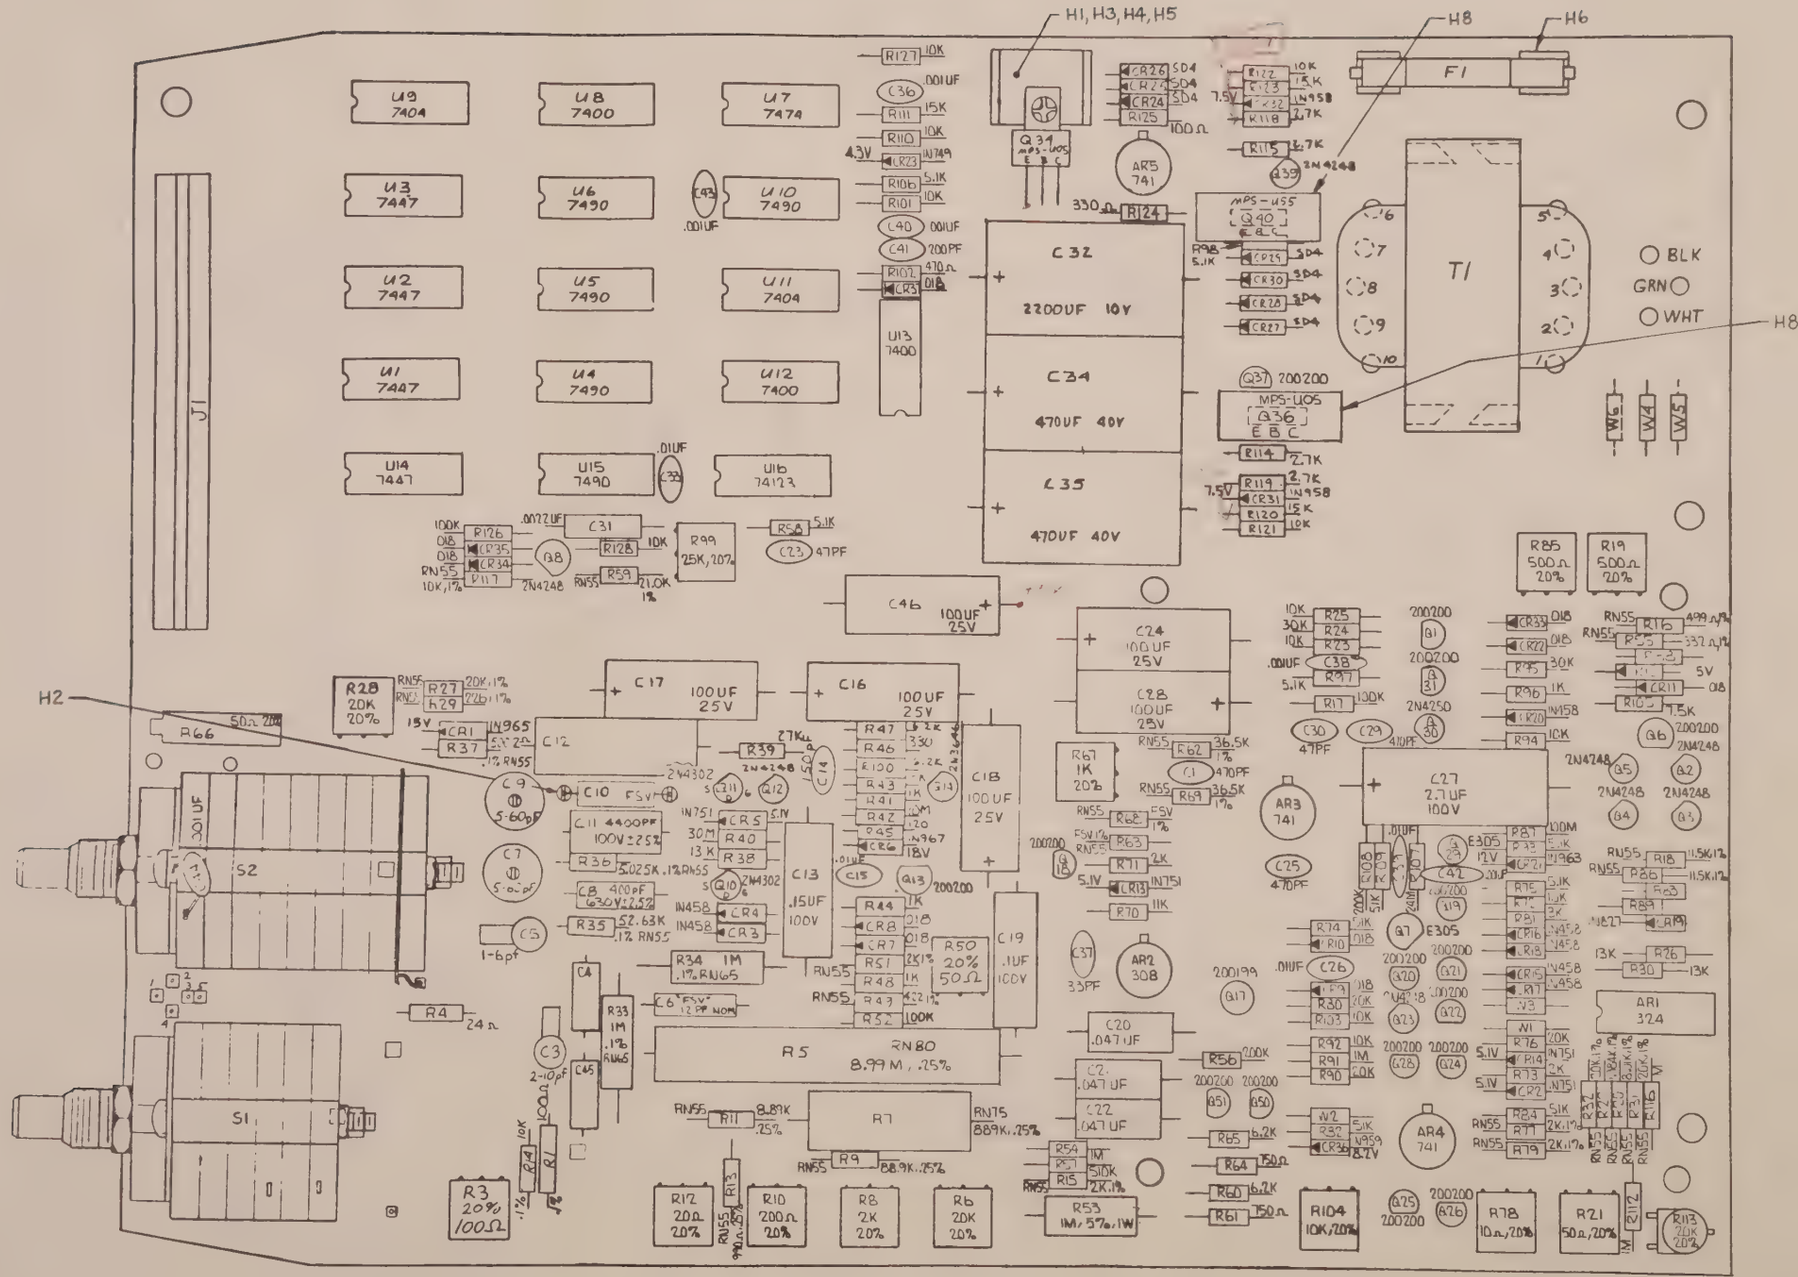

Figure 6.3 - Layout, Main Logic (403867)

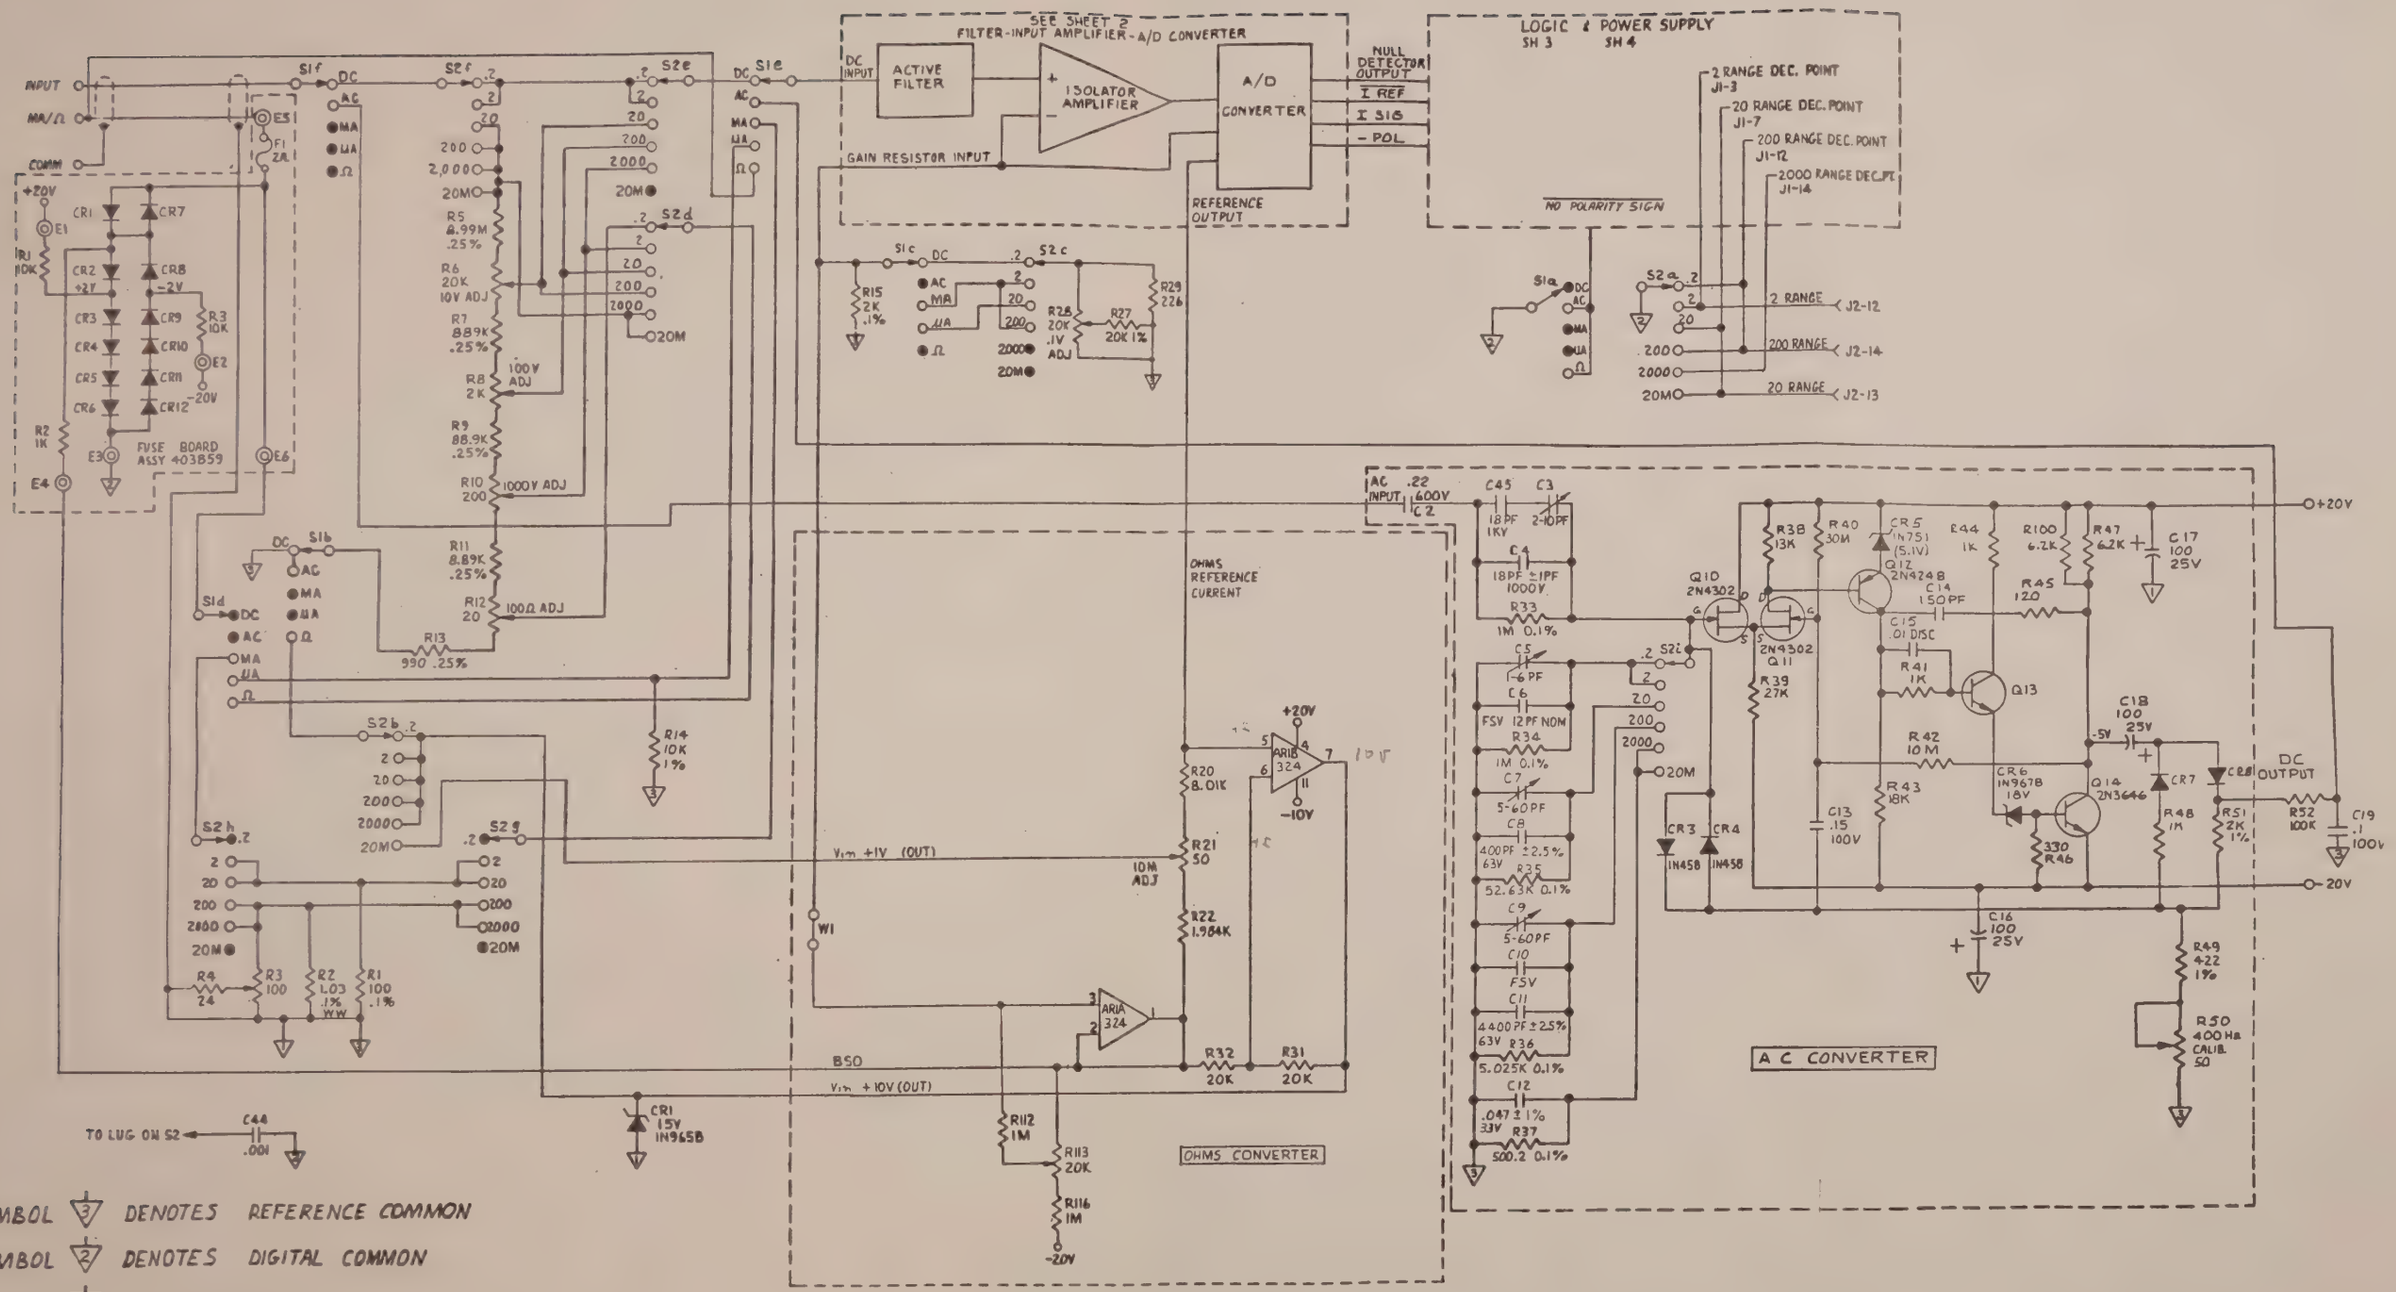

7. SYMBOL ▽3 DENOTES REFERENCE COMMON
6. SYMBOL ▽2 DENOTES DIGITAL COMMON
5. SYMBOL ▽1 DENOTES ANALOG COMMON
4. TRANSISTORS ARE 200200
3. DIODES ARE 018
2. CAPACITORS ARE IN μF
1. RESISTORS ARE IN OHMS ±5% 1/4W

NOTES: UNLESS OTHERWISE SPECIFIED

Figure 6.4 - Schematic, Main Logic

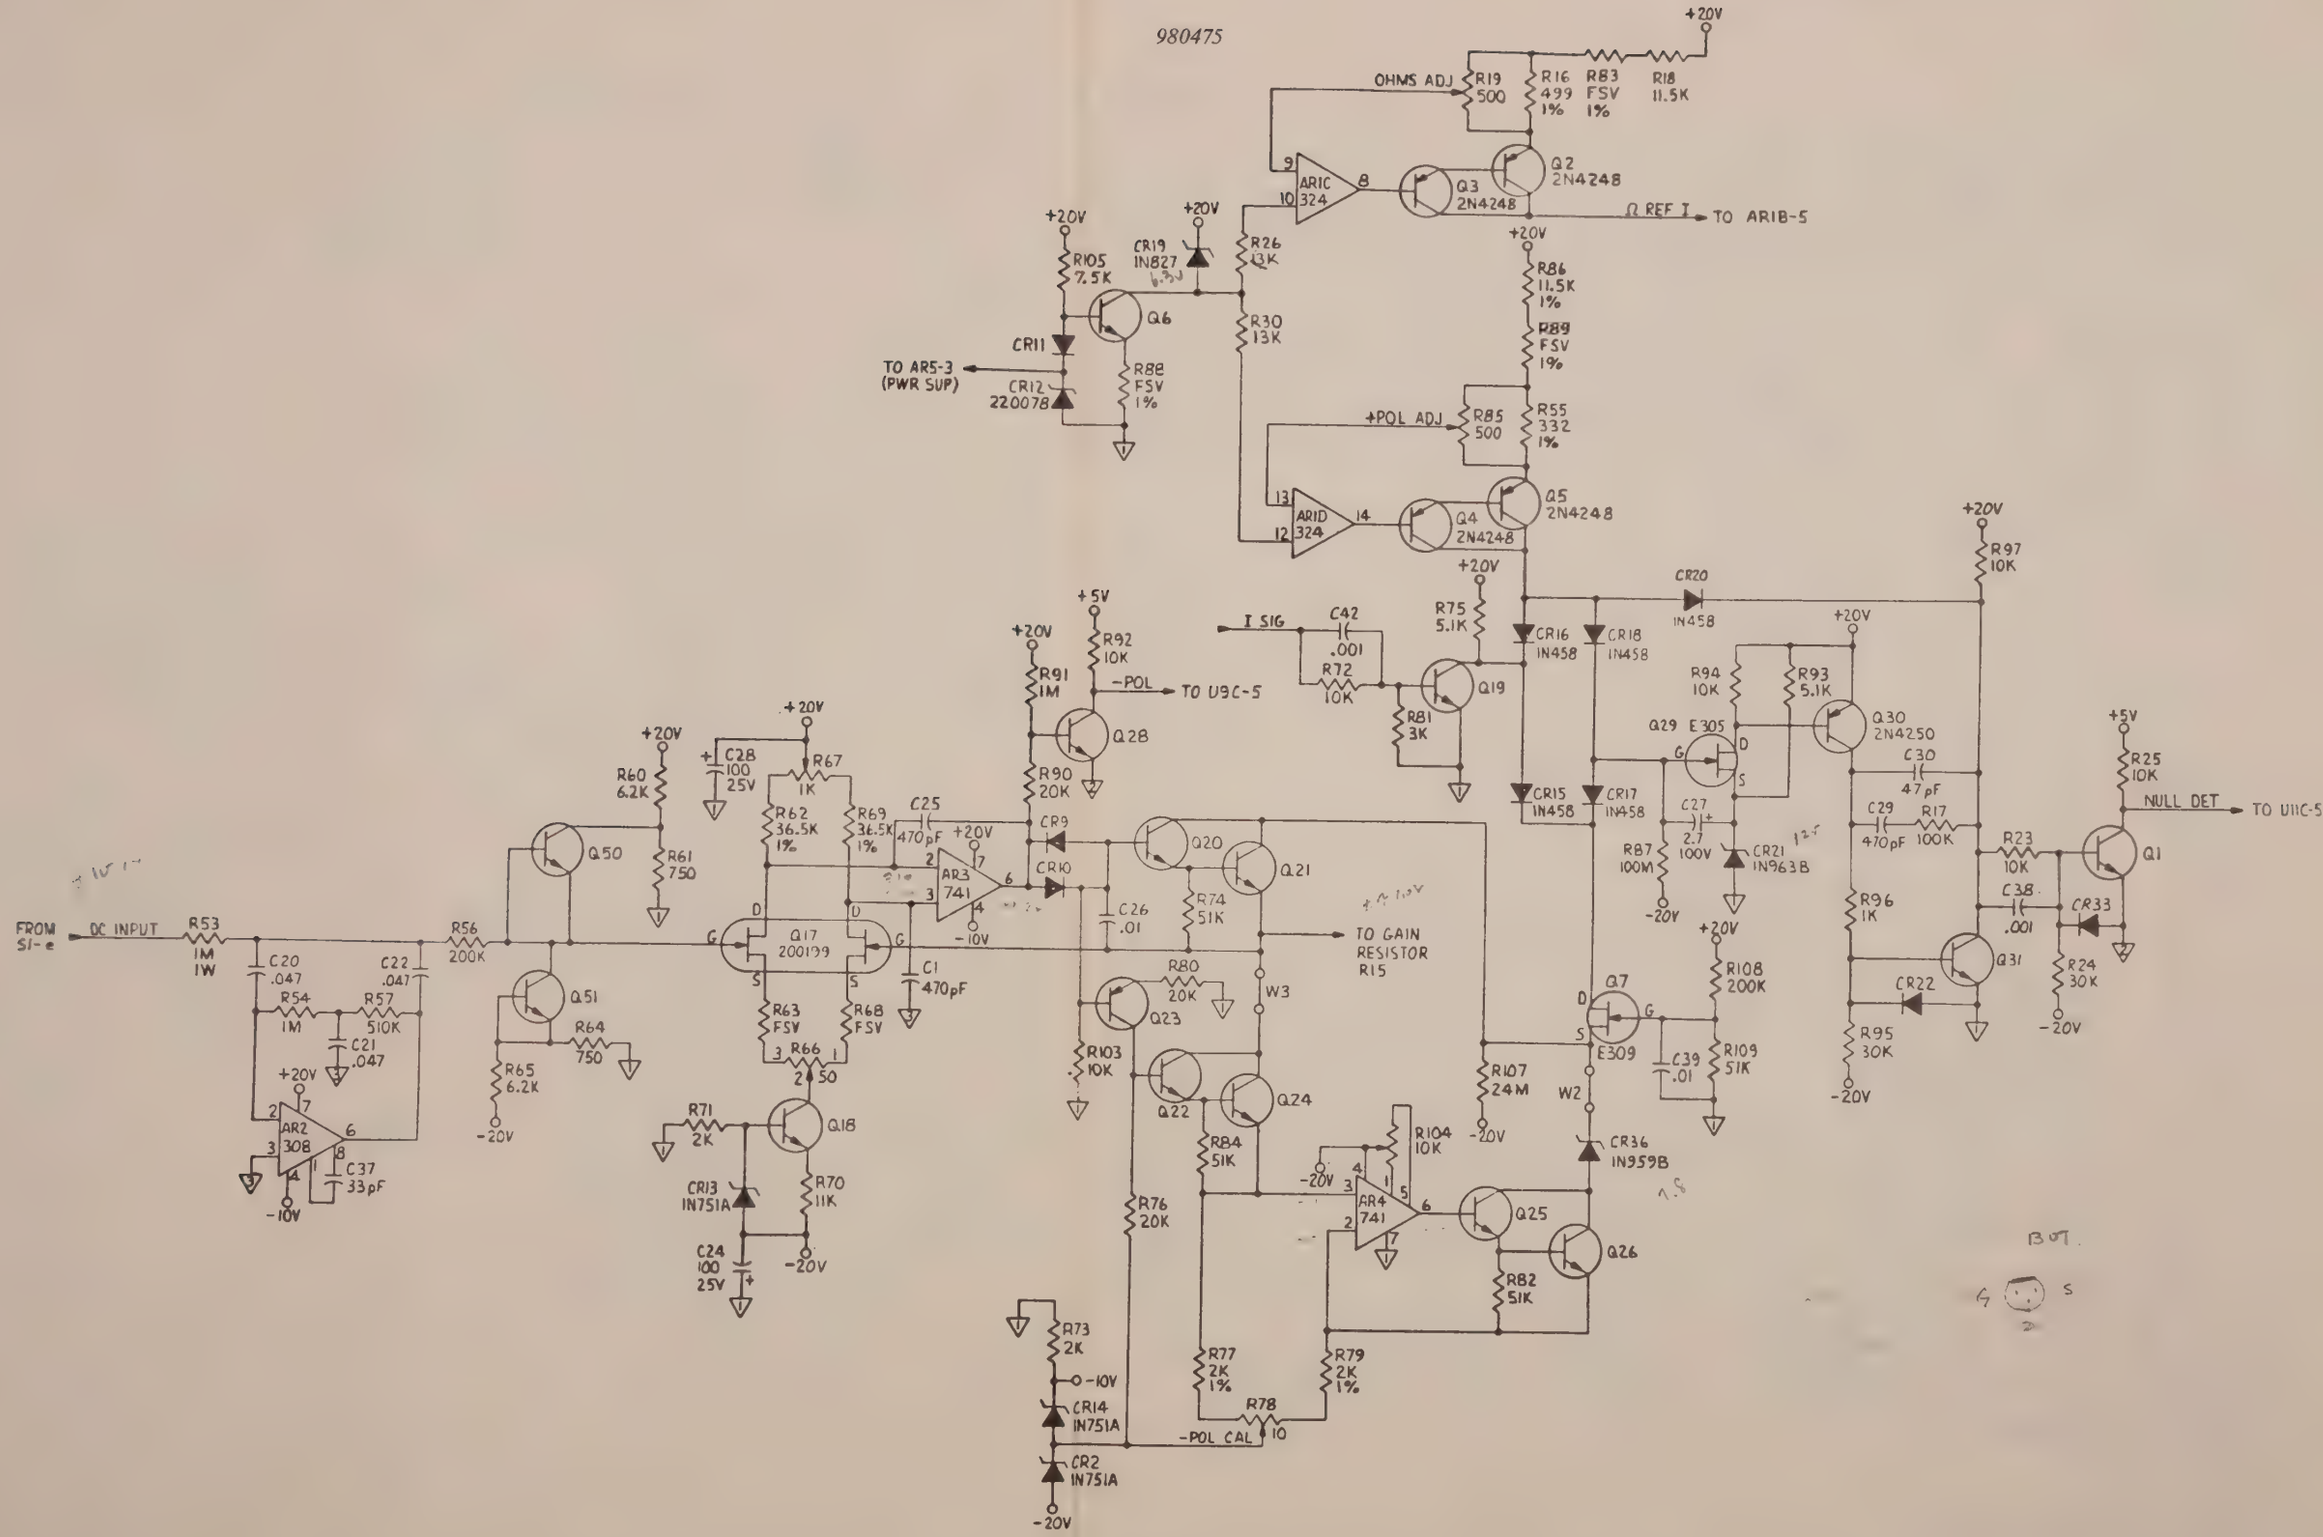

Figure 6.4 - Schematic, Main Logic (continued)

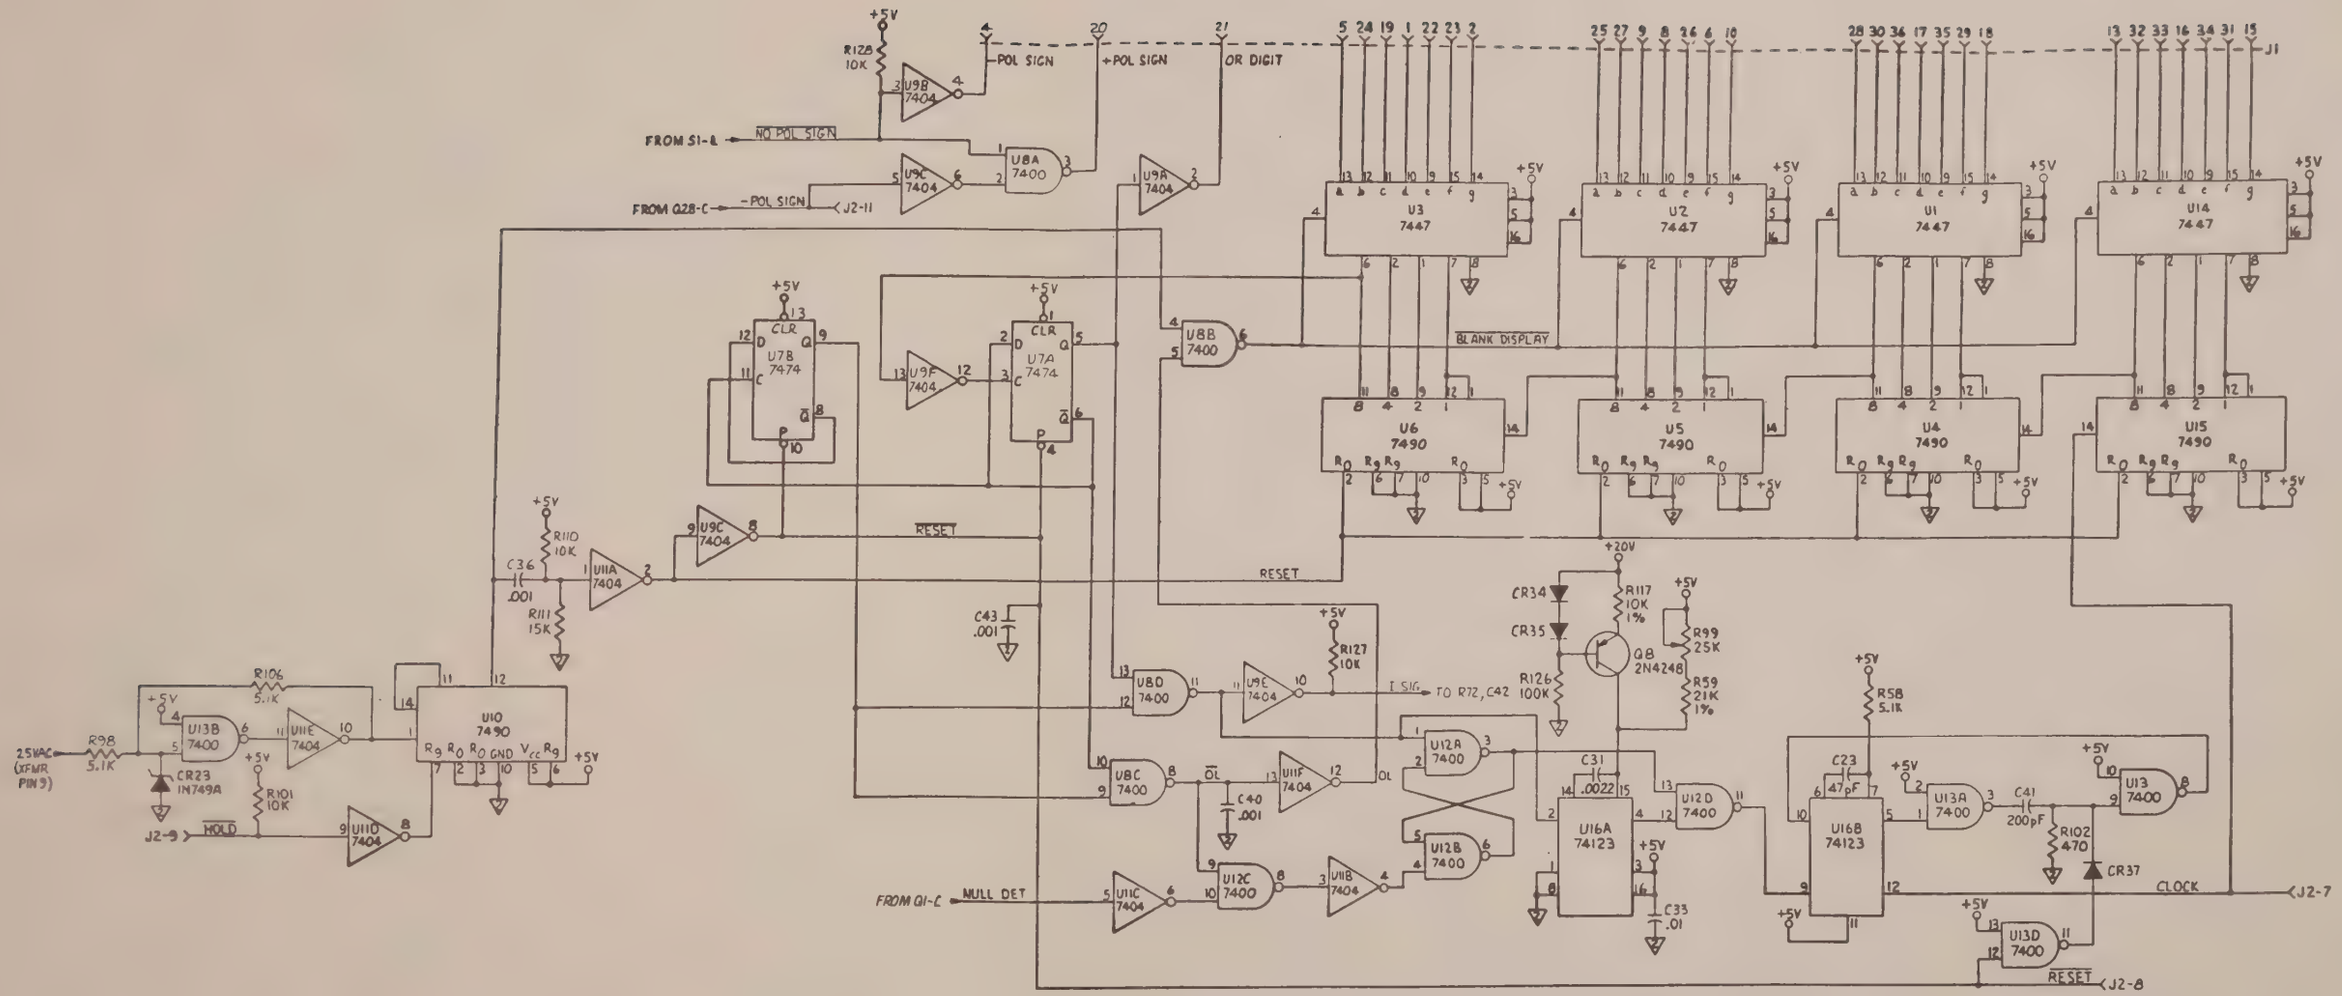

Figure 6.4 - Schematic, Main Logic (continued)

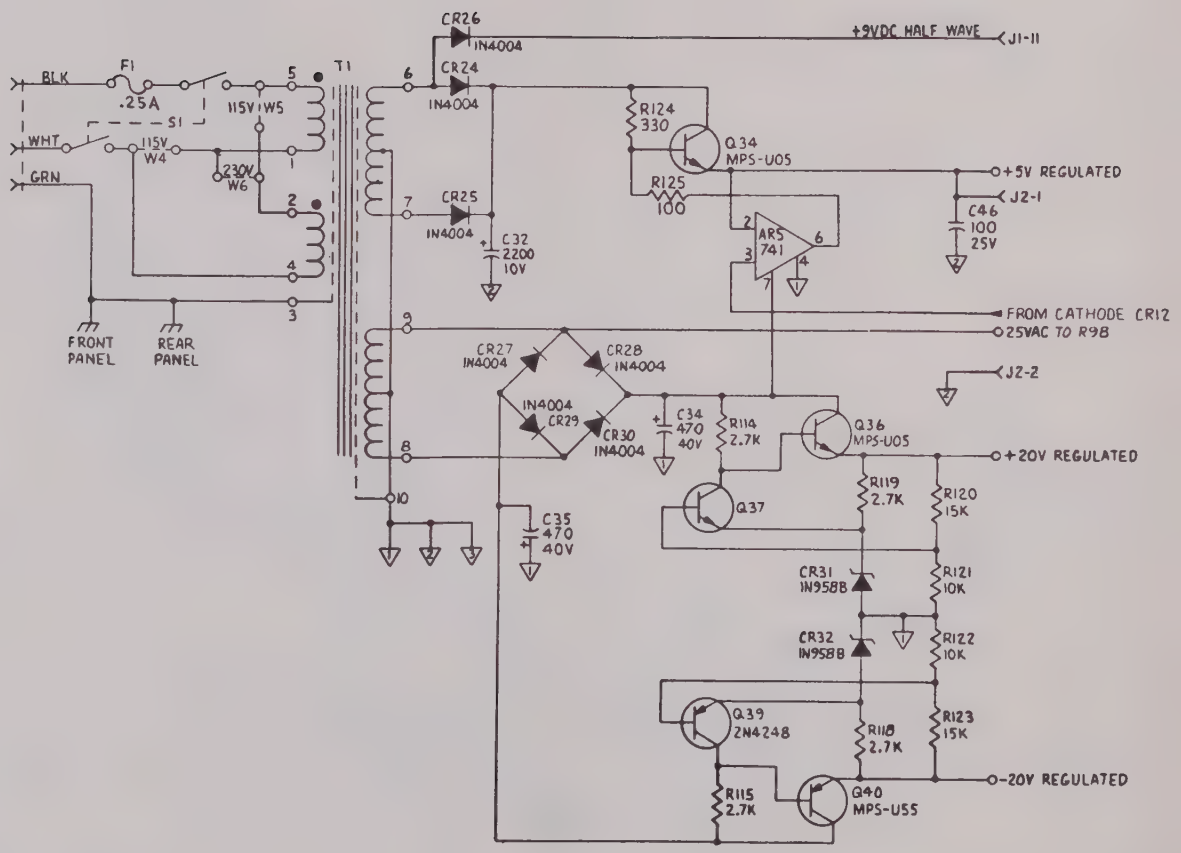

Figure 6.5 - Schematic, Power Supply

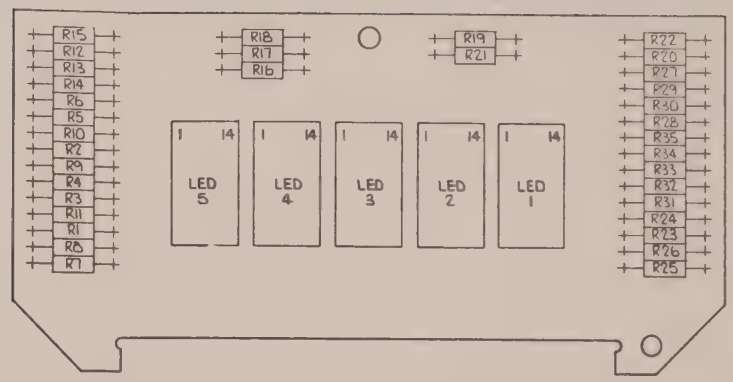

Figure 6.6 - Layout, Display (403866)

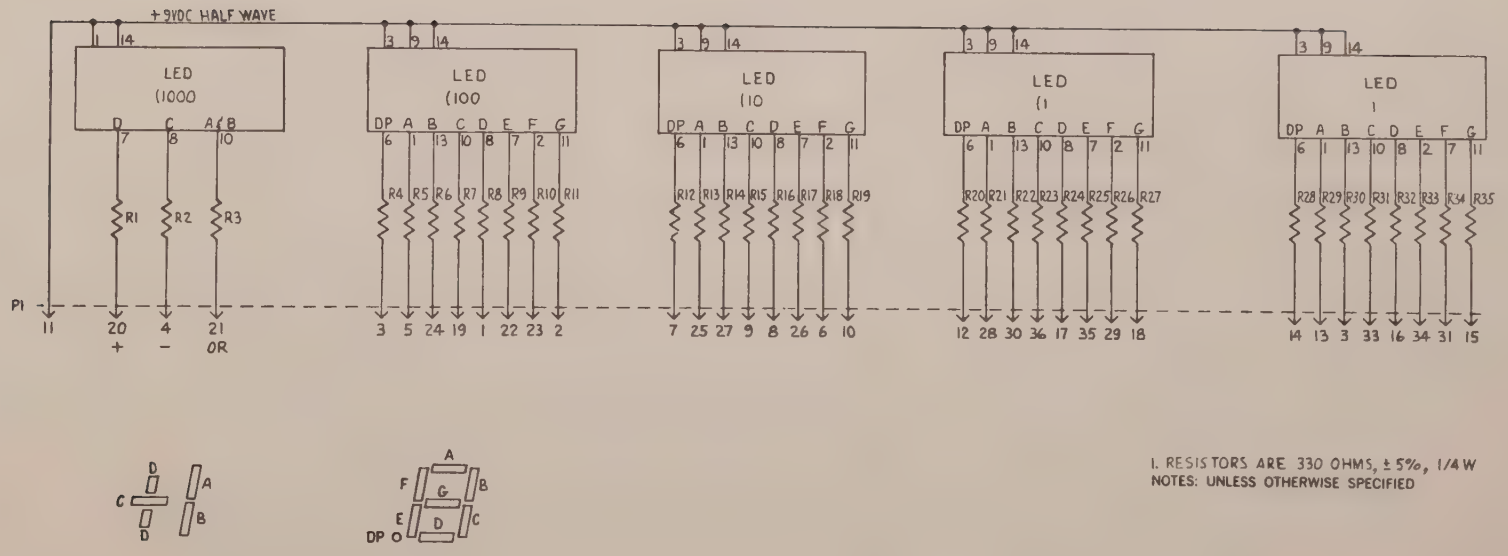

1. RESISTORS ARE 330 OHMS, ± 5%, 1/4 W
NOTES: UNLESS OTHERWISE SPECIFIED

Figure 6.7 - Schematic, Display

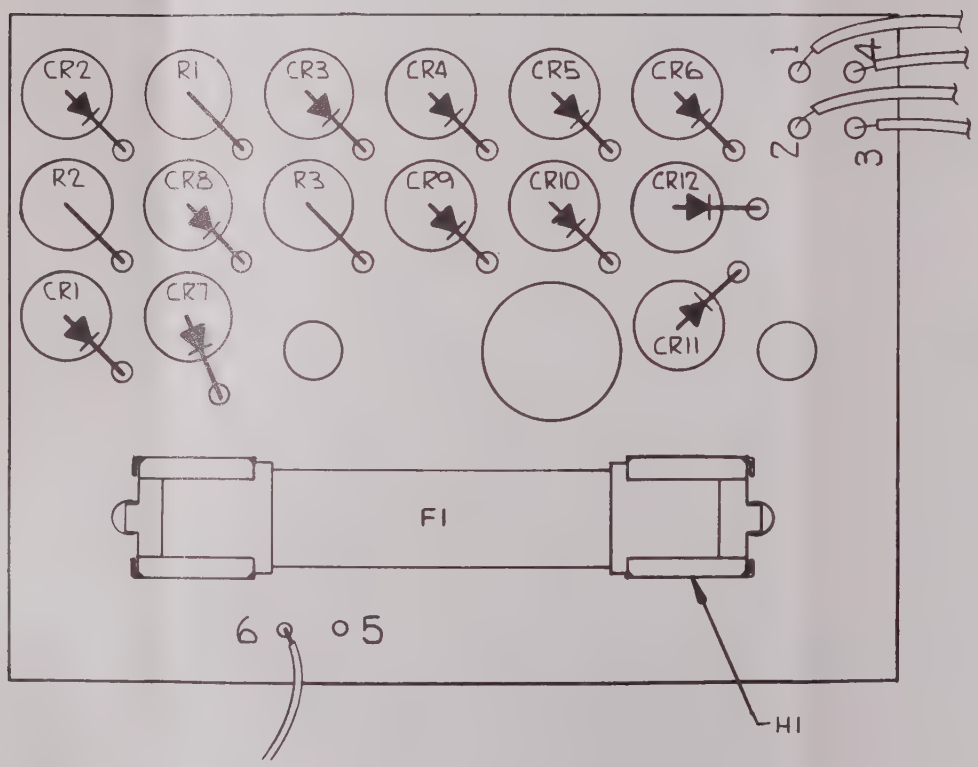

Figure 6.8 - Layout, Fuse Board (403859)

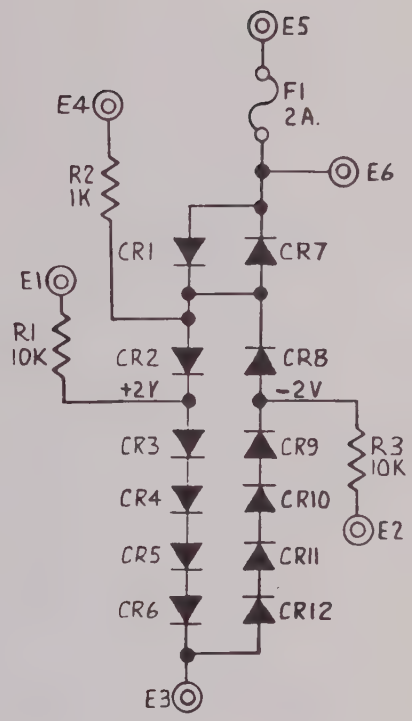

Figure 6.9 - Schematic, Fuse Board

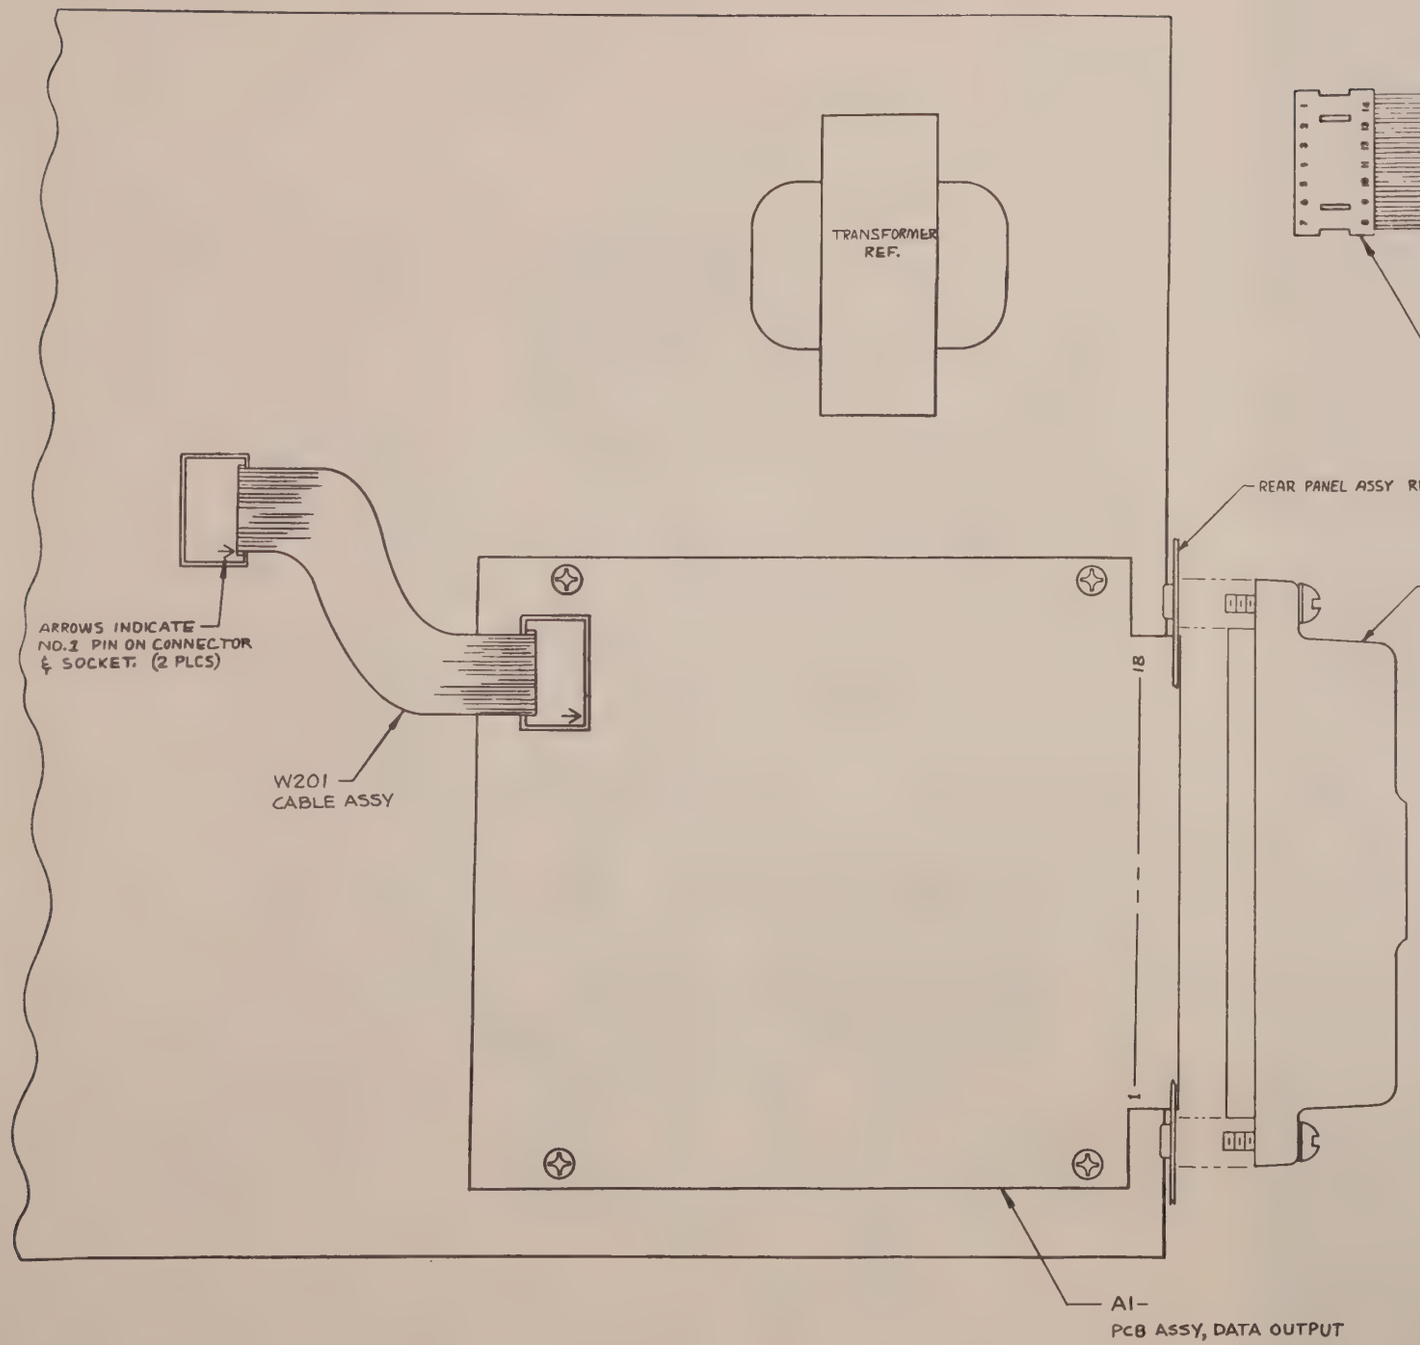
TRANSFORMER REF.
ARROWS INDICATE NO.1 PIN ON CONNECTOR & SOCKET. (2 PLCS)
W201 CABLE ASSY
REAR PANEL ASSY REF
P4 CONNECTOR ASSY
18
A1- PCB ASSY, DATA OUTPUT

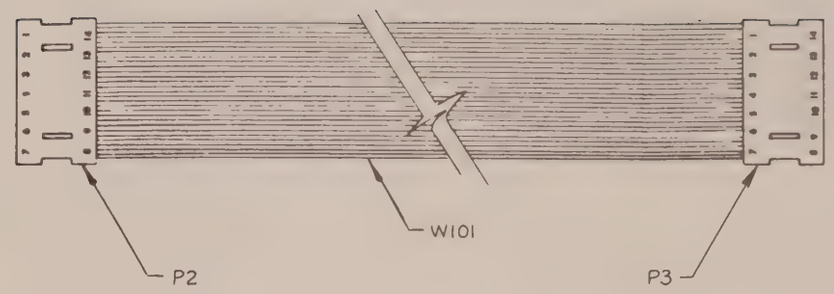

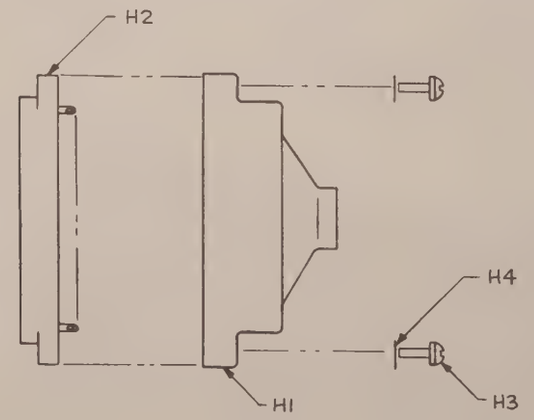

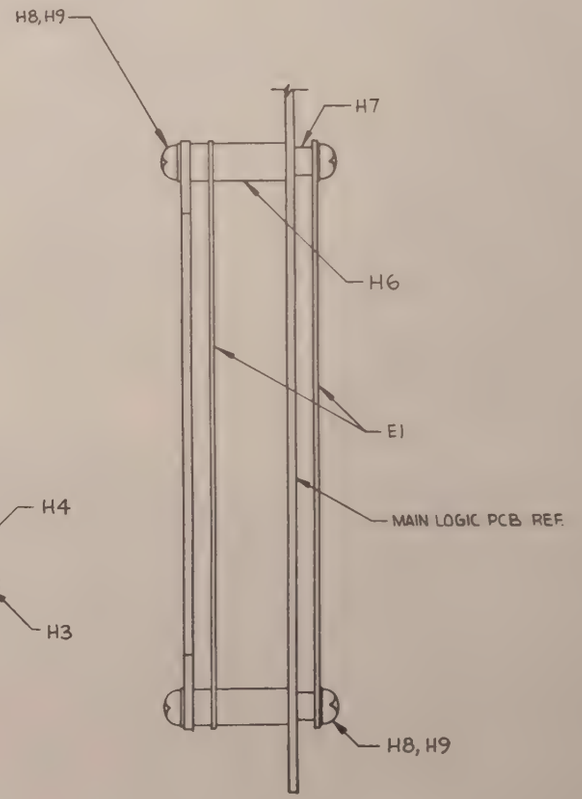

Figure 6.10 - Assembly, Data Output Option 51 (400976)

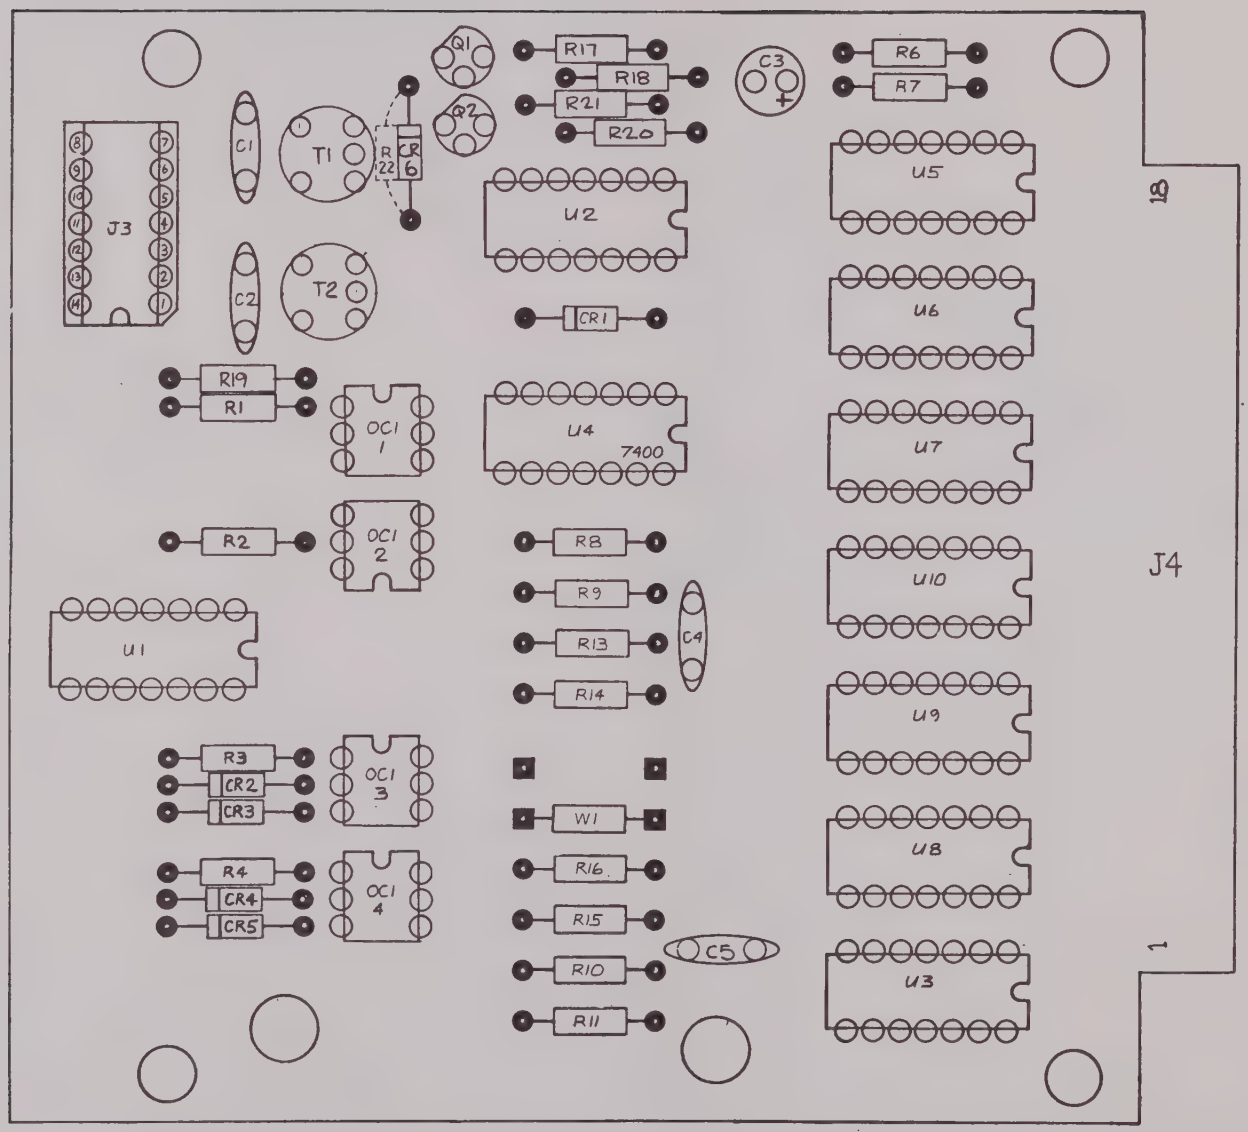

Figure 6.11 - Layout, Data Output (403909)

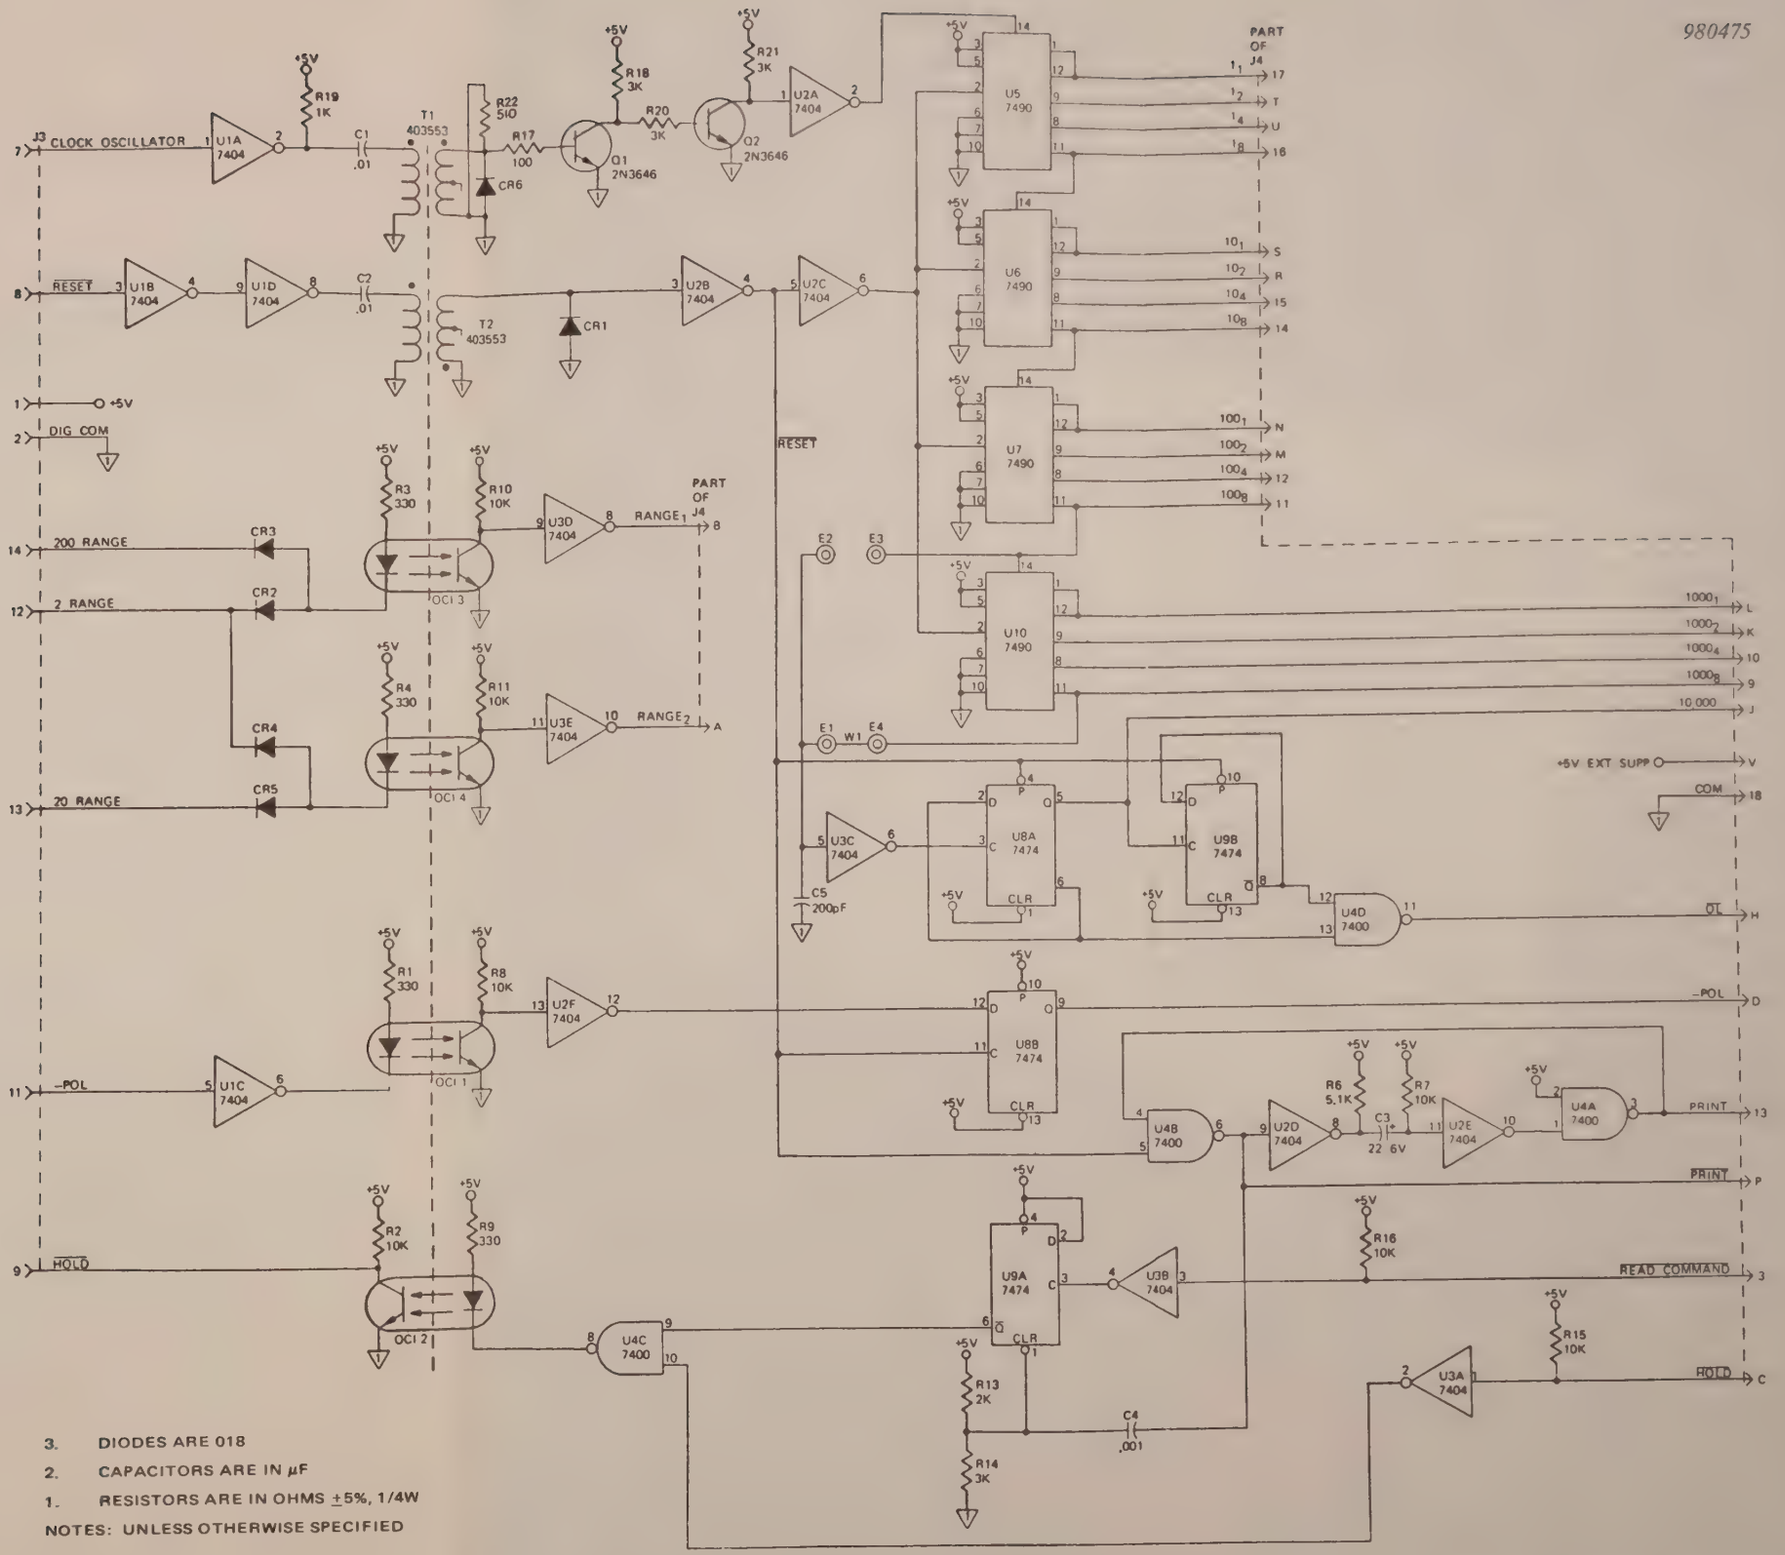

Figure 6.12 - Schematic, Data Output

SECTION 7 PARTS LIST

7.1 This section contains lists of replaceable parts arranged in the order of the following subassemblies:

	Page
Digital Multimeter	7-3
Module - DMM	7-4
Main Logic	7-5
Display	7-13
Fuse Board	7-14
Data Output, Option 51	7-15
Data Output	7-16

7.2 Manufacturers are identified by FSC numbers listed in table 7.2, "List of Suppliers". The code numbers are from the Federal Supply Code for Manufacturers Cataloging Handbooks H4-1, H4-2, and their supplements.

7.3 Certain parts having 21793 (Dana) listed in the "FSC" column are specially-selected semiconductors. For some of these, standard commercial parts will serve as satisfactory replacements. These Dana parts are identified in table 7.1 along with the commercial equivalent.

Table 7.1

Semiconductor Type:	Equivalent:
018 Diode	Texas Instruments 1N4448

Table 7.2 - LIST OF SUPPLIERS

FSC	NAME	FSC	NAME
01295	TEXAS INSTRUMENTS, INC. (Components Group) DALLAS, TEXAS	07263	FAIRCHILD SEMICONDUCTOR (Division of Fairchild Camera & Instrument Corp.) MOUNTAIN VIEW, CALIFORNIA
04713	MOTOROLA, INC. (Semiconductor Products Division) PHOENIX, ARIZONA	09023	CORNELL-DUBILIER ELECTRONICS (Division Federal Pacific Electric Co.) SANFORD, NORTH CAROLINA
05397	UNION CARBIDE CORP. (Materials Systems Division) CLEVELAND, OHIO	11237	CTS KEENE, INC. PASO ROBLES, CALIFORNIA

Table 7.2 - LIST OF SUPPLIERS (continued)

FSC	NAME
21551	C-F ELECTRONICS, INC. VAN NUYS, CALIFORNIA
21793	DANA LABORATORIES, INC. IRVINE, CALIFORNIA
26625	MIAL USA, INC. NUTLEY, NEW JERSEY
27014	NATIONAL SEMI-CONDUCTOR CORP. SANTA CLARA, CALIFORNIA
27556	IMB ELECTRONIC PRODUCTS, INC. SANTA FE SPRINGS, CALIFORNIA
34553	AMPEREX/MEPCO-ELECTRA HAUPPAUGE, NEW YORK
50434	HEWLETT-PACKARD CO. (HP Associates) PALO ALTO, CALIFORNIA
56289	SPRAGUE ELECTRIC CO. (Pacific Division) LOS ANGELES, CALIFORNIA
71471	AEROVOX CORP. (Cinema Plant) MONCKS CORNER, SOUTH CAROLINA
71590	CENTRALAB ELECTRONICS (Division of Globe-Union, Inc.) MILWAUKEE, WISCONSIN
71785	TRW ELECTRONIC COMPONENTS (Cinch Division) ELK GROVE VILLAGE, ILLINOIS
72619	DIALIGHT CORP. (Sub of Digitronics Corp.) BROOKLYN, NEW YORK
73138	BECKMAN INSTRUMENTS, INC. (Helipot Division) FULLERTON, CALIFORNIA
73445	AMPEREX ELECTRONIC CORP. HICKSVILLE, LONG ISLAND, NEW YORK
75915	LITTELFUSE, INC. DES PLAINES, ILLINOIS
80031	MEPCO-ELECTRA MORRISTOWN, NEW JERSEY
80131	ELECTRONICS INDUSTRIES ASSOC. WASHINGTON, D.C.
80294	BOURNS, INC. RIVERSIDE, CALIFORNIA
81349	MILITARY SPECIFICATION
89110	AMP, INC. (Capitron Division) ELIZABETHTOWN, PENNSYLVANIA
90201	MALLORY CAPACITOR CO. INDIANAPOLIS, INDIANA
91506	AUGAT, INC. ATTLEBORO, MASSACHUSETTS
91637	DALE ELECTRONICS, INC. COLUMBUS, NEBRASKA

400975 – DIGITAL MULTIMETER

REF DES	DANA P/N	DESCRIPTION	FSC	MANU P/N
A1	403407	HANDLE ASSY	21793	403407
A2	403868	MODULE ASSY	21793	403868
A3	403861	CASE ASSY	21793	403861
H1	453346	SHAFT, FRICTION, BAIL (2*)		
H2	453924	PANEL, SIDE INSERT (2*)		
H3	920749	LABEL, INPUT LIMIT (1*)		
H4	453934	COVER, DATA OUTPUT (1*)		
H5	453698	RUBBER CUSHION (1*)		
H6	610572	WASHER, NEOPRENE (2*)		
H7	610573	RING, RETAINING (2*)		
H8	610577	O-RING (2*)		
H9	610582	WASHER, MYLAR (4*)		
H10	615059	SCREW, PPH, 6-32 x 3/8 (4*)		
H11	617103	WASHER, FLAT #6 (4*)		
H12	610775	SCREW, DECORATIVE 3/8 LONG (4*)		
H13	615056	SCREW, 4-40 x 3/16 (2*)		
H14	730535	TAG, SERIAL (1*)		

*Quantity Required

403868 – Assy., MODULE – DMM

REF DES	DANA P/N	DESCRIPTION	FSC	MANU P/N
C2	120007	CAP MYLAR .22 MFD 600 V	27556	ZA1101
H1	453323	SHIELD, OUTPUT OP (2*)		
H2	453927	PANEL, FRONT STRUCTURE (1*)		
H3	453931	PANEL, REAR (1*)		
H4	453933	ROD, POWER SWITCH (1*)		
H5	453937	PANEL, FRONT OVERLAY (1*)		
H6	610782	SPACER, 4-40 x 3/4 LG (4*)		
H7	610406	SPACER 5/16 LG (4*)		
H8	610174	NUT, 3/8 (1*)		
H9	610556	WASHER, MYLAR (1*)		
H10	615056	SCREW, 6-32 x 3/16 (5*)		
H11	615047	SCREW, 4-40 x 5/8 (4*)		
H12	610774	BUSHING, STRAIN RELIEF (1*)		
H13	617016	NUT, HEX, #4-40 S/S (2*)		
H14	617077	WASHER, LOCK, #4 (10*)		
H15	617079	WASHER, LOCK, #6 (5*)		
H16	920545	BAR, KNOB (2*)		
H17	920747	KNOB, PUSHBUTTON (1*)		
H18	617004	NUT, #4-40 (4*)		
H19	600791	TERMINAL (1*)		
H20	600790	TERMINAL (2*)		
H21	617102	WASHER, FLAT (2*)		
R2	020561	RES WW 1.03 OHM 1% 4.5 W	21551	M-30
S3	600778	POWER SWITCH, PUSHBUTTON	71590	PB1 Series

*Quantity Required

403867 – Assy., PCB, MAIN LOGIC

REF DES	DANA P/N	DESCRIPTION					FSC	MANU P/N
C1	101641	CAP	CERAM	470 PFD		10%	71471	SCD1X5F
C3	130157	CAP	TRIMMER	2-10 PFD	500 V		80031	2222-801-96128
C4	100098	CAP	CERAM	18 PFD	1000 V	5%	56289	C030B101F180J
C5	130158	CAP	CERAM	1-6 PFD				R-TR1K0-120-01-M-N750
C6	120198	CAP	POLY	12 PFD	500 V	20%	90201	SX412
C7	130055	CAP	CERAM	5-60 PFD		10%	73445	C010MA/60E
C8	120165	CAP	POLY	400 PFD	63 V	2.5%	26625	611
C9	130055	CAP	CERAM	5-60 PFD		10%	73445	C010MA/60E
C10	120142	CAP	POLY	FSV			21793	120142
C11	120162	CAP	POLY	.0044 MFD	63 V	2.5%	26625	611.2D
C12	120161	CAP	POLY	.047 MFD	33 V	1%	72619	N100
C13	121394	CAP	MYLAR	.15 MFD	100 V	10%	09023	WMF1P15
C14	101642	CAP	CERAM	150 PFD		10%	71471	SCD1X5F
C15	100017	CAP	CERAM	.01 MFD	100 V	20%	56289	TG-S10
C16	111148	CAP	ELECT	100 MFD	25 V		56289	TE1211
C17	111148	CAP	ELECT	100 MFD	25 V		56289	TE1211
C18	111148	CAP	ELECT	100 MFD	25 V		56289	TE1211
C19	120003	CAP	MYLAR	.1 MFD	100 V		09023	WMF1P1
C20	120321	CAP	MYLAR	.047 MFD	250 V	10%	73445	C281AB/A47K
C21	120321	CAP	MYLAR	.047 MFD	250 V	10%	73445	C281AB/A47K
C22	120321	CAP	MYLAR	.047 MFD	250 V	10%	73445	C281AB/A47K
C23	101182	CAP	CERAM	47 PFD		10%	71471	TCD-DI-2(N750)
C24	111148	CAP	ELECT	100 MFD	25 V		56289	TE1211
C25	101641	CAP	CERAM	470 PFD		10%	71471	SCD1X5F
C26	100017	CAP	CERAM	.01 MFD	100 V	20%	56289	TG-S10
C27	120323	CAP	MYLAR	2.7 MFD	100 V	10%	73445	C281AH/A2M7
C28	111148	CAP	ELECT	100 MFD	25 V		56289	TE1211
C29	101641	CAP	CERAM	470 PFD		10%	71471	SCD1X5F
C30	101182	CAP	CERAM	47 PFD		10%	71471	TCD-DI-2(N750)
C31	121092	CAP	MYLAR	.0022 MFD	100 V	10%	09023	WMF1D22
C32	110121	CAP	ELECT	2200 MFD	10 V		34553	ET222X010A03
C33	100017	CAP	CERAM	.01 MFD	100 V	20%	56289	TG-S10
C34	110112	CAP	ELECT	470 MFD	40 V		34553	ET471X040A02
C35	110112	CAP	ELECT	470 MFD	40 V		34553	ET471X040A02
C36	101174	CAP	CERAM	.001 MFD	500 V	10%	71471	SCD3X5F
C37	100012	CAP	CERAM	33 PFD		10%	71471	TCD-DI-1(N750)
C38	101174	CAP	CERAM	.001 MFD	500 V	10%	71471	SCD3X5F
C39	100017	CAP	CERAM	.01 MFD	100 V	20%	56289	TG-S10
C40	101174	CAP	CERAM	.001 MFD	500 V	10%	71471	SCD3X5F
C41	101644	CAP	CERAM	200 PFD	1000 V	20%	71471	GPDX5F201K
C42	101174	CAP	CERAM	.001 MFD	500 V	10%	71471	SCD3X5F

403867 – Assy., PCB, MAIN LOGIC *continued*

REF DES	DANA P/N	DESCRIPTION					FSC	MANU P/N
C43	101174	CAP	CERAM	.001 MFD	500 V	10%	71471	SCD3X5F
C44	101174	CAP	CERAM	.001 MFD	500 V	10%	71471	SCD3X5F
C45	100098	CAP	CERAM	18 PFD	1000 V	5%	56289	C030B101F180J
C46	111148	CAP	ELECT	100 MFD	25 V		56289	TE1211
CR1	220022	DIODE	SILICO	ZENER			81349	1N965B
CR2	220007	DIODE	SILICO	ZENER			81349	1N751A
CR3	210058	DIODE	SILICO				81349	1N458
CR4	210058	DIODE	SILICO				81349	1N458
CR5	220007	DIODE	SILICO	ZENER			81349	1N751A
CR6	220015	DIODE	SILICO	ZENER			81349	1N967B
CR7	211083	DIODE	SILICO		018		21793	211083
CR8	211083	DIODE	SILICO		018		21793	211083
CR9	211083	DIODE	SILICO		018		21793	211083
CR10	211083	DIODE	SILICO		018		21793	211083
CR11	211083	DIODE	SILICO		018		21793	211083
CR12	220078	DIODE	ZENER	1N5231	5 V	5%	21793	220078
CR13	220007	DIODE	SILICO	ZENER			81349	1N751A
CR14	220007	DIODE	SILICO	ZENER			81349	1N751A
CR15	210058	DIODE	SILICO				81349	1N458
CR16	210058	DIODE	SILICO				81349	1N458
CR17	210058	DIODE	SILICO				81349	1N458
CR18	210058	DIODE	SILICO				81349	1N458
CR19	403875	ASSY	ZENER KIT				21793	403875
CR20	210058	DIODE	SILICO				81349	1N458
CR21	220026	DIODE		ZENER			81349	1N963B
CR22	211083	DIODE	SILICO		018		21793	211083
CR23	220027	DIODE	SILICO	ZENER			81349	1N749A
CR24	210004	DIODE	SILICO				81349	1N4004
CR25	210004	DIODE	SILICO				81349	1N4004
CR26	210004	DIODE	SILICO				81349	1N4004
CR27	210004	DIODE	SILICO				81349	1N4004
CR28	210004	DIODE	SILICO				81349	1N4004
CR29	210004	DIODE	SILICO				81349	1N4004
CR30	210004	DIODE	SILICO				81349	1N4004
CR31	220012	DIODE	SILICO	ZENER			81349	1N958B
CR32	220012	DIODE	SILICO	ZENER			81349	1N958B
CR33	211083	DIODE	SILICO		018		21793	211083
CR34	211083	DIODE	SILICO		018		21793	211083
CR35	211083	DIODE	SILICO		018		21793	211083
CR36	220038	DIODE		ZENER	8.2 V	5%	81349	1N959B
CR37	211083	DIODE	SILICO		018		21793	211083

403867 – Assy., PCB, MAIN LOGIC *continued*

REF DES	DANA P/N	DESCRIPTION	FSC	MANU P/N
F1	920685	FUSE 1/4A 3AG 250 V	75915	312.250
H1	600525	HEATSINK, POWER (1*)		
H2	610234	TERMINAL (FSV) (2*)		
H3	615043	SCREW, PPH, 4-40 x 5/16 (1*)		
H4	617016	HEX NUT #4 RADIO (1*)		
H5	617077	LOCKWASHER #4 (1*)		
H6	920463	FUSE CLIP (2*)	91506	6008-324T
H7	410551	SHIELD, ROTARY SWITCH (1*)		
H8	600792	HEATSINK (2*)		
J1	600777	CONN 18 PIN	89110	3-583486-3
J2	920734	CONN 14 PIN DUAL INLINE	71785	133-51-02-003
Q1	200200	TRANS NPN	21793	200200
Q2	200088	TRANS SILICO PNP	80131	2N4248
Q3	200088	TRANS SILICO PNP	80131	2N4248
Q4	200088	TRANS SILICO PNP	80131	2N4248
Q5	200088	TRANS SILICO PNP	80131	2N4248
Q6	200200	TRANS NPN	21793	200200
Q7	200230	TRANS FET E305	21793	200230
Q8	200088	TRANS SILICO PNP	80131	2N4248
Q10	200107	TRANS N-CHAN FIELD EFFECT	80131	2N4302
Q11	200107	TRANS N-CHAN FIELD EFFECT	80131	2N4302
Q12	200088	TRANS SILICO PNP	80131	2N4248
Q13	200200	TRANS NPN	21793	200200
Q14	200037	TRANS SILICO NPN	80131	2N3646
Q17	200199	TRANS DUAL	21793	200199
Q18	200200	TRANS NPN	21793	200200
Q19	200200	TRANS NPN	21793	200200
Q20	200200	TRANS NPN	21793	200200
Q21	200200	TRANS NPN	21793	200200
Q22	200200	TRANS NPN	21793	200200
Q23	200088	TRANS SILICO PNP	80131	2N4248
Q24	200200	TRANS NPN	21793	200200
Q25	200200	TRANS NPN	21793	200200
Q26	200200	TRANS NPN	21793	200200
Q28	200200	TRANS NPN	21793	200200
Q29	200230	TRANS FET E305	21793	200230
Q30	200068	TRANS	80131	2N4250
Q31	200200	TRANS NPN	21793	200200
		*Quantity Required		

403867 -- Assy., PCB, MAIN LOGIC *continued*

REF DES	DANA P/N	DESCRIPTION	FSC	MANU P/N
Q34	200166	TRANS NPN	04713	MPS-U05
Q36	200166	TRANS NPN	04713	MPS-U05
Q37	200200	TRANS NPN	21793	200200
Q39	200088	TRANS SILICO PNP	80131	2N4248
Q40	200167	TRANS PNP	04713	MPS-U55
Q50	200200	TRANS NPN	21793	200200
Q51	200200	TRANS NPN	21793	200200
R1	010909	RES METAL 100 OHM .1% 1/8W	81349	RN60C
R3	040193	POT CERMET 100 OHM 20%	11237	360T101B
R4	000240	RES CARBON 24 OHM 5% 1/4W	81349	RC07GF240J
R5	010938	RES METAL (FILM ATTEN SET)		
R6	040248	POT CERMET 20 K 20% 1/2W	73138	89PR20K
R7	010938	RES METAL (FILM ATTEN SET)		
R8	040246	POT CERMET 2 K 20% 1/2W	73138	72PX
R9	010938	RES METAL (FILM ATTEN SET)		
R10	040221	POT CERMET 200 OHM 20%	11237	360T Series
R11	010938	RES METAL (FILM ATTEN SET)		
R12	040244	POT CERMET 20 OHM 20% 1/2W	73138	72PX
R13	010938	RES METAL (FILM ATTEN SET)		
R14	010808	RES METAL 10 K .1%	81349	RN55C
R15	010936	RES (GAIN SET)		
R16	010918	RES METAL 499 OHM 1%	91637	RN55C
R17	000104	RES CARBON 100 K 5% 1/4W	81349	RC07GF104J
R18	010937	RES (OHMS REF SET)		
R19	040187	POT CERMET 500 OHM 20%	11237	360T501B
R20	010937	RES (OHMS REF SET)		
R21	040245	POT CERMET 50 OHM 20% 1/2W	11237	360T500B
R22	010937	RES (OHMS REF SET)		
R23	000103	RES CARBON 10 K 5% 1/4W	81349	RC07GF103J
R24	000303	RES CARBON 30 K 5% 1/4W	81349	RC07GF303J
R25	000103	RES CARBON 10 K 5% 1/4W	81349	RC07GF103J
R26	000133	RES CARBON 13 K 5% 1/4W	81349	RC07GF133J
R27	010894	RES METAL 20 K 1%	91637	RN55C
R28	040248	POT CERMET 20 K 20% 1/2W	73138	89PR20K
R29	010936	RES (GAIN SET)		
R30	000133	RES CARBON 13 K 5% 1/4W	81349	RC07GF133J
R31	010935	RES (OHMS CONV SET)		
R32	010935	RES (OHMS CONV SET)		
R33	010479	RES METAL 1 M .1% 1/4W	81349	RN65C
R34	010479	RES METAL 1 M .1% 1/4W	81349	RN65C

403867 -- Assy., PCB, MAIN LOGIC *continued*

REF DES	DANA P/N	DESCRIPTION					FSC	MANU P/N
R35	010483	RES	METAL	52.63 K		.1% 1/10W	81349	RN55C
R36	010482	RES	METAL	5.025 K		.1% 1/10W	81349	RN55C
R37	010481	RES	METAL	500.2 OHM		1% 1/4W	81349	RN65C
R38	000133	RES	CARBON	13 K		5% 1/4W	81349	RC07GF133J
R39	000273	RES	CARBON	27 K		5% 1/4W	81349	RC07GF273J
R40	000306	RES	CARBON	30 M		5% 1/4W	81349	RC07GF306J
R41	000102	RES	CARBON	1 K		5% 1/4W	81349	RC07GF102J
R42	000106	RES	CARBON	10 M		5% 1/4W	81349	RC07GF106J
R43	000183	RES	CARBON	18 K		5% 1/4W	81349	RC07GF183J
R44	000102	RES	CARBON	1 K		5% 1/4W	81349	RC07GF102J
R45	000121	RES	CARBON	120 OHM		5% 1/4W	81349	RC07GF121J
R46	000331	RES	CARBON	330 OHM		5% 1/4W	81349	RC07GF331J
R47	000622	RES	CARBON	6.2 K		5% 1/4W	81349	RC07GF622J
R48	000102	RES	CARBON	1 K		5% 1/4W	81349	RC07GF102J
R49	010552	RES	METAL	422 OHM		1% 1/10W	81349	RN55E
R50	040245	POT	CERMET	50 OHM		20%	11237	360T500B
R51	010530	RES	METAL	2 K	T-9	1% 1/10W	81349	RN55E2001F
R52	000104	RES	CARBON	100 K		5% 1/4W	81349	RC07GF104J
R53	001762	RES	CARBON	1 M		5% 1 W		
R54	000105	RES	CARBON	1 M		5% 1/4W	81349	RC07GF105J
R55	010917	RES	METAL	332 OHM		1%	91637	RN55C
R56	000204	RES	CARBON	200 K		5% 1/4W	81349	RC07GF204J
R57	000514	RES	CARBON	510 K		5% 1/4W	81349	RC07GF514J
R58	000512	RES	CARBON	5.1 K		5% 1/4W	81349	RC07GF512J
R59	010580	RES	METAL	21 K	T-0	1% 1/10W	81349	RN55D2102F
R60	000622	RES	CARBON	6.2 K		5% 1/4W	81349	RC07GF622J
R61	000751	RES	CARBON	750 OHM		5% 1/4W	81349	RC07GF751J
R62	010790	RES	METAL	36.5 K		1% 1/10W	81349	RN55E
R63	010802	RES	METAL	FSV		1%	21793	010802
R64	000751	RES	CARBON	750 OHM		5% 1/4W	81349	RC07GF751J
R65	000622	RES	CARBON	6.2 K		5% 1/4W	81349	RC07GF622J
R66	040225	POT	CERMET	50 OHM		20%	73138	89P Series
R67	040196	POT	CERMET	1 K		20%	11237	360T102B
R68	010802	RES	METAL	FSV		1%	21793	010802
R69	010790	RES	METAL	36.5 K		1% 1/10W	81349	RN55E
R70	000113	RES	CARBON	11 K		5% 1/4W	81349	RC07GF113J
R71	000202	RES	CARBON	2 K		5% 1/4W	81349	RC07GF202J
R72	000103	RES	CARBON	10 K		5% 1/4W	81349	RC07GF103J
R73	000202	RES	CARBON	2 K		5% 1/4W	81349	RC07GF202J
R74	000513	RES	CARBON	51 K		5% 1/4W	81349	RC07GF513J
R75	000512	RES	CARBON	5.1 K		5% 1/4W	81349	RC07GF512J
R76	000203	RES	CARBON	20 K		5% 1/4W	81349	RC07GF203J

403867 – Assy., PCB, MAIN LOGIC *continued*

REF DES	DANA P/N	DESCRIPTION	FSC	MANU P/N
R77	010934	RES (CURRENT MIRROR SET)		
R78	040243	POT CERMET 10 OHM 20% 1/2W	73138	72PX
R79	010934	RES (CURRENT MIRROR SET)		
R80	000203	RES CARBON 20 K 5% 1/4W	81349	RC07GF203J
R81	000302	RES CARBON 3 K 5% 1/4W	81349	RC07GF302J
R82	000513	RES CARBON 51 K 5% 1/4W	81349	RC07GF513J
R83	403875	ASSY ZENER REF ELEMENT	21793	403875
R84	000513	RES CARBON 51 K 5% 1/4W	81349	RC07GF513J
R85	040187	POT CERMET 500 OHM 20%	11237	360T501B
R86	010936	RES (GAIN RES SET)		
R87	000107	RES CARBON 100 M 5% 1/4W	81349	RC07GF107J
R88	403875	ASSY ZENER REF ELEMENT	21793	403875
R89	403875	ASSY ZENER REF ELEMENT	21793	403875
R90	000203	RES CARBON 20 K 5% 1/4W	81349	RC07GF203J
R91	000105	RES CARBON 1 M 5% 1/4W	81349	RC07GF105J
R92	000103	RES CARBON 10 K 5% 1/4W	81349	RC07GF103J
R93	000512	RES CARBON 5.1 K 5% 1/4W	81349	RC07GF512J
R94	000103	RES CARBON 10 K 5% 1/4W	81349	RC07GF103J
R95	000303	RES CARBON 30 K 5% 1/4W	81349	RC07GF303J
R96	000102	RES CARBON 1 K 5% 1/4W	81349	RC07GF102J
R97	000512	RES CARBON 5.1 K 5% 1/4W	81349	RC07GF512J
R98	000512	RES CARBON 5.1 K 5% 1/4W	81349	RC07GF512J
R99	040248	POT CERMET 20 K 20% 1/2W	73138	89PR20K
R100	000622	RES CARBON 6.2 K 5% 1/4W	81349	RC07GF622J
R101	000103	RES CARBON 10 K 5% 1/4W	81349	RC07GF103J
R102	000471	RES CARBON 470 OHM 5% 1/4W	81349	RC07GF471J
R103	000103	RES CARBON 10 K 5% 1/4W	81349	RC07GF103J
R104	040197	POT CERMET 10 K 20%	11237	360T103B
R105	000752	RES CARBON 7.5 K 5% 1/4W	81349	RC07GF752J
R106	000512	RES CARBON 5.1 K 5% 1/4W	81349	RC07GF512J
R107	000246	RES CARBON 24 M 5% 1/4W	81349	RC07GF246J
R108	000204	RES CARBON 200 K 5% 1/4W	81349	RC07GF204J
R109	000513	RES CARBON 51 K 5% 1/4W	81349	RC07GF513J
R110	000103	RES CARBON 10 K 5% 1/4W	81349	RC07GF103J
R111	000153	RES CARBON 15 K 5% 1/4W	81349	RC07GF153J
R112	000105	RES CARBON 1 M 5% 1/4W	81349	RC07GF105J
R113	040289	POT CARBON 20 K 20%	80294	3359P-1-203
R114	000272	RES CARBON 2.7 K 5% 1/4W	81349	RC07GF272J
R115	000272	RES CARBON 2.7 K 5% 1/4W	81349	RC07GF272J
R116	000105	RES CARBON 1 M 5% 1/4W	81349	RC07GF105J
R118	000272	RES CARBON 2.7 K 5% 1/4W	81349	RC07GF272J
R119	000272	RES CARBON 2.7 K 5% 1/4W	81349	RC07GF272J

403867 – Assy., PCB, MAIN LOGIC *continued*

REF DES	DANA P/N	DESCRIPTION	FSC	MANU P/N
R120	000153	RES CARBON 15 K 5% 1/4W	81349	RC07GF153J
R121	000103	RES CARBON 10 K 5% 1/4W	81349	RC07GF103J
R122	000103	RES CARBON 10 K 5% 1/4W	81349	RC07GF103J
R123	000153	RES CARBON 15 K 5% 1/4W	81349	RC07GF153J
R124	000331	RES CARBON 330 OHM 5% 1/4W	81349	RC07GF331J
R125	000101	RES CARBON 100 OHM 5% 1/4W	81349	RC07GF101J
R126	000104	RES CARBON 100 K 5% 1/4W	81349	RC07GF104J
R127	000103	RES CARBON 10 K 5% 1/4W	81349	RC07GF103J
R128	000103	RES CARBON 10 K 5% 1/4W	81349	RC07GF103J
S1	600523	SWITCH, ROTARY		
S2	600780	SWITCH, ROTARY		
T1	300080	TRANSFORMER, POWER		
AR1	230190	INTEGRATED CIRCUIT DUAL IN-LINE QUAD 1F AMP	27014	LM324
AR2	230103	INTEGRATED CIRCUIT	27014	LM308
AR3	230119	INTEGRATED CIRCUIT	07263	μA741
AR4	230119	INTEGRATED CIRCUIT	07263	μA741
AR5	230119	INTEGRATED CIRCUIT	07263	μA741
U1	230132	INTEGRATED CIRCUIT	01295	SN7447N
U2	230132	INTEGRATED CIRCUIT	01295	SN7447N
U3	230132	INTEGRATED CIRCUIT	01295	SN7447N
U4	230037	INTEGRATED CIRCUIT	01295	SN7490N
U5	230037	INTEGRATED CIRCUIT	01295	SN7490N
U6	230037	INTEGRATED CIRCUIT	01295	SN7490N
U7	230072	INTEGRATED CIRCUIT	01295	SN7474N
U8	230028	INTEGRATED CIRCUIT	01295	SN7400N
U9	230064	INTEGRATED CIRCUIT	01295	SN7404N
U10	230037	INTEGRATED CIRCUIT	01295	SN7490N
U11	230064	INTEGRATED CIRCUIT	01295	SN7404N
U12	230028	INTEGRATED CIRCUIT	01295	SN7400N
U13	230028	INTEGRATED CIRCUIT	01295	SN7400N
U14	230132	INTEGRATED CIRCUIT	01295	SN7447N
U15	230037	INTEGRATED CIRCUIT	01295	SN7490N
U16	230189	INTEGRATED CIRCUIT 16 PIN	01295	SN74123N
W1	600245	JUMPER		L-2007-1LP
W2	600245	JUMPER		L-2007-1LP
W3	600245	JUMPER		L-2007-1LP

403867 – Assy., PCB, MAIN LOGIC *continued*

REF DES	DANA P/N	DESCRIPTION	FSC	MANU P/N
W4*	600245	JUMPER		L-2007-1LP
W5*	600245	JUMPER		L-2007-1LP
W6*	600245	JUMPER		L-2007-1LP

*W4 & W5 115V OPERATION ONLY
W6 for 230V OPERATION ONLY

403866 – Assy., PCB, DISPLAY

REF DES	DANA P/N	DESCRIPTION	FSC	MANU P/N
LED 1	210060	DIODE LED DISPLAY *	50434	HP5082-7730
LED 2	210060	DIODE LED DISPLAY *	50434	HP5082-7730
LED 3	210060	DIODE LED DISPLAY *	50434	HP5082-7730
LED 4	210060	DIODE LED DISPLAY *	50434	HP5082-7730
LED 5	210061	DIODE LED DISPLAY * ±1 DIGIT NO LONGER AVAIL.	50434	HP5082-7732
R1	000331	RES CARBON 330 OHM 5% 1/4W	81349	RC07GF331J
R2	000331	RES CARBON 330 OHM 5% 1/4W	81349	RC07GF331J
R3	000331	RES CARBON 330 OHM 5% 1/4W	81349	RC07GF331J
R4	000331	RES CARBON 330 OHM 5% 1/4W	81349	RC07GF331J
R5	000331	RES CARBON 330 OHM 5% 1/4W	81349	RC07GF331J
R6	000331	RES CARBON 330 OHM 5% 1/4W	81349	RC07GF331J
R7	000331	RES CARBON 330 OHM 5% 1/4W	81349	RC07GF331J
R8	000331	RES CARBON 330 OHM 5% 1/4W	81349	RC07GF331J
R9	000331	RES CARBON 330 OHM 5% 1/4W	81349	RC07GF331J
R10	000331	RES CARBON 330 OHM 5% 1/4W	81349	RC07GF331J
R11	000331	RES CARBON 330 OHM 5% 1/4W	81349	RC07GF331J
R12	000331	RES CARBON 330 OHM 5% 1/4W	81349	RC07GF331J
R13	000331	RES CARBON 330 OHM 5% 1/4W	81349	RC07GF331J
R14	000331	RES CARBON 330 OHM 5% 1/4W	81349	RC07GF331J
R15	000331	RES CARBON 330 OHM 5% 1/4W	81349	RC07GF331J
R16	000331	RES CARBON 330 OHM 5% 1/4W	81349	RC07GF331J
R17	000331	RES CARBON 330 OHM 5% 1/4W	81349	RC07GF331J
R18	000331	RES CARBON 330 OHM 5% 1/4W	81349	RC07GF331J
R19	000331	RES CARBON 330 OHM 5% 1/4W	81349	RC07GF331J
R20	000331	RES CARBON 330 OHM 5% 1/4W	81349	RC07GF331J
R21	000331	RES CARBON 330 OHM 5% 1/4W	81349	RC07GF331J
R22	000331	RES CARBON 330 OHM 5% 1/4W	81349	RC07GF331J
R23	000331	RES CARBON 330 OHM 5% 1/4W	81349	RC07GF331J
R24	000331	RES CARBON 330 OHM 5% 1/4W	81349	RC07GF331J
R25	000331	RES CARBON 330 OHM 5% 1/4W	81349	RC07GF331J
R26	000331	RES CARBON 330 OHM 5% 1/4W	81349	RC07GF331J
R27	000331	RES CARBON 330 OHM 5% 1/4W	81349	RC07GF331J
R28	000331	RES CARBON 330 OHM 5% 1/4W	81349	RC07GF331J
R29	000331	RES CARBON 330 OHM 5% 1/4W	81349	RC07GF331J
R30	000331	RES CARBON 330 OHM 5% 1/4W	81349	RC07GF331J
R31	000331	RES CARBON 330 OHM 5% 1/4W	81349	RC07GF331J
R32	000331	RES CARBON 330 OHM 5% 1/4W	81349	RC07GF331J
R33	000331	RES CARBON 330 OHM 5% 1/4W	81349	RC07GF331J
R34	000331	RES CARBON 330 OHM 5% 1/4W	81349	RC07GF331J
R35	000331	RES CARBON 330 OHM 5% 1/4W	81349	RC07GF331J

*When reordering, include also alpha code (A thru G) on device.

403859 – Assy., PCB, FUSE BOARD

REF DES	DANA P/N	DESCRIPTION	FSC	MANU P/N
CR1	210067	DIODE 3A SELECTED	21793	210067
CR2	210068	DIODE 3A SELECTED	21793	210068
CR3	210068	DIODE 3A SELECTED	21793	210068
CR4	210068	DIODE 3A SELECTED	21793	210068
CR5	210068	DIODE 3A SELECTED	21793	210068
CR6	210068	DIODE 3A SELECTED	21793	210068
CR7	210067	DIODE 3A SELECTED	21793	210067
CR8	210068	DIODE 3A SELECTED	21793	210068
CR9	210068	DIODE 3A SELECTED	21793	210068
CR10	210068	DIODE 3A SELECTED	21793	210068
CR11	210068	DIODE 3A SELECTED	21793	210068
CR12	210068	DIODE 3A SELECTED	21793	210068
F1	920488	FUSE 2 A 250 V	75915	312002
H1	920463	FUSE CLIP (2*)		
R1	000103	RES CARBON 10 K 5% 1/4W	81349	RC07GF103J
R2	000102	RES CARBON 1 K 5% 1/4W	81349	RC07GF102J
R3	000103	RES CARBON 10 K 5% 1/4W	81349	RC07GF103J

*Quantity Required

400976 – Assy., DATA OUTPUT, Option 51

REF DES	DANA P/N	DESCRIPTION	FSC	MANU P/N
A1	403909	PCB ASSY, ISOLATED DATA OUTPUT	21793	403909
E1	453323	SHIELD (2*)		
H6	610278	SPACER, 4-40 x 3/4 LG (4*)		
H7	610304	SPACER, 1/4 x 1/8 LG (4*)		
H8	615046	SCREW, 4-40 x 1/2 LG (8*)		
H9	617077	WASHER, INT. LOCK (8*)		
P4	403338	CONNECTOR ASSY (1*)	21793	403338
H1	453029	CONNECTOR HOOD (1*)		
H2	600227	CONNECTOR 18 PIN (1*)	71785	251-18-30-160-50-36A-30
H3	615046	SCREW, 4-40 x 1/2 LG (2*)		
H4	617077	WASHER, LOCK #4 (2*)		
W201	403682	CABLE ASSY, FLAT (1*)	21793	403682
W101	500115	CABLE, 5 INCH		
P2†	600558	PLUG, FLAT 14P (1*)		3406-0000
P3††	600558	PLUG, FLAT 14P (1*)		3406-0000

†J2 on Logic & Interconnection Board
††J3 on Data Output Board

*Quantity Required

403862 – Assy., PCB, DATA OUTPUT

REF DES	DANA P/N	DESCRIPTION					FSC	MANU P/N
C1	100017	CAP	CERAM	.01 MFD	100 V	20%	56289	TG-S10
C2	100017	CAP	CERAM	.01 MFD	100 V	20%	56289	TG-S10
C3	110127	CAP	TANTA	22 MFD	6 V	10%	05397	T368B226M006AS
C4	100071	CAP	CERAM	.001 MFD	1000 V	20%	56289	5GA-D10
C5	100040	CAP	CERAM	200 PFD	1000 V	20%	56289	5GA-T20
CR1	211083	DIODE	SILICO		018		21793	211083
CR2	211083	DIODE	SILICO		018		21793	211083
CR3	211083	DIODE	SILICO		018		21793	211083
CR4	211083	DIODE	SILICO		018		21793	211083
CR5	211083	DIODE	SILICO		018		21793	211083
CR6	211083	DIODE	SILICO		018		21793	211083
J3	920734	CONN	DUAL IN-LINE 14P				71785	133-51-02-003
OCI-1	250005	ISOLATOR		OPTICALLY COUPLED		6-DIP		IL74
OCI-2	250005	ISOLATOR		OPTICALLY COUPLED		6-DIP		IL74
OCI-3	250005	ISOLATOR		OPTICALLY COUPLED		6-DIP		IL74
OCI-4	250005	ISOLATOR		OPTICALLY COUPLED		6-DIP		IL74
Q1	200037	TRANS	SILICO	NPN			80131	2N3646
Q2	200037	TRANS	SILICO	NPN			80131	2N3646
R1	000331	RES	CARBON	330 OHM		5% 1/4W	81349	RC07GF331J
R2	000103	RES	CARBON	10 K		5% 1/4W	81349	RC07GF103J
R3	000331	RES	CARBON	330 OHM		5% 1/4W	81349	RC07GF331J
R4	000331	RES	CARBON	330 OHM		5% 1/4W	81349	RC07GF331J
R6	000512	RES	CARBON	5.1 K		5% 1/4W	81349	RC07GF512J
R7	000103	RES	CARBON	10 K		5% 1/4W	81349	RC07GF103J
R8	000103	RES	CARBON	10 K		5% 1/4W	81349	RC07GF103J
R9	000331	RES	CARBON	330 OHM		5% 1/4W	81349	RC07GF331J
R10	000103	RES	CARBON	10 K		5% 1/4W	81349	RC07GF103J
R11	000103	RES	CARBON	10 K		5% 1/4W	81349	RC07GF103J
R13	000202	RES	CARBON	2 K		5% 1/4W	81349	RC07GF202J
R14	000302	RES	CARBON	3 K		5% 1/4W	81349	RC07GF302J
R15	000103	RES	CARBON	10 K		5% 1/4W	81349	RC07GF103J
R16	000103	RES	CARBON	10 K		5% 1/4W	81349	RC07GF103J
R17	000101	RES	CARBON	100 OHM		5% 1/4W	81349	RC07GF101J
R18	000302	RES	CARBON	3 K		5% 1/4W	81349	RC07GF302J
R19	000102	RES	CARBON	1 K		5% 1/4W	81349	RC07GF102J
R20	000302	RES	CARBON	3 K		5% 1/4W	81349	RC07GF302J
R21	000302	RES	CARBON	3 K		5% 1/4W	81349	RC07GF302J
R22	000511	RES	CARBON	510 OHM		5% 1/4W	81349	RC07GF511J

403862 – Assy., PCB, DATA OUTPUT

REF DES	DANA P/N	DESCRIPTION	FSC	MANU P/N
U1	230064	INTEGRATED CIRCUIT	01295	SN7404N
U2	230064	INTEGRATED CIRCUIT	01295	SN7404N
U3	230064	INTEGRATED CIRCUIT	01295	SN7404N
U4	230028	INTEGRATED CIRCUIT	01295	SN7400N
U5	230037	INTEGRATED CIRCUIT	01295	SN7490N
U6	230037	INTEGRATED CIRCUIT	01295	SN7490N
U7	230037	INTEGRATED CIRCUIT	01295	SN7490N
U8	230072	INTEGRATED CIRCUIT	01295	SN7474N
U9	230072	INTEGRATED CIRCUIT	01295	SN7474N
U10	230037	INTEGRATED CIRCUIT	01295	SN7490N
T1	403553	PULSE TRANSFORMER	21793	403553
T2	403553	PULSE TRANSFORMER	21793	403553
W1	600245	JUMPER		L-2007-1LP

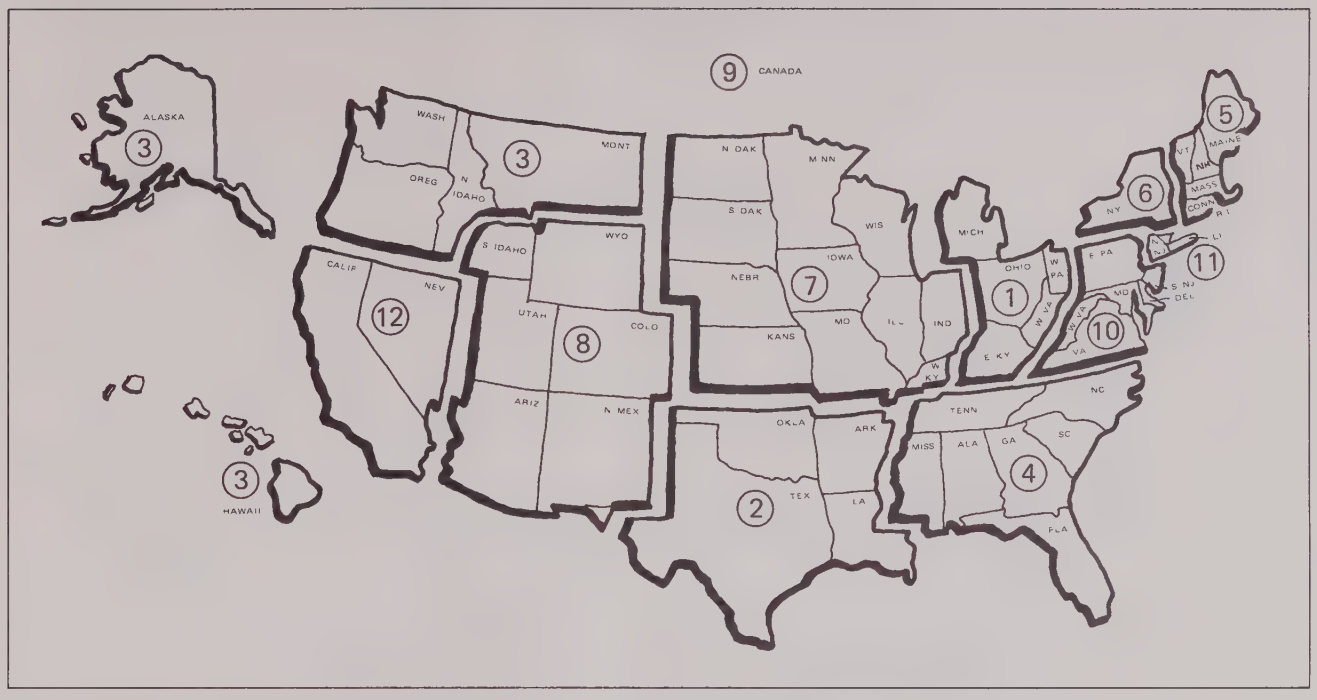

1 CARTER, McCORMIC & PEIRCE, INC.

23995 Freeway Park Drive
Farmington, Michigan 48024
Telephone: (313) 477-7700
TWX: 810-242-2986

5423 Webster Street
Dayton, Ohio 45414
Telephone: (513) 278-5873
TWX: 810-459-1613

21380 Lorain Road
Cleveland, Ohio 44126
Telephone: (216) 333-5650
TWX: 810-421-8304

409 Beatty Rd.
Monroeville, Pennsylvania 15146
Telephone: (412) 372-4415
TWX: None

2 DATA MARKETING ASSOC.

3925C Dacoma Street
Houston, Texas 77018
Telephone: (713) 686-9627
TWX: 910-881-2569

14235 Proton Road
Dallas, Texas 75240
Telephone: (214) 661-0300
TWX: 910-860-5484

P.O. Box 17928
San Antonio, Texas 78217
Telephone: (512) 828-0937
TWX: 910-871-1033

1225 West Main Street, Suite 108
Norman, Oklahoma 73069
Telephone: (405) 364-8320
TWX: 910-830-6528

300 Huntland Avenue, Suite 210
Austin, Texas 78752
Telephone: (512) 451-5174
TWX: None

3 RUSH DRAKE ASSOCIATES

6133 Sixth Avenue South
Seattle, Washington 98108
Telephone: (206) 763-2755
TWX: None

4 GENTRY ASSOCIATES, INC.

550 N. Bumby Avenue
Orlando, Florida 32803
Telephone: (305) 894-4401
TWX: 810-850-0136

2109 W. Clinton Avenue, Rm 118
Huntsville, Alabama 35805
Telephone: (205) 534-9771
TWX: 810-726-2220

428 Alamance Road
Burlington, North Carolina 27215
Telephone: (919) 227-3639
TWX: 510-921-5751

5 PAT JENKS ASSOCIATES

2315 Whitney Avenue
Hamden, Connecticut 06518
Telephone: (203) 281-0810
TWX: 710-465-2096

591 North Avenue, Door 3
Wakefield, Massachusetts 01880
Telephone: (617) 246-1590
TWX: 710-348-6559

6 OSSMANN INSTRUMENTS, INC.

6666 Old Collamer Road
East Syracuse, New York 13057
Telephone: (315) 437-6666
TWX: 710-541-1523

1901 Vestal Parkway East
Vestal, New York 13850
Telephone: (607) 785-9947
TWX: 510-252-1987

474 Thurston Road
Rochester, New York 14619
Telephone: (716) 328-2230
TWX: None

7 PIVAN ENGINEERING CO.

3535 Peterson Avenue
Chicago, Illinois 60659
Telephone: (312) 539-4838
TWX: 910-221-0177

3307 North Highway 100
Minneapolis, Minnesota 55422
Telephone: (612) 537-4501
TWX: None

11734 Lackland Industrial Drive
St. Louis, Missouri 63141
Telephone: (314) 567-3636
TWX: 910-764-0839

5801 Outlook
Shawnee Mission, Kansas 66202
Telephone: (913) 722-1030
TWX: None

1259 West 86th Street
Indianapolis, Indiana 46260
Telephone: (317) 253-1681
TWX: 810-341-3308

3055 North Brookfield Road
Brookfield, Wisconsin 53005
Telephone: (414) 786-1940
TWX: None

8 PLS ASSOCIATES, INC.

7418 E. Princeton Avenue
Denver, Colorado 80237
Telephone: (303) 771-0140
TWX: None

4300 H Silver Avenue, S.E.
Albuquerque, New Mexico 87108
Telephone: (505) 255-2330
TWX: None

8702 E. Rancho Vista Dr.
Scottsdale, Arizona 85251
Telephone: (602) 957-9110
TWX: None

9 RADIONICS LIMITED

195 Graveline Street
Montreal, Quebec H4T IR6, Canada
Telephone: (514) 735-4565
Telex: 05-82758

2487 Kaladar Ave., Suite 206
Ottawa, Ontario K1V 8B9, Canada
Telephone: (613) 521-8251
TWX: None

RADIONICS LIMITED continued

1111 Finch Avenue West
Downsview, Ontario MJ5 2E5, Canada
Telephone: (416) 638-0218
Telex: 06-22144

2182 West 12th Avenue
Vancouver, B.C. V6K 2N4, Canada
Telephone: (604) 732-7317
Telex: 04-54573

P.O. Box 812
Winnipeg, Manitoba R3C 2N4,
Canada
Telephone: (204) 475-1732
TWX: None

10 SONCO, INC.

11141 Georgia Avenue, Suite 403
Wheaton, Maryland 20902
Telephone: (301) 942-9420
TWX: 710-824-0527

1777 Walton Road
Blue Bell, Pennsylvania 19422
Telephone: (215) 542-1490
TWX: None

11 TECHNICAL MARKETING ASSOC.

2460 Lemoine Avenue
Fort Lee, New Jersey 07024
Telephone: (201) 224-6911
TWX: 710-991-9710

12 WARD/DAVIS ASSOCIATES

16722 South Hawthorne Blvd.
Lawndale, California 90260
Telephone: (213) 542-7740
TWX: None

757 E. Evelyn Avenue
Sunnyvale, California 94086
Telephone: (408) 245-3700
TWX: None

8080 El Paseo Grande
La Jolla, California 92037
Telephone: (714) 459-3351
TWX: None

Listed above are Representatives for

DANA®

DANA LABORATORIES, INC.
2401 Campus Drive,
Irvine, California 92664
Telephone: (714) 833-1234
Teletype: 910-595-1136, Telex: 678-341

U.S. AND CANADIAN SERVICE CENTERS

FACTORY SERVICE LOCATIONS

A DANA LABORATORIES, INC.
2401 Campus Drive
Irvine, California 92664
Telephone: (714) 833-1234

B DANA NEW ENGLAND
591 North Ave., Door 3
Wakefield, Massachusetts 01880
Telephone: (617) 246-1590

AUTHORIZED SERVICE CENTERS

1 BALL BROTHERS RESEARCH CORP
P.O. Box 1062
Boulder Industrial Park
Boulder, Colorado 80302
Telephone: (303) 449-1546

2 DMA ENGINEERING SERVICES
14235 Proton Road
Dallas, Texas 75240
Telephone: (214) 661-0300

3 HONEYWELL, INC.
4501 West 160th Street
Cleveland, Ohio 44135
Telephone: (216) 433-4810

4 P.O. Box 27123
Detroit, Michigan 48227
Telephone: (313) 834-6020

HONEYWELL, INC. continued

5 600 East Dayton Drive
Fairborn, Ohio 45324
Telephone: (513) 878-2551

7 5558 Port Royal Road
Springfield, Virginia 22151
Telephone: (703) 321-8356

8 574 Springfield Avenue
Westfield, New Jersey 07090
Telephone: (201) 233-9200

9 NATIONAL CALIBRATION SERVICES
15 Sheer Plaza
Plainview, New York 11803
Telephone: (516) 694-5594

10 OSSMANN INSTRUMENTS, INC.
6666 Old Collamer Road
East Syracuse, New York 13057
Telephone: (315) 437-6666

11 PIVAN ENGINEERING COMPANY
3409 Church Street
Skokie, Illinois 60203
Telephone: (312) 679-7870

12 RADIONICS, LTD.
195 Graveline Street
Montreal, Quebec H4T 1R6
Canada
Telephone: (514) 735-4565

13 STAUS ENGINEERING
1900 Tyler Avenue, Unit 26
South El Monte, California 91733
Telephone: (213) 442-3634

14 VALLEY INSTRUMENT COMPANY
491 Clover Mill Road
Exton, Pennsylvania 19431
Telephone: (251) 363-2650

15 VIKING LABS, INC.
150 Wolfe Road
Sunnyvale, California 94086
Telephone: (408) 739-5900

7-75

DANA®

DANA LABORATORIES, INC.
2401 Campus Drive Irvine, California 92664
Telephone: (714) 833-1234 PRODUCT SERVICE TWX 910-595-1539

DANA® INTERNATIONAL REPRESENTATIVES AND SERVICE CENTERS

AUSTRALIA
Jacoby Mitchell & Co., (Pty) Ltd.
P.O. Box 2009
North Parramatta, N.S.W. 2151
Australia
Telephone: 630-7400
Telex: 21123 ACOB AA

AUSTRIA
International Engineering Services
Veitingergrasse 159-161
P.O. Box 30
1133 Vienna, Austria
Telephone: 0222-829366
Telex: 13075 VIENG-A

BELGIUM/LUXEMBOURG
M C R Electronics Marketing
64, Avenue Reine Astrid
B 1410 Waterloo, Belgium
Telephone: 02-241-4550
Telex: 23662 DANA B

DENMARK
Metric A/S
Skodsborgvej 305
DK 2850 Naerum, Denmark
Telephone: 01-804200
Telex: 15763 METRIC DK

EASTERN EUROPE
Amtest Associates, Ltd.
P.O. Box 55
Addlestone, Surrey, KT 15 1DU
England
Telephone: 0932-52121
Telex: 928855 AMTEST WEYBDGE

FINLAND
Finn Metric Oy
Ahertajantie 6 D
02101 Tapiola PL 6, Finland
Telephone: 90-460-844
Telex: 122018 TRIC SF

FRANCE
Dana Laboratories, SARL
91 Route des Gardes
92 Meudon-Bellevue, France
Telephone: 1027-2431
Telex: 20207 DANA FRA 20207F

GERMANY
Dana Laboratories, GmbH
Riedstrasse 8C
6100 Darmstadt, Germany
Telephone: 650546
Telex: 419644 DANA D

GREECE
American Technical Enterprises
Tositsa 7
P.O. Box 156
Athens 148, Greece
Telephone: 21/819470
Telex: 216046 ATE GR

HONG KONG
James Richard Engineering Ltd.
Kowloon Centre, 8th Floor
29-43 Ashley Road
Kowloon, Hong Kong
Telephone: 3-677043-7
Cables: RICHSERVE

INDIA
Trans Marketing Private Limited
Nyloc House
254 D 2, Dr. Annie Besant Road
Bombay 400 025, India
Telephone: 456231
Cables: LORDEX

IRAN
Salute Co., Ltd.
10 Jam Avenue
Shah Abas Avenue
Tehran, Iran
Telex: 212403 TABIRAN

ISRAEL
Racom Electronics Ltd.
P.O. Box 21120
60 Pinkas Street
Tel-Aviv 61210, Israel
Telephone: 443126
Telex: 33808 RACEL IL

ITALY
Elettronucleonica S.P.A.
Piazza de Angeli, 7
20146 Milan, Italy
Telephone: 39/2-4982451
Telex: 39033 NUCLEON

KUWAIT
Sa'id Al-Daham Trading & Contracting
P. O. Box 22302
Kuwait, Kuwait
Telephone: 414890
Cables: DECORHAM

NETHERLANDS
Simac Electronics B.V.
Eindhovenseweg 58
Steensel, Netherlands
Telephone: 04-970-2011
Telex: 51037 SIMAC NL

NEW ZEALAND
S.D. Mandeno Electronic Equipment Co.
10 Woodhall Road
Auckland 3, New Zealand
Telephone: 600-008
Cables: NUCLEONIC

NORWAY
Metric A.S.
P.B. 80, Bekkelagshogha
Oslo 11, Norway
Telephone: 02-282-624
Telex: 18461 METRC N

PORTUGAL
Magnetrom, SARL
Rua Fialho de Almeida 5-2 Dto.
Lisbon 1, Portugal
Telephone: 57-19-16
Cables: MAGNETROM

SINGAPORE
O'Connor's (Pte) Limited
O'Connor House
98, Pasir Panjang Road
Singapore 5
Telephone: 637944
Telex: 21023 OCONSIN RS21023

SOUTH AFRICA
Associated Electronics, Ltd.
P.O. Box 31094, Braamfontein
Johannesburg, South Africa
Telephone: 724-5395
Telex: 88432 SA

SPAIN
Anadig Ingenieros
Amado Nervo, 3
Madrid 7, Spain
Telephone: 252-3722
Telex: 43104 ADIG E

SWEDEN
Saven AB
Strandgatan 3
18500 Vaxholm, Sweden
Telephone: 764-31580
Telex: 11309 SAVENIC S

SWITZERLAND
Stolz AG
Junkholz 333
8968 Mutschellen, Switzerland
Telephone: 41/57-54655
Telex: 54070 STOAG CH

UNITED KINGDOM
Dana Electronics, Limited
Collingdon Street
Luton, Bedfordshire, England
Telephone: 0582-24236
Telex: 82430 DANA LABS LUTON

YUGOSLAVIA
Belram Electronics S.A.
Avenue des Mimosas 83
1150 Brussels, Belgium
Telephone: 02-734.26.19
Telex: 21790 BELRAM B

www.manualsplus.com
1013970